



- b. Disconnect the connectors (arrow) from combination light adjust switch panel, and remove the combination light adjust switch panel.

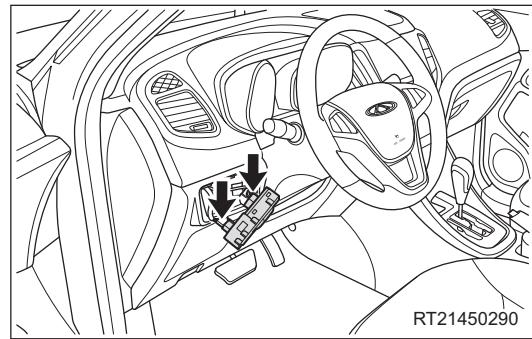

8. Remove the fuse box cover.


- a. Using a screwdriver wrapped with protective tape, pry up the claws on fuse box cover, and remove the fuse box cover.

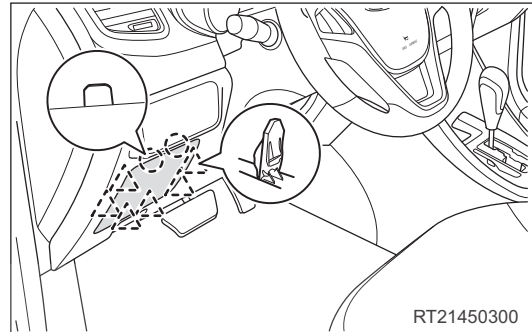

9. Remove the front door opening weatherstrip (See page 49-14).

10. Remove the instrument panel left end panel assembly (take left side as an example).

- a. Using a screwdriver wrapped with protective tape, pry up the claws on instrument panel left end panel assembly, and remove the instrument panel left end panel assembly.

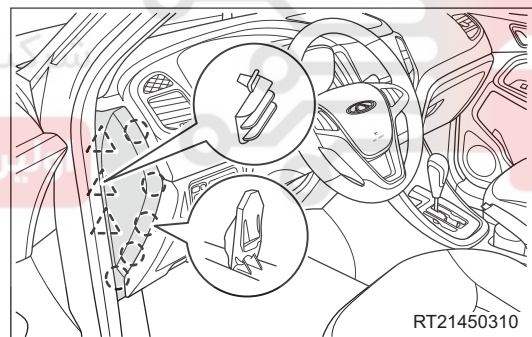

11. Remove the auxiliary fascia console assembly (See page 45-9).

12. Remove the front doorsill pressure plate assembly (See page 49-11).

13. Remove the A-pillar lower protector assembly (See page 49-19).

14. Remove the hood grip assembly (See page 47-19).

15. Remove the instrument panel lower left protector assembly.

- a. Remove 3 fixing screws (arrow) from instrument panel lower left protector assembly.  
(Tightening torque:  $2 \pm 0.5$  N·m)

