


I. Air outlet grille

(1) Special tool (none)


(2) Disassembly

1. open and support tail door
2. Remove the Rear bumper assembly See the rear bumper body assembly
3. Disassemble air exhaust grille
 - 1). Pry the joint of the air outlet grille and the body sheet metal.
 - 2). Remove air outlet grille

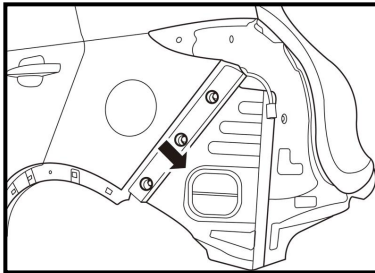

(3) Assembly

1. Install air exhaust grille
 - 1). Install the air outlet grille and clamp it firmly.
2. Install rear bumper assembly
3. Close the tail door

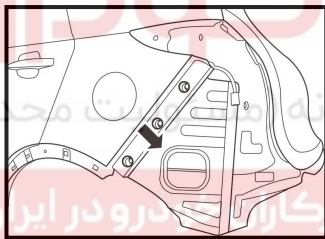


II. Luggage compartment cover curtain

(1) Special tool (none)

(2) Disassembly

1. Open the tail door
2. Remove the luggage compartment cover curtain from the C-pillar trim panel and then take it out from the tail door.

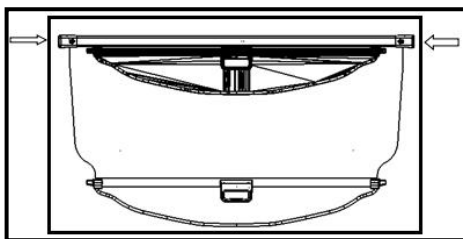

(3) Assembly

1. Install the luggage compartment cover curtain

Put the luggage compartment cover curtain in, and then connect to the slot of the C-pillar trim panel

Close the tail door


2.

III. Luggage compartment spare tire cover

(1) Special tool (none)

(2) Disassembly

1. Open the tail door
2. Remove the rotation axis of the luggage compartment spare tire cover connecting on the C-pillar trim panel, and then take it out from the tail door.

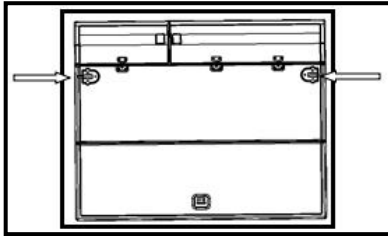

(3) Assembly


1. Install the luggage compartment spare tire cover
 2. Close the tail door
- Connect the luggage compartment spare tire cover to the slot of the C-pillar trim panel

IV. Luggage compartment tool box

(1) Special tool (none)

(2) Disassembly

1. Open the tail door
2. Open the luggage compartment tool box cover, take out the tool box assembly in the luggage compartment tool box
3. Use the flat screwdriver to open the self-tapping screw and the spare tire fixing bolt cap in the luggage compartment tool box
4. Use the cross screwdriver to loosen the 3 self-tapping screws in the luggage compartment tool box, and take out the tool box from the luggage compartment, and take out from the tail door

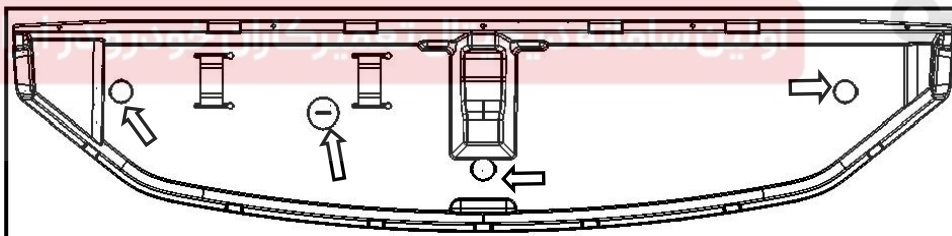

(3) installation


1. Install the luggage compartment tool box
 2. Close the tail door
- 1) Place the luggage compartment too box between the C-pillar low guard panel, and ensure the installation hole of the luggage compartment tool box align to the vehicle body installation hole
- 2) Use flat screwdriver to install the 3 self-tapping screws in the too box in order
- 3) Connect the self-tapping screw installation cover and spare tire fixing bolt cover in order

V. Roof assembly

(1) Special tool (none)

(2) Disassembly

1. Open the engine compartment cover
 2. Disconnect the battery negative cable
 3. Dismantle the A pillar top panel assembly refer to the A pillar top panel assembly
 4. Remove B column lower guard assembly See B column lower guard assembly
 5. Dismantle the B pillar up panel assembly refer to the B pillar up panel assembly
 6. Remove C column lower guard assembly See C column lower guard assembly
 7. Remove C column lower guard assembly See C column lower guard assembly
 8. Remove D column lower guard panel assembly See D column lower guard panel assembly
 9. Remove D Column Upper Guard Assembly See D Column Upper Guard Assembly
 10. Remove the sun visor See the sun visor
 11. Dismantle upper handle assembly refer to upper handle assembly
 12. Disassemble the front roof light assembly See the front roof light assembly
 13. Remove side wall lamp assembly See the side wall lamp assembly
 14. Remove the mashroom buckle of the roof and the sunroof
 15. Remove the roof assembly
- 1). Remove the fixing buckles of the roof, and take out the roof.

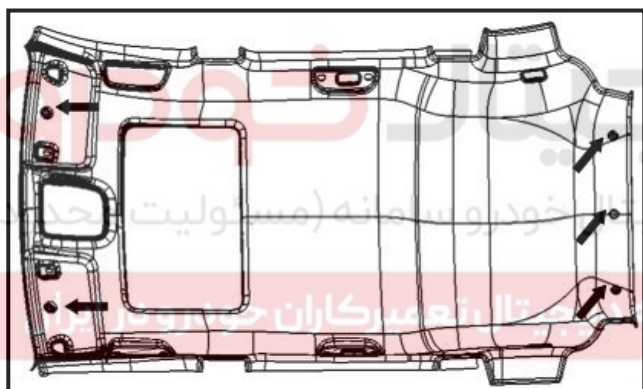


(3) Assembly

△Notice Do not bend the ceiling too much while installing.

△Notice When the roof is installed, the sunshade plate hole of the roof and the back row buckle fixed hole should be aligned with the corresponding holes on the body and then reinstalled.

1. Install ceiling assembly
- 1). Move the ceiling into the car and align the top right front clip installation hole with the body hole position and install the other fixed buckles.
2. Install the mashroom buckle of the roof and the sunroof
3. Install the sun visor
4. Install the ceiling handle
5. Install the A column upper guard board
6. Install the B column upper guard board and the B column lower guard board
7. Install the C pillar upper guard board and the C column lower guard board
8. Install the D column upper guard board and the D column lower guard board
9. Install the front dome light
10. Install the side roof lamp

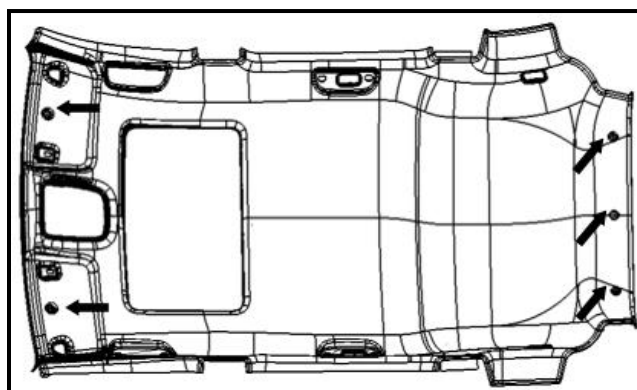

VI. Sun visor


(None)

(1) Special tools

(2) Disassembly

1. Disassemble sun visor

1) . Remove the 4 screws fixing the sun visor and roof, and take down the sun visor.

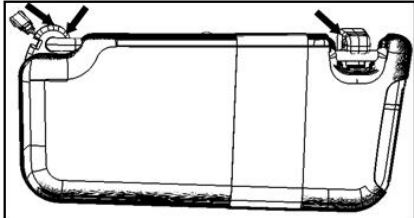


(3) Assembly

1. Install sun visor

1). Place the sun visor at the installation position, install the 4 fixing screws.

Tightening torque 3~4N·m

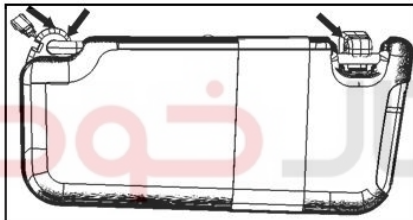

VII. Top handle assembly


(1) Special tool (none)

(2) Disassembly

1. Disassemble top handle assembly

1). Before prying the top handle assembly, fix the screw cap on the rear side and remove the front and rear retaining screws of the top handle assembly.

2). Remove top handle assembly.

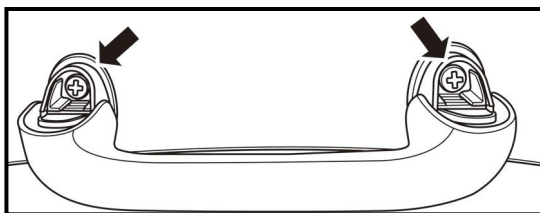


(3). assembly

1. Install top handle assembly

1) . Before tightening the top handle assembly, fix the screw on the rear side and clip the screw cap.

Tightening torque 3~4N·m

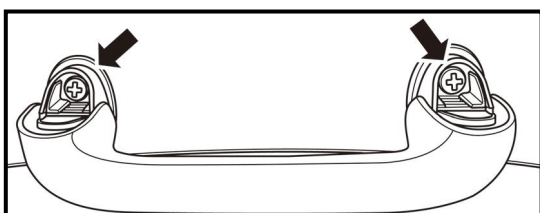

VIII. Single Sunroof Assembly

(1) Special tool (none)

(2) Disassembly

1. Open the engine cover

2. Disconnect the negative port of the battery

Dismantle the A pillar top panel assembly refer to the A pillar top panel assembly

.Remove B column lower guard assembly See B column lower guard assembly

5. Dismantle the B pillar up panel assembly refer to the B pillar up panel assembly

6. Remove C column lower guard assembly See C column lower guard assembly

7. Remove C column upper guard assembly See C column upper guard assembly

8. Remove D column lower guard panel assembly See D column lower guard panel assembly

Remove D Column Upper Guard Assembly See D Column Upper Guard Assembly

10. Disassemble sun visor see sun visor



11. Dismantle upper handle assembly refer to upper handle assembly

12. Dismantle the front roof lamp. Refer to the front roof lamp

13. Remove side wall lamp assembly See the side wall lamp assembly

14. Dismantle the roof assembly . Refer to the "roof assembly".


15. Dismantle the single sunroof assembly

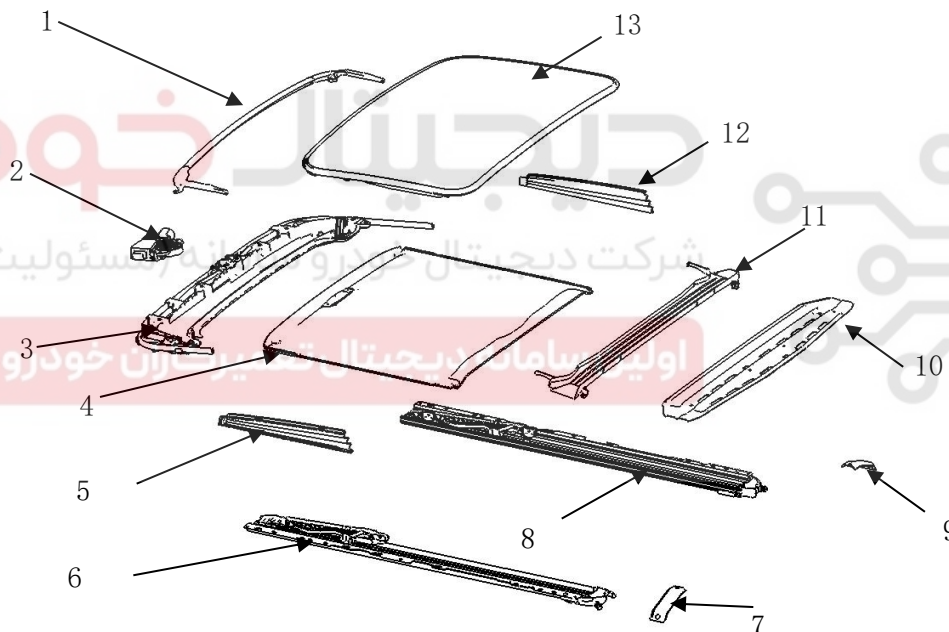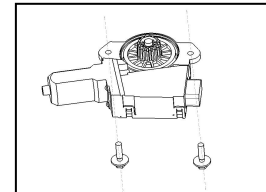

1. Windshield assembly; 2. Motor assembly; 3. Front beam; 4. Sun visor assembly; 5. Slide rails - left; 6. Slide assembly - left; 7. Rear bracket - left; 8. Slide assembly - right; 9. rear bracket - right; 10. middle beam; 11. water guide; 12. slide rail - right; 13. glass assembly

8.1.1 Glass disassembly and assembly

- ① Remove the left and right rail rails
- ② Remove the glass fixing screw
- ③ Lift the glass up to remove the glass

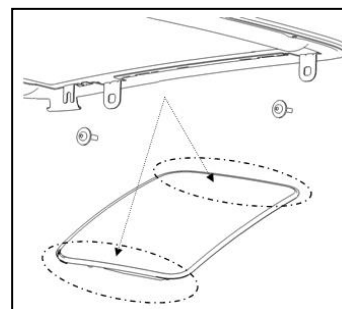

8.1.2 Motor disassembly and assembly


Check if the position of the glass is closed before removing the motor

Air exhaust barrier

6-15

- ① Remove the front dome module
- ② Separate motor connection plug-in
- ③ Unscrew the screw and remove the motor


8.1.3 Windshield disassembly and assembly

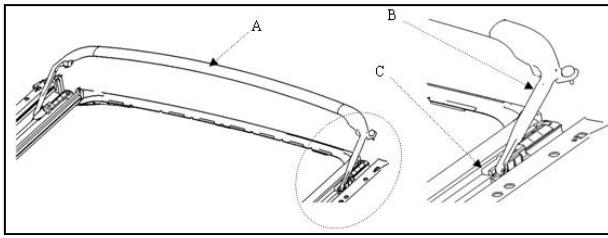

- ① fully open the skylight glass
- ② Separate the windshield link (B) from the frame (C), and then remove the windshield (A)

8.2 Replacement of sunroof assembly

Note: Wear gloves to protect your hands and do not scratch other parts during disassembly.

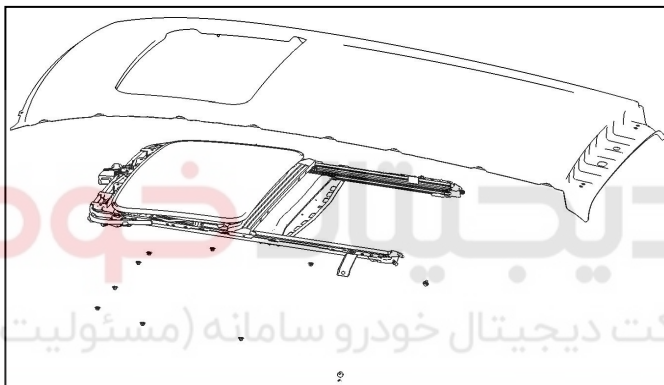

- ① Unplug the sunroof water outlet pipe,
- ② Removal sunroof fixing nut and bolt, nut and bolt disassembly torque: $4\text{N}\cdot\text{m} \pm 0.5\text{N}\cdot\text{m}$.

(3) Assembly

1. Pre-install the sunroof assembly to the roof vehicle body, and ensure to align to the weld stud bolt hole on the vehicle body
2. Install the fixing nuts of the sunroof in order, tightening torque (3~4) N·m
3. Install the fixing bolts on the sunroof installing bracket and sunroof, tightening torque (3~4) N·m
4. Install the left and right slide rail trim strip
5. Install the roof assembly
6. Install the sunroof assembly
7. Install the top armrest assembly
8. Install the top lamp assembly
9. Install the A-pillar trim panel
10. Install the B-pillar trim panel
11. Install the C-pillar trim panel
12. Install the D-pillar trim panel

IX. Panoramic Sunroof Assembly

(1) Special tool (none)

(2) Disassembly

1. Open the engine cover
2. Disconnect the negative port of the battery
3. Dismantle the A pillar top panel assembly refer to the A pillar top panel assembly
4. Remove B column lower guard assembly See B column lower guard assembly

9.1.1 Glass disassembly and assembly refer to the B pillar up panel assembly

6. Remove C column lower guard assembly See C column lower guard assembly

7. Remove C column upper guard assembly See C column upper guard assembly

8. Remove D column lower guard panel assembly See D column lower guard panel assembly

Remove D Column Upper Guard Assembly See D Column Upper Guard Assembly

10. Disassemble sun visor see sun visor



11. Dismantle upper handle assembly refer to upper handle assembly

12. Dismantle the front roof lamp. Refer to the front roof lamp

13. Remove side wall lamp assembly See the side wall lamp assembly

14. Dismantle the roof assembly . Refer to the "roof assembly".

15. Dismantle the panoramic sunroof assembly

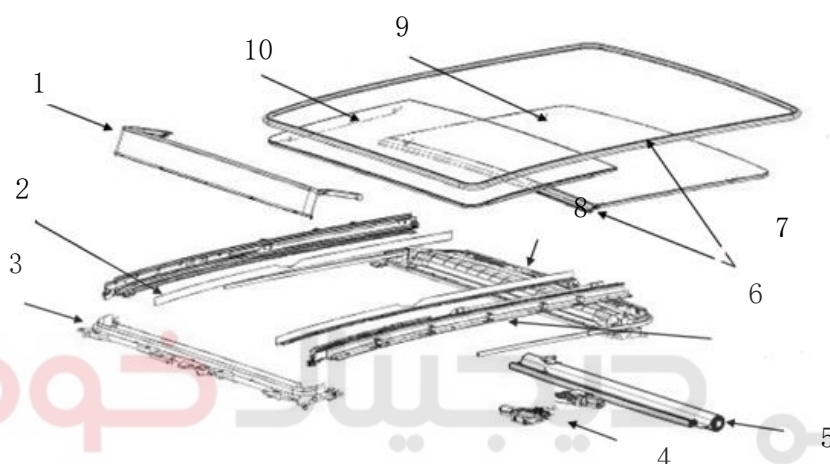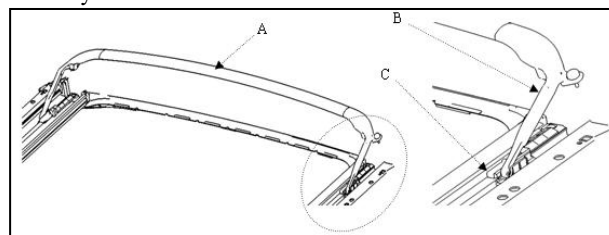

1. Wind baffle assembly; 2. Baffle trim strip; 3. Front pillar; 4. Motor assembly; 5. Sunvisor curtain; 6. Aluminum slide track; 7. Rubber strip; 8. Rear pillar; 9. Rear glass; 10. Front glass


9.1.1 Glass disassembly and assembly

- ① Remove the left and right rail rails
- ② Remove the glass fixing screw
- ③ Lift the glass up to remove the glass


9.1.2 Motor disassembly and assembly

Check if the position of the glass is closed before removing the motor

- ① Remove the front dome module
- ② separate motor connection plug-in
- ③ Unscrew the screw and remove the motor

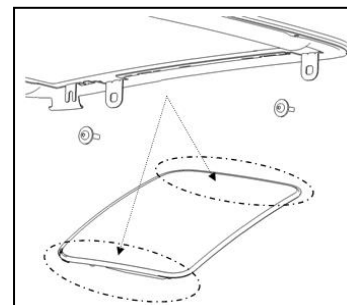


9.1.3 Wind baffle disassembly and assembly

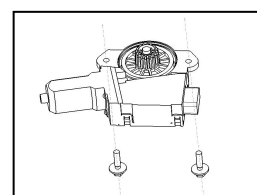

① fully open the skylight glass

② Separate the wind baffle connecting rod (B) from the frame (C), and pry the connecting structure from the front pillar, remove the wind baffle cover (A)


9.1.4 Rubber strip disassembly and assembly

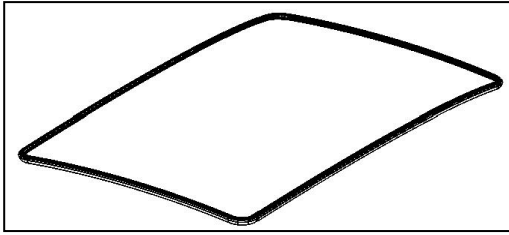

① fully open the skylight glass

② Remove the rubber strip in order from the aluminum track and front/rear pillar

Note: Wear gloves to protect your hands and do not scratch other parts during disassembly.

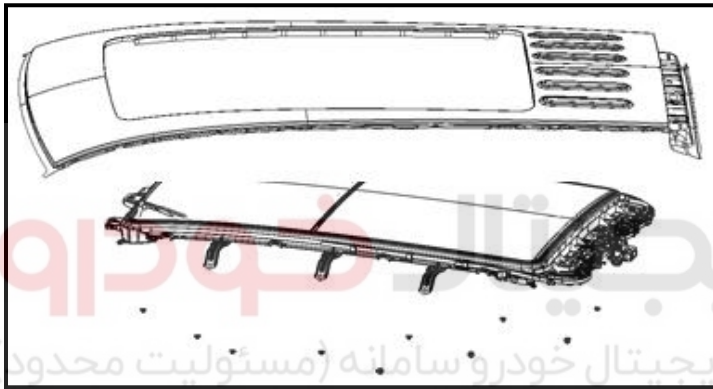

① Unplug the sunroof water outlet pipe,

② Removal sunroof fixing nut and bolt, nut and bolt disassembly torque: $4\text{N}\cdot\text{m} \pm 0.5\text{N}\cdot\text{m}$.

(3) installation

1. Pre-install the sunroof assembly to the roof vehicle body, and ensure to align to the weld stud bolt hole on the vehicle body

2. Install the fixing nuts of the sunroof in order, tightening torque (3~4) N·m
fixing bolts on the sunroof installing bracket and sunroof, tightening torque (3~4) N·m
the left and right slide rail trim strip

7. Install the top armrest assembly trim panel

12. Install the D-pillar trim panel

5. Install the roof assembly

10. Install the B-pillar trim panel

8. Install the top lamp assembly

11. Install the C-pillar trim panel

3. Install the

4. Install

6. Install the sunroof assembly


9. Install the A-pillar

A. Carpet assembly

(1) Special tool (none)

(2) Disassembly

1. Remove the auxiliary dashboard body assembly refer to auxiliary dashboard body assembly
2. Disassemble carpet assembly.
 - 1). Disassemble 4 fixed buckles on the carpet.
 - 2). Remove the nylon clip on the back of the front of the carpet and the nylon clip attached to the front enclosure and remove the carpet.

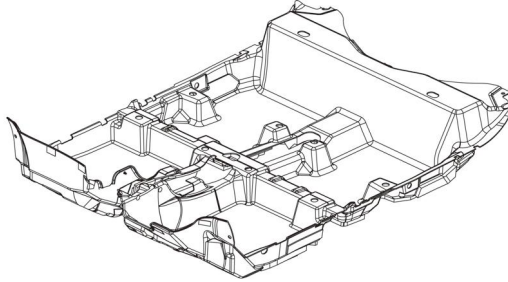

(3). assembly

1. Install the carpet assembly
 - 1). Move the carpet into the car and lay out the corresponding seat installation holes for the positive hole position.
 - 2). Pull out the seat wiring harness under the carpet and compacted the carpets of the sub dashboard and fasten the carpets with the buckles.
 - 3). Install the nylon fastener on the front and back of the carpet and the nylon fastener attached to the front enclosure pad.
2. Install sub-dashboard body assembly
3. Install C pillar lower guard assembly
4. Install B pillar lower guard assembly
5. Install A pillar bottom guard assembly
6. Install the front door sill trim strip
7. Install the rear door sill trim strip
8. Install the front row seats assembly
9. Install rear row seat backrest assembly
10. Connect the battery negative cable.
11. Close the engine cover

