


Instrument Cluster

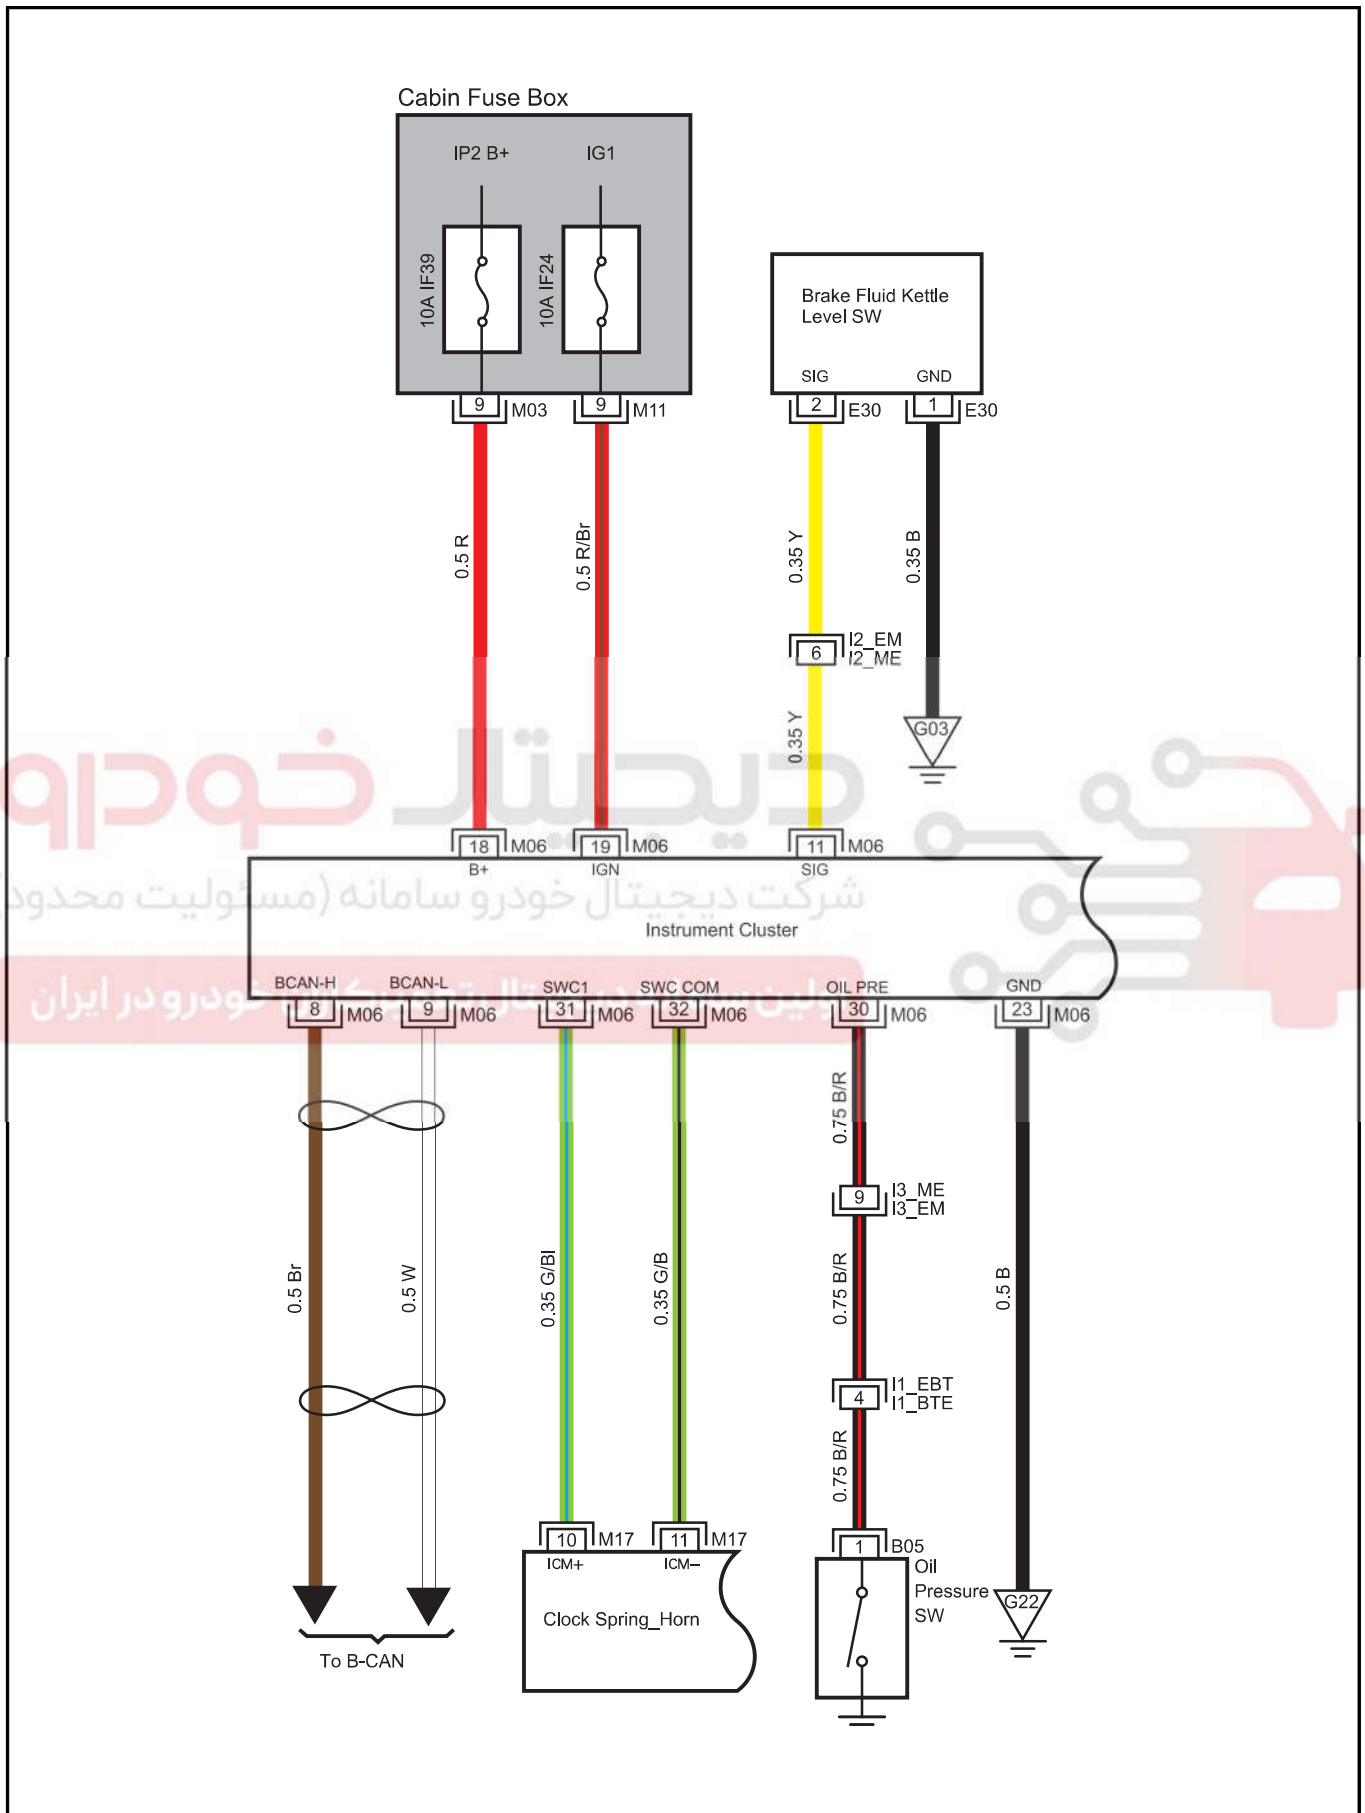


Connector	Name	Page
B05	Oil Pressure SW	14
E30	Brake Fluid Kettle Level SW	17
M03	Cabin Fuse Box N	20
M06	Instrument Cluster	20
M11	Cabin Fuse Box J	20
M17	Clock Spring_Horn	20
G03	Engine W.H. GND 3(terminal 1)	40
G22	Main W.H. GND 3(terminal 1)	41
I1_BTE	Battery W.H. Connector 1 to Engine W.H.	14
I1_EBT	Engine W.H. Connector 1 to Battery W.H.	16
I2_EM	Engine W.H. Connector 2 Connecting Main W.H.	16
I2_ME	Main W.H. Connector 2 Connecting Engine W.H.	21
I3_EM	Engine W.H. Connector 3 Connecting Main W.H.	16
I3_ME	Main W.H. Connector 3 Connecting Engine W.H.	21


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

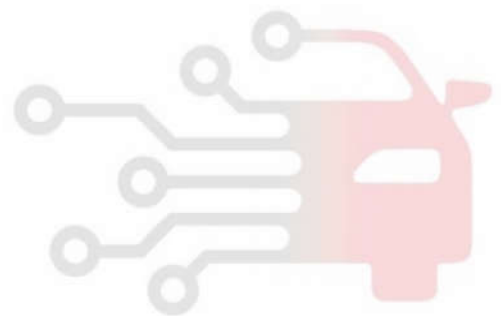


M03 Cabin Fuse BoxN

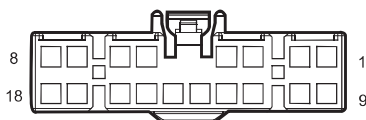


M11 Cabin Fuse Box J

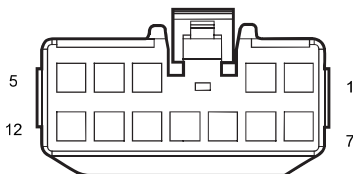


M06 Instrument Cluster

 


E30 Brake Fluid Kettle Level SW

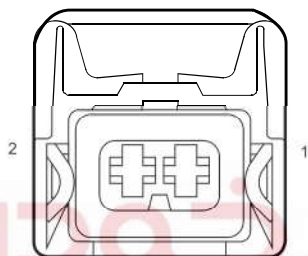


I2_ME Main W.H. Connector 2 Connecting Engine W.H.

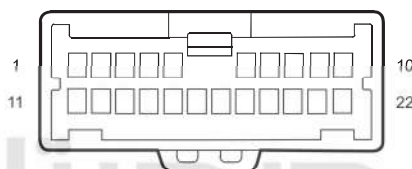


I3_ME Main W.H. Connector 3 Connecting Engine W.H.

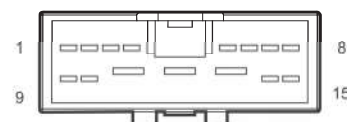


I2_EM Engine W.H. Connector 2 Connecting Main W.H.

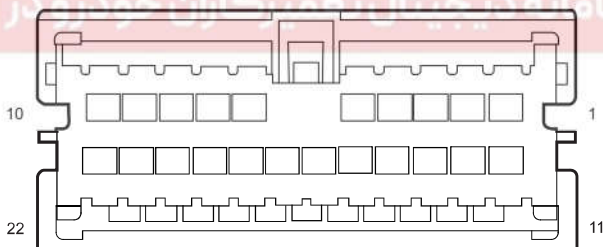

 
I3_EM Engine W.H. Connector 3 Connecting Main W.H.




I1_EBT Engine W.H. Connector 1 to Battery W.H.

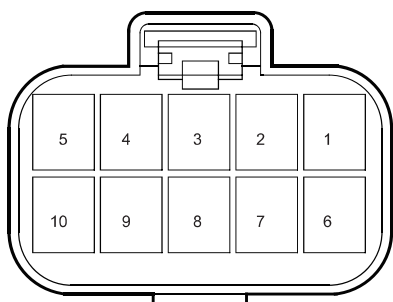


I1_BTE Battery W.H. Connector 1 to Engine W.H.

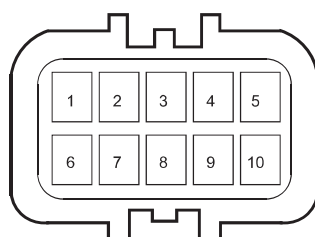

M17 Clock Spring_Horn

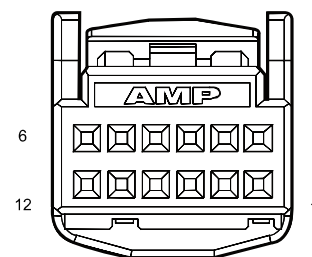


B05 Oil Pressure SW

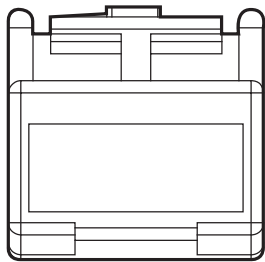

G03 Engine W.H. GND 3 (terminal1)



G22 Main W.H. GND 3 (terminal 1)

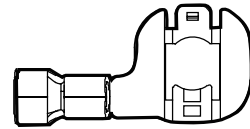

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

