


Seat Belt Fastened Information

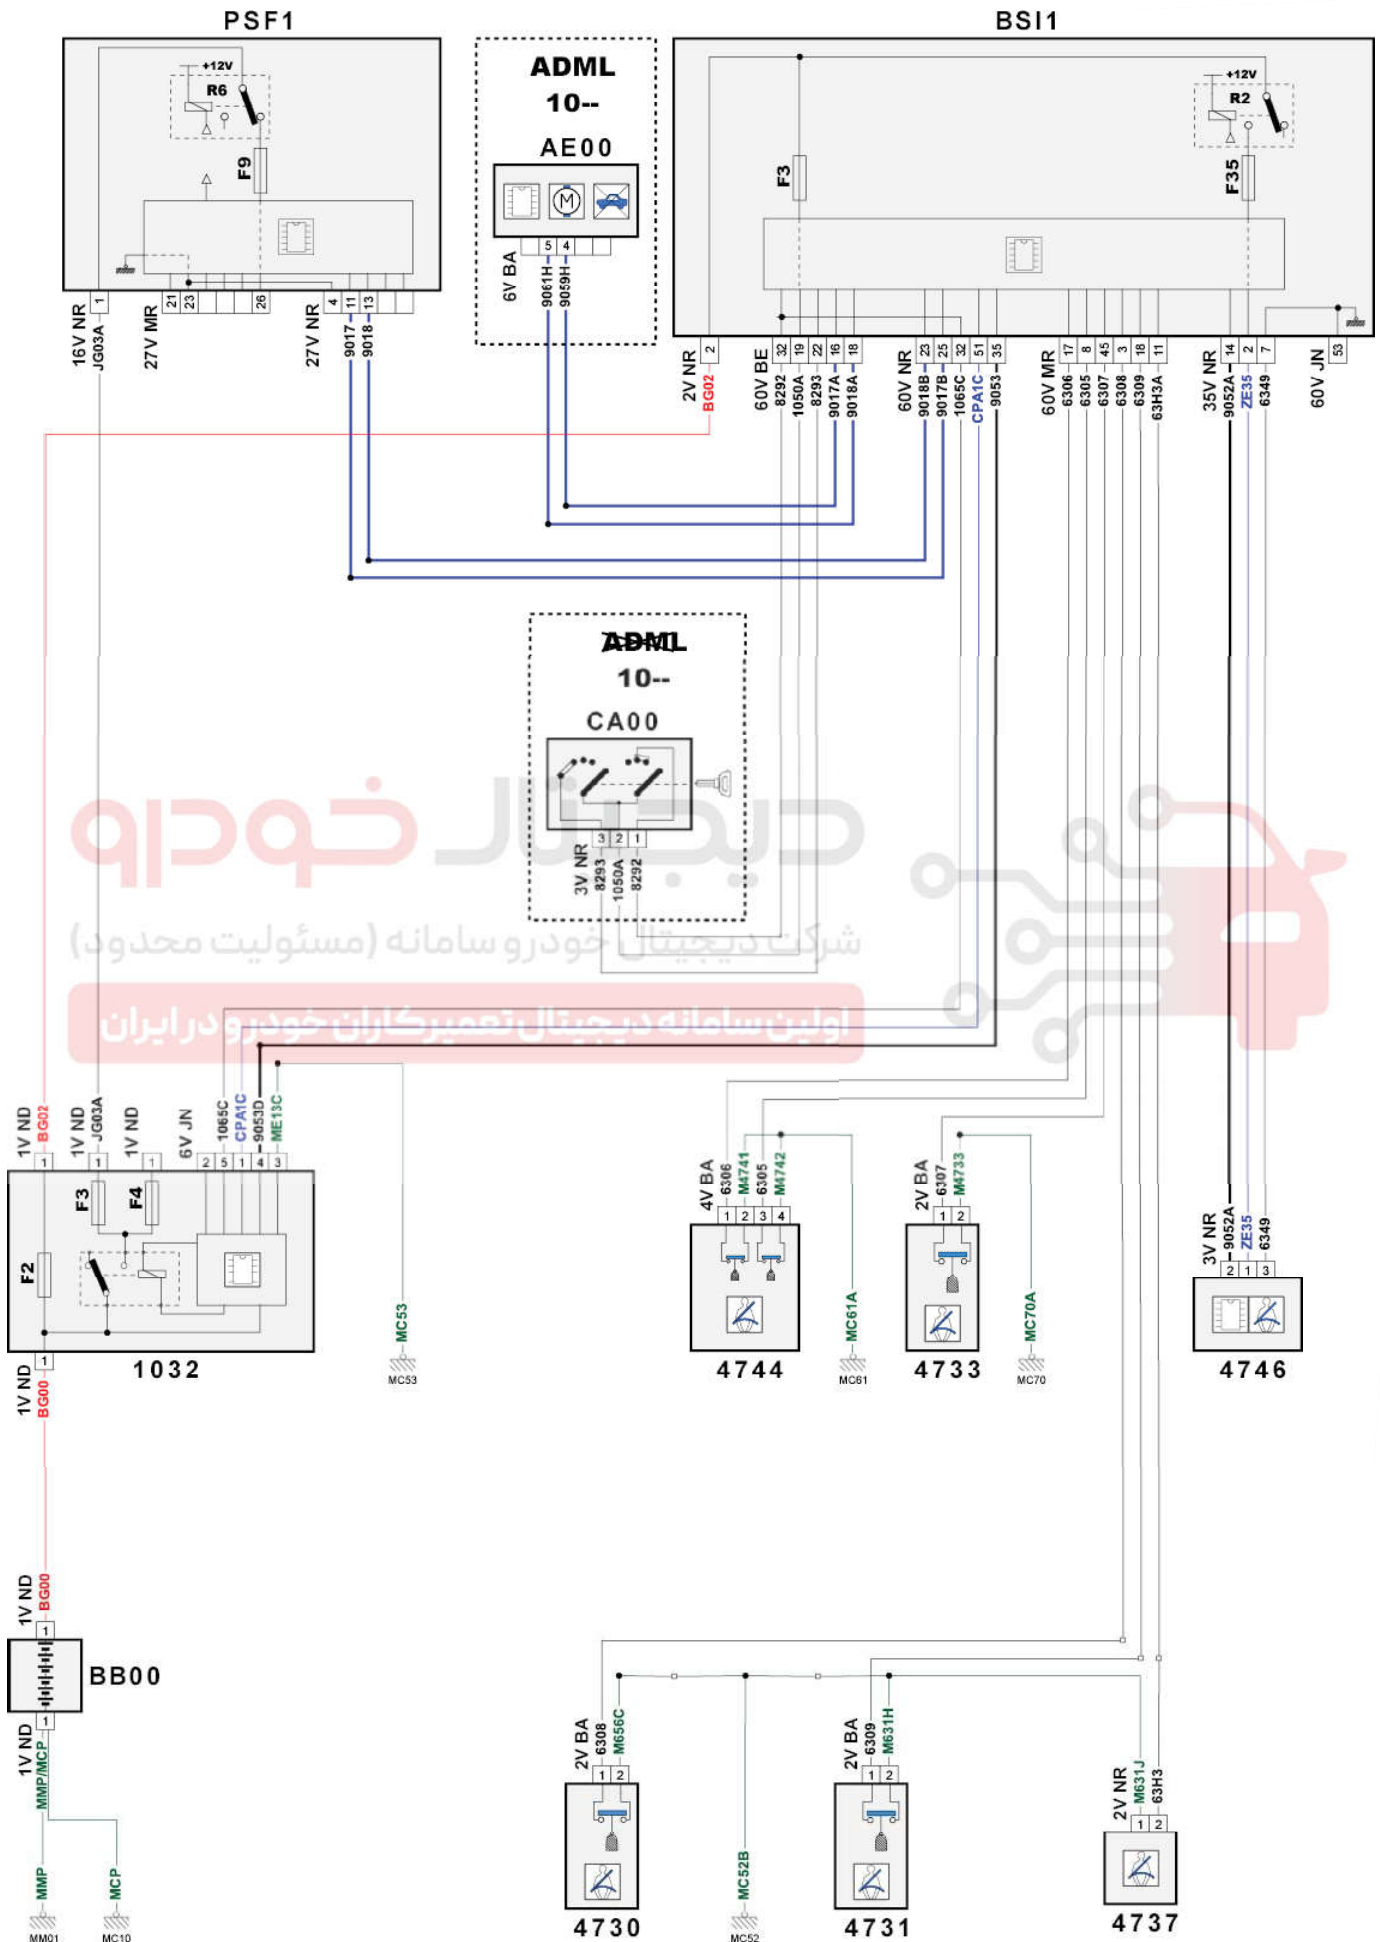

دیجیال خودرو
 شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
 اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

Seat Belt Fastened Information

item code	description	information
1032	null	electrical supplies protection and management unit
4730	null	driver's seat belt switch
4731	null	passenger's seat belt switch
4733	null	rear RH seat belt switch
4737	null	driver or front passenger presence detection pad
4744	null	rear central and rear left seat belt switches
4746	null	seat belts not fastened warning lamp control unit
AE00	null	electric steering lock
BB00	null	ancillaries battery
BSI1	null	built-in systems interface
CA00	null	ignition switch
E917	null	crimp one information (or equipotential 917) wire
E917A	null	crimp one information (or equipotential 917A) wire
E918	null	crimp one information (or equipotential 918) wire
E918A	null	crimp one information (or equipotential 918A) wire
E953	null	crimp one information (or equipotential 953) wire
EM52B	null	crimp earth (earth point number 52B)
EM53	null	crimp earth (earth point number 53)
EM61B	null	crimp earth (earth point number 61B)
EM65A	null	crimp earth (earth point number 65A)
EM65B	null	crimp earth (earth point number 65B)
EM70A	null	crimp earth (earth point number 70A)
MC10	null	body earth point number 10
MC52B	null	body earth point number 52B
MC53B	null	body earth point number 53B
MC61B	null	body earth point number 61B
MC70A	null	body earth point number 70A
MM01	null	engine earth point number 01
PSF1	null	engine compartment connection board-fuse box

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران