




Circuit Diagram

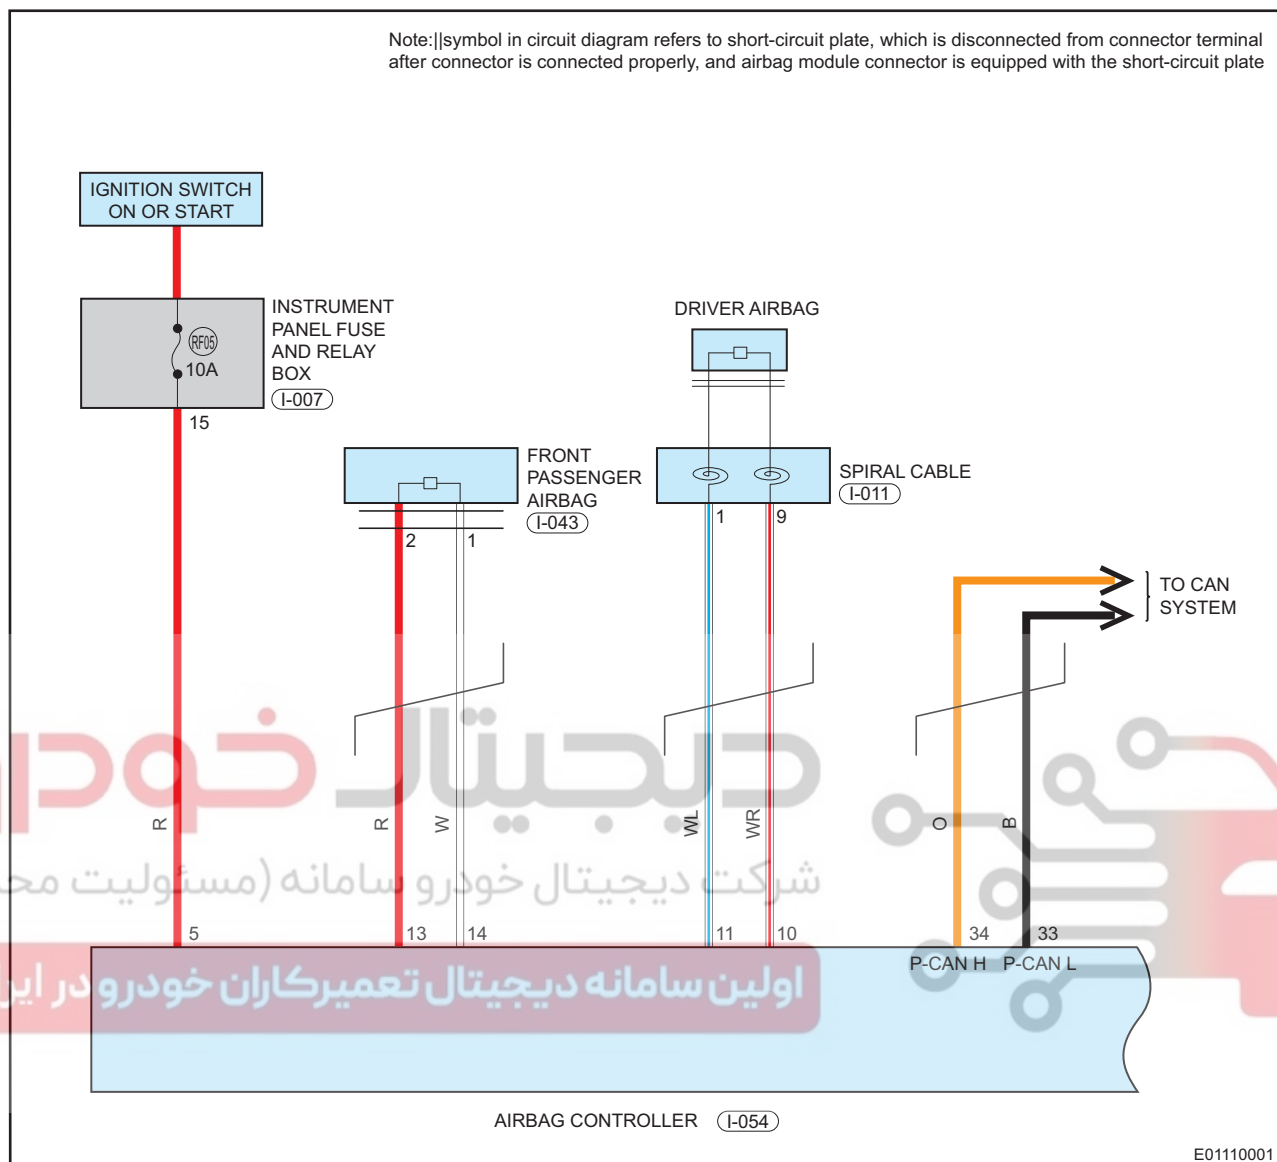

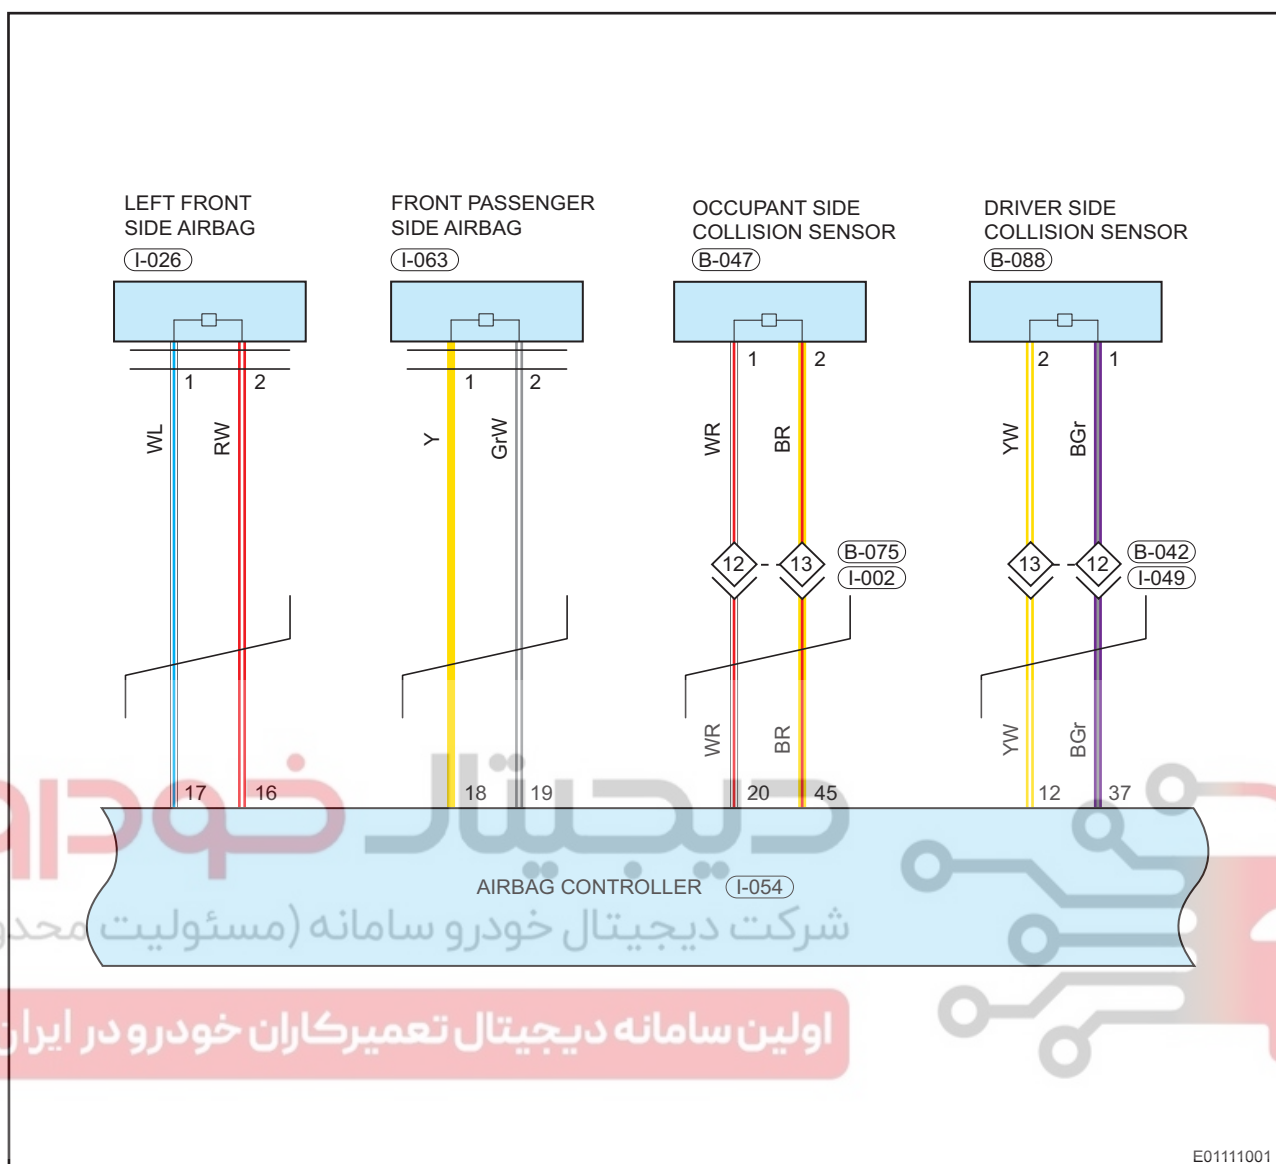

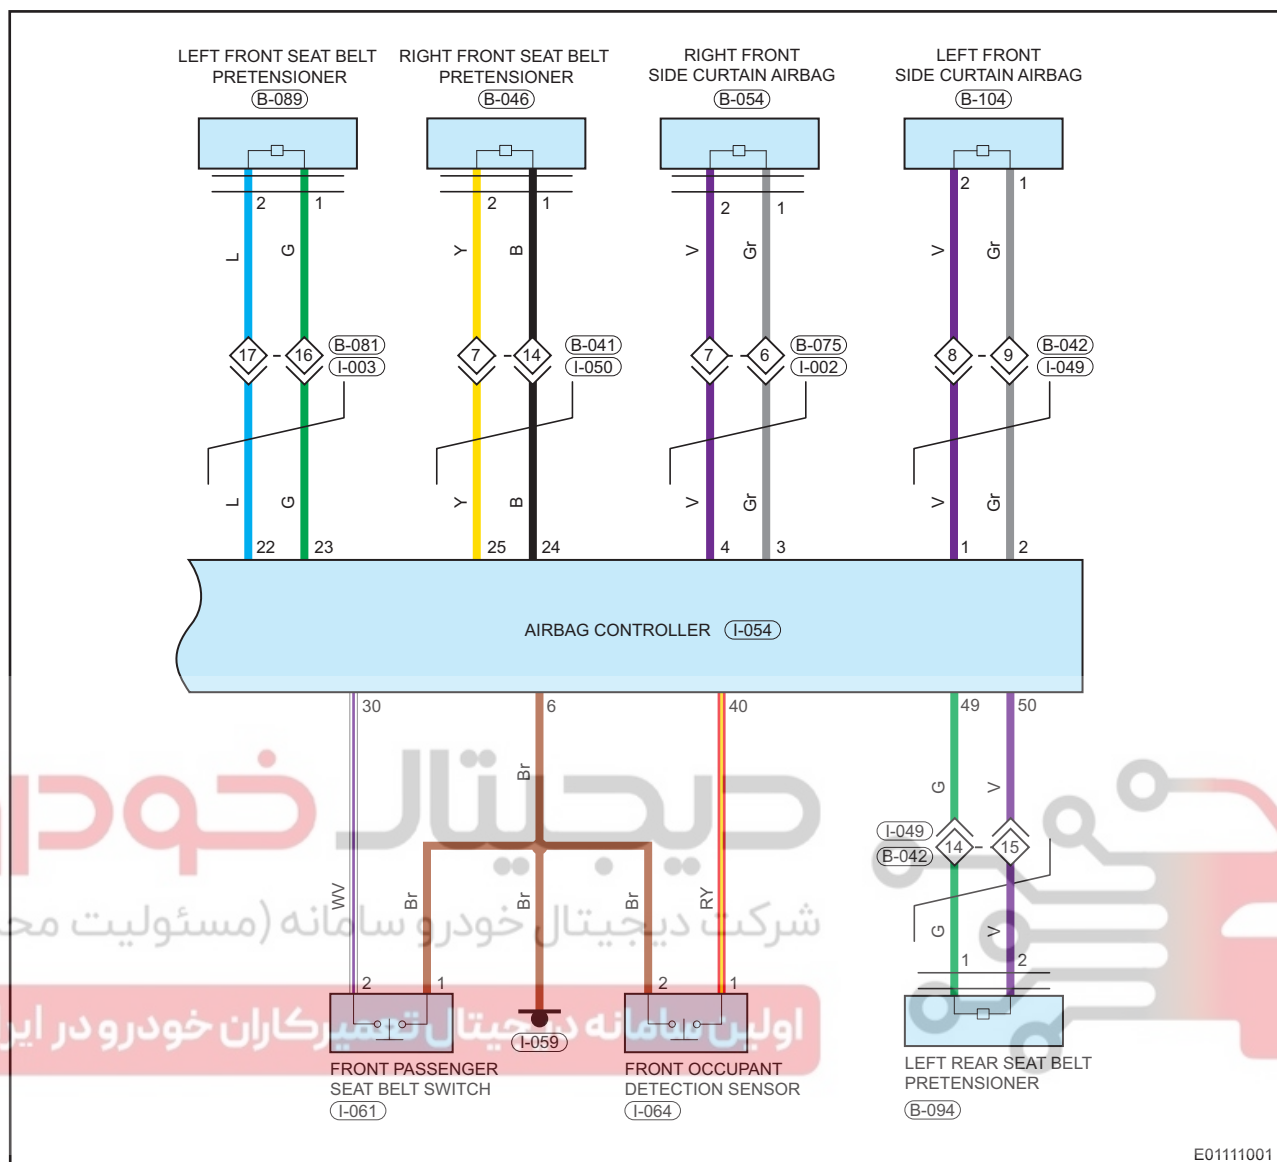

Diagnostic Trouble Code (DTC) Chart

DTC	DTC Definition
B0001-11	Driver Frontal Airbag Deployment Control
B0001-12	Driver Frontal Airbag Deployment Control
B0001-1A	Driver Frontal Airbag Deployment Control
B0001-1B	Driver Frontal Airbag Deployment Control
B0010-11	Passenger Frontal Airbag Deployment Control
B0010-12	Passenger Frontal Airbag Deployment Control
B0010-1A	Passenger Frontal Airbag Deployment Control
B0010-1B	Passenger Frontal Airbag Deployment Control
B0020-11	Left Side Airbag Deployment Control
B0020-12	Left Side Airbag Deployment Control
B0020-1A	Left Side Airbag Deployment Control
B0020-1B	Left Side Airbag Deployment Control
B0028-11	Right Side Airbag Deployment Control
B0028-12	Right Side Airbag Deployment Control
B0028-1A	Right Side Airbag Deployment Control
B0028-1B	Right Side Airbag Deployment Control
B0021-11	Left Curtain Deployment Control
B0021-12	Left Curtain Deployment Control
B0021-1A	Left Curtain Deployment Control
B0021-1B	Left Curtain Deployment Control
B0029-11	Right Curtain Deployment Control
B0029-12	Right Curtain Deployment Control
B0029-1A	Right Curtain Deployment Control
B0029-1B	Right Curtain Deployment Control
B1285-11	Front Row Left Seatbelt Pretensioner Deployment Control
B1285-12	Front Row Left Seatbelt Pretensioner Deployment Control
B1285-1A	Front Row Left Seatbelt Pretensioner Deployment Control
B1285-1B	Front Row Left Seatbelt Pretensioner Deployment Control
B1286-11	Front Row Right Seatbelt Pretensioner Deployment Control
B1286-12	Front Row Right Seatbelt Pretensioner Deployment Control
B1286-1A	Front Row Right Seatbelt Pretensioner Deployment Control
B1286-1B	Front Row Right Seatbelt Pretensioner Deployment Control
B0073-11	Second Row Left Seatbelt Pretensioner Deployment Control
B0073-12	Second Row Left Seatbelt Pretensioner Deployment Control
B0073-1A	Second Row Left Seatbelt Pretensioner Deployment Control
B0073-1B	Second Row Left Seatbelt Pretensioner Deployment Control
B1217-95	Squib Invalid Configuration (Pin31, Pin32)
B121D-95	Squib Invalid Configuration (Pin16, Pin17)
B121E-95	Squib Invalid Configuration (Pin18, Pin19)
B00C7-95	Passenger Presence Detection Switch
B1233-95	Passenger Buckle Switch (Config Data Invalid)
B0091-12	Left Side Restraints Sensor
B0091-13	Left Side Restraints Sensor
B0091-16	Left Side Restraints Sensor
B0091-96	Left Side Restraints Sensor
B0091-91	Left Side Restraints Sensor
B0091-86	Left Side Restraints Sensor

DTC	DTC Definition
B0091-95	Left Side Restraints Sensor
B0096-12	Right Side Restraints Sensor
B0096-13	Right Side Restraints Sensor
B0096-16	Right Side Restraints Sensor
B0096-96	Right Side Restraints Sensor
B0096-91	Right Side Restraints Sensor
B0096-86	Right Side Restraints Sensor
B0096-95	Right Side Restraints Sensor
B1250-16	Power Supply
B1250-17	Power Supply
B1215-00	Squib Cross Coupling Error
B1230-79	Satellite Cross Link
B1240-00	ICM Airbag Lamp Failed
U0140-87	Lost Communication With Body Control Module
U0129-87	Lost Communication With Brake System Control Module
B120F-48	This Fault is Invalid and shall not Occurred
B1251-00	ECU Internal Error
B1271-47	Crash Belt Pretensioners
B1272-47	Crash Left Side
B1273-47	Crash Right Side
B1216-00	Crash Front
B127F-47	Crash Recording Locked

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران