


Front Fog Light

Service Hints

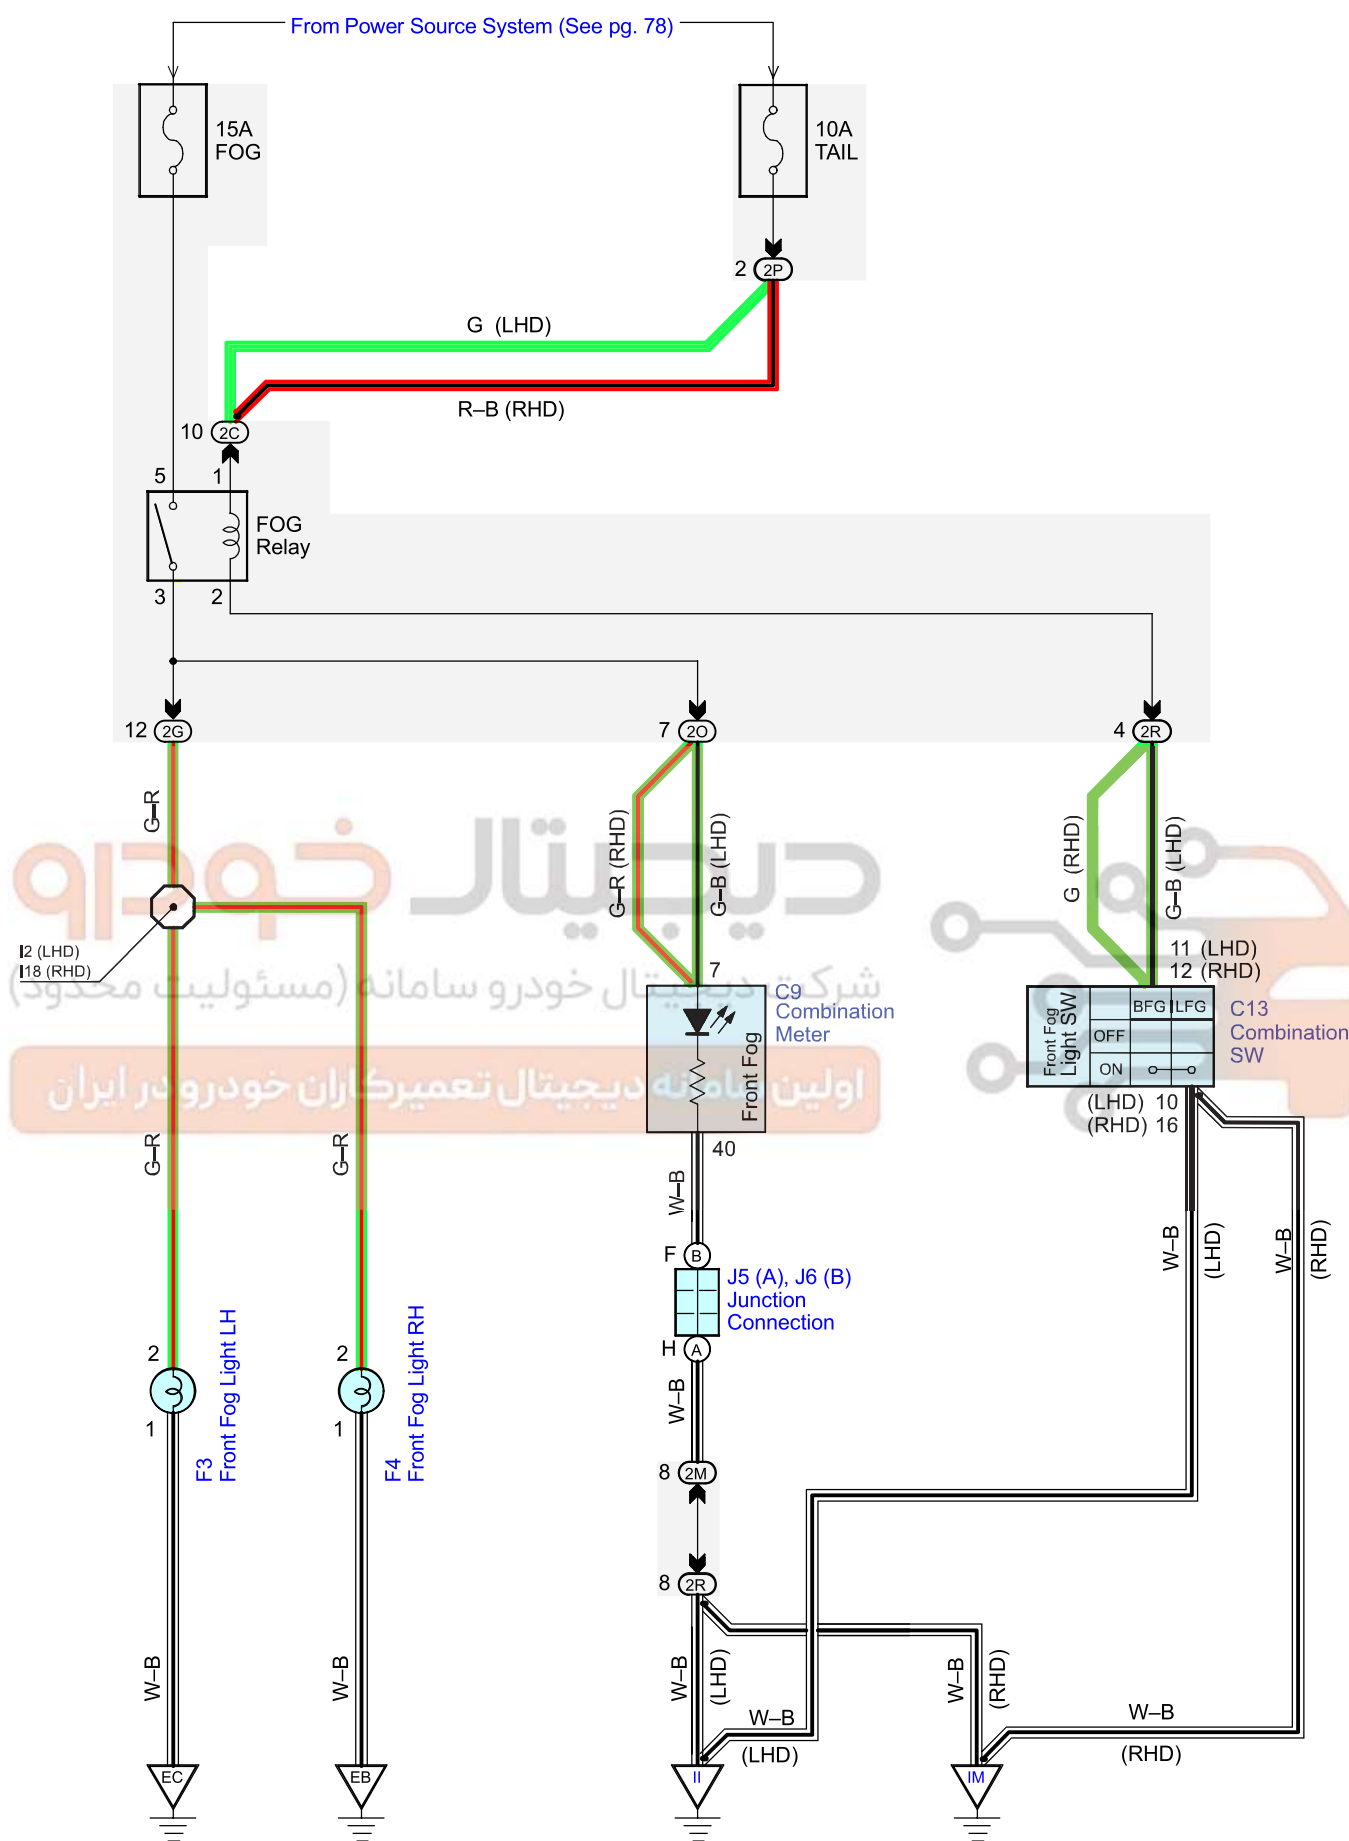

Service Hints**FOG Relay**

5-3 : Closed with the light control SW at TAIL or HEAD position and front fog light SW on

 : **Parts Location**

Code	See Page	Code	See Page	Code		See Page	
C9	36 (LHD)	F3	34 (LHD 2AZ–FE)	J5	A	37 (LHD)	
	46 (RHD)		44 (RHD 2AZ–FE)			47 (RHD)	
C13	36 (LHD)	F4	32 (LHD 1MZ–FE)	J6	B	37 (LHD)	
	46 (RHD)		42 (RHD 1MZ–FE)			47 (RHD)	
F3	32 (LHD 1MZ–FE)		34 (LHD 2AZ–FE)				
	42 (RHD 1MZ–FE)		44 (RHD 2AZ–FE)				

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
2C	26	Instrument Panel Wire and Driver Side J/B
2G	26	Engine Room Main Wire and Driver Side J/B
2M	26	Instrument Panel Wire and Driver Side J/B
2O		
2P		
2R		

 : **Ground Points**

Code	See Page	Ground Points Location
EB	52 (LHD 1MZ-FE)	Right Fender
	64 (RHD 1MZ-FE)	
	54 (LHD 2AZ-FE)	
	66 (RHD 2AZ-FE)	
EC	52 (LHD 1MZ-FE)	Left Fender
	64 (RHD 1MZ-FE)	
	54 (LHD 2AZ-FE)	
	66 (RHD 2AZ-FE)	
II	55 (LHD)	Instrument Panel Reinforcement LH
	67 (RHD)	
IM	55 (LHD)	Instrument Panel Reinforcement RH
	67 (RHD)	

 : **Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	58 (LHD)	Engine Room Main Wire	I18	70 (RHD)	Engine Room Main Wire