


Wiper and Washer

Service Hints

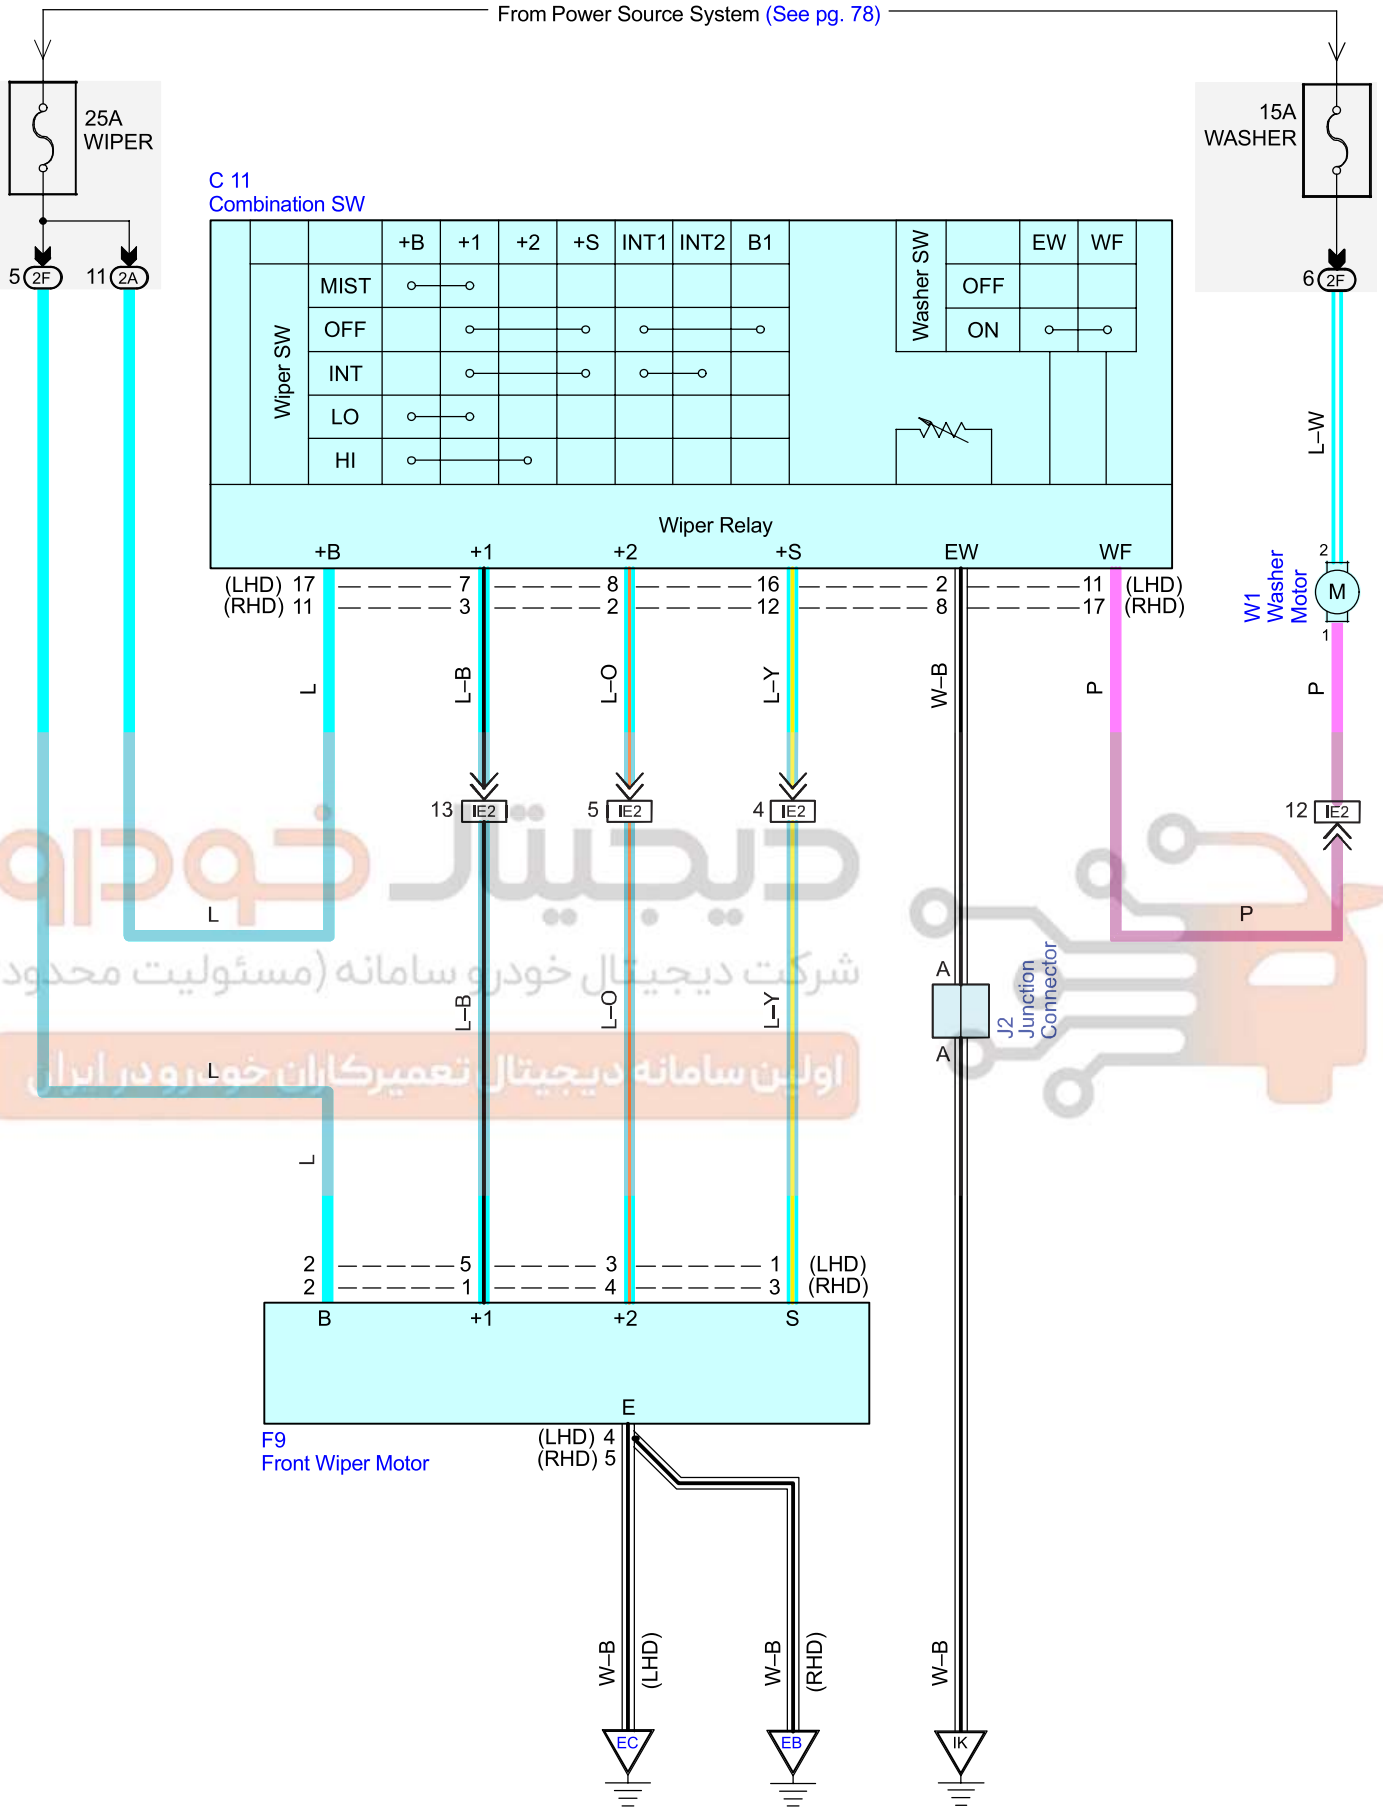

Service Hints**C11 Combination SW**

2 (LHD), 8 (RHD)–Ground : Always continuity

17 (LHD), 11 (RHD)–Ground : Approx. 12 volts with the ignition SW at ON position

7 (LHD), 3 (RHD)–Ground : Approx. 12 volts with the ignition SW on and the wiper and washer SW at LO position
Approx. 12 volts every approx. 1 to 10 seconds intermittently with the ignition SW on and the wiper and washer SW at INT position

16 (LHD), 12 (RHD)–Ground : Approx. 12 volts with the ignition SW on and unless the front wiper motor at STOP position

8 (LHD), 2 (RHD)–Ground : Approx. 12 volts with the ignition SW on and the wiper and washer SW at HI position

F9 Front Wiper Motor

2–3 (LHD), 2–5 (RHD) : Closed unless the front wiper motor at STOP position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C11	36 (LHD)	F9	34 (LHD 2AZ–FE)	W1	33 (LHD 1MZ–FE)
	46 (RHD)		44 (RHD 2AZ–FE)		43 (RHD 1MZ–FE)
F9	32 (LHD 1MZ–FE)	J2	37 (LHD)		35 (LHD 2AZ–FE)
	42 (RHD 1MZ–FE)		47 (RHD)		45 (RHD 2AZ–FE)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	26	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2F	26	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Left Side of Steering Column Tube)
	67 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)

▽ : Ground Points

Code	See Page	Ground Points Location
EB	64 (RHD 1MZ–FE)	Right Fender
	66 (RHD 2AZ–FE)	
EC	52 (LHD 1MZ–FE)	Left Fender
	54 (LHD 2AZ–FE)	
IK	55 (LHD)	Instrument Panel Reinforcement LH
	67 (RHD)	