



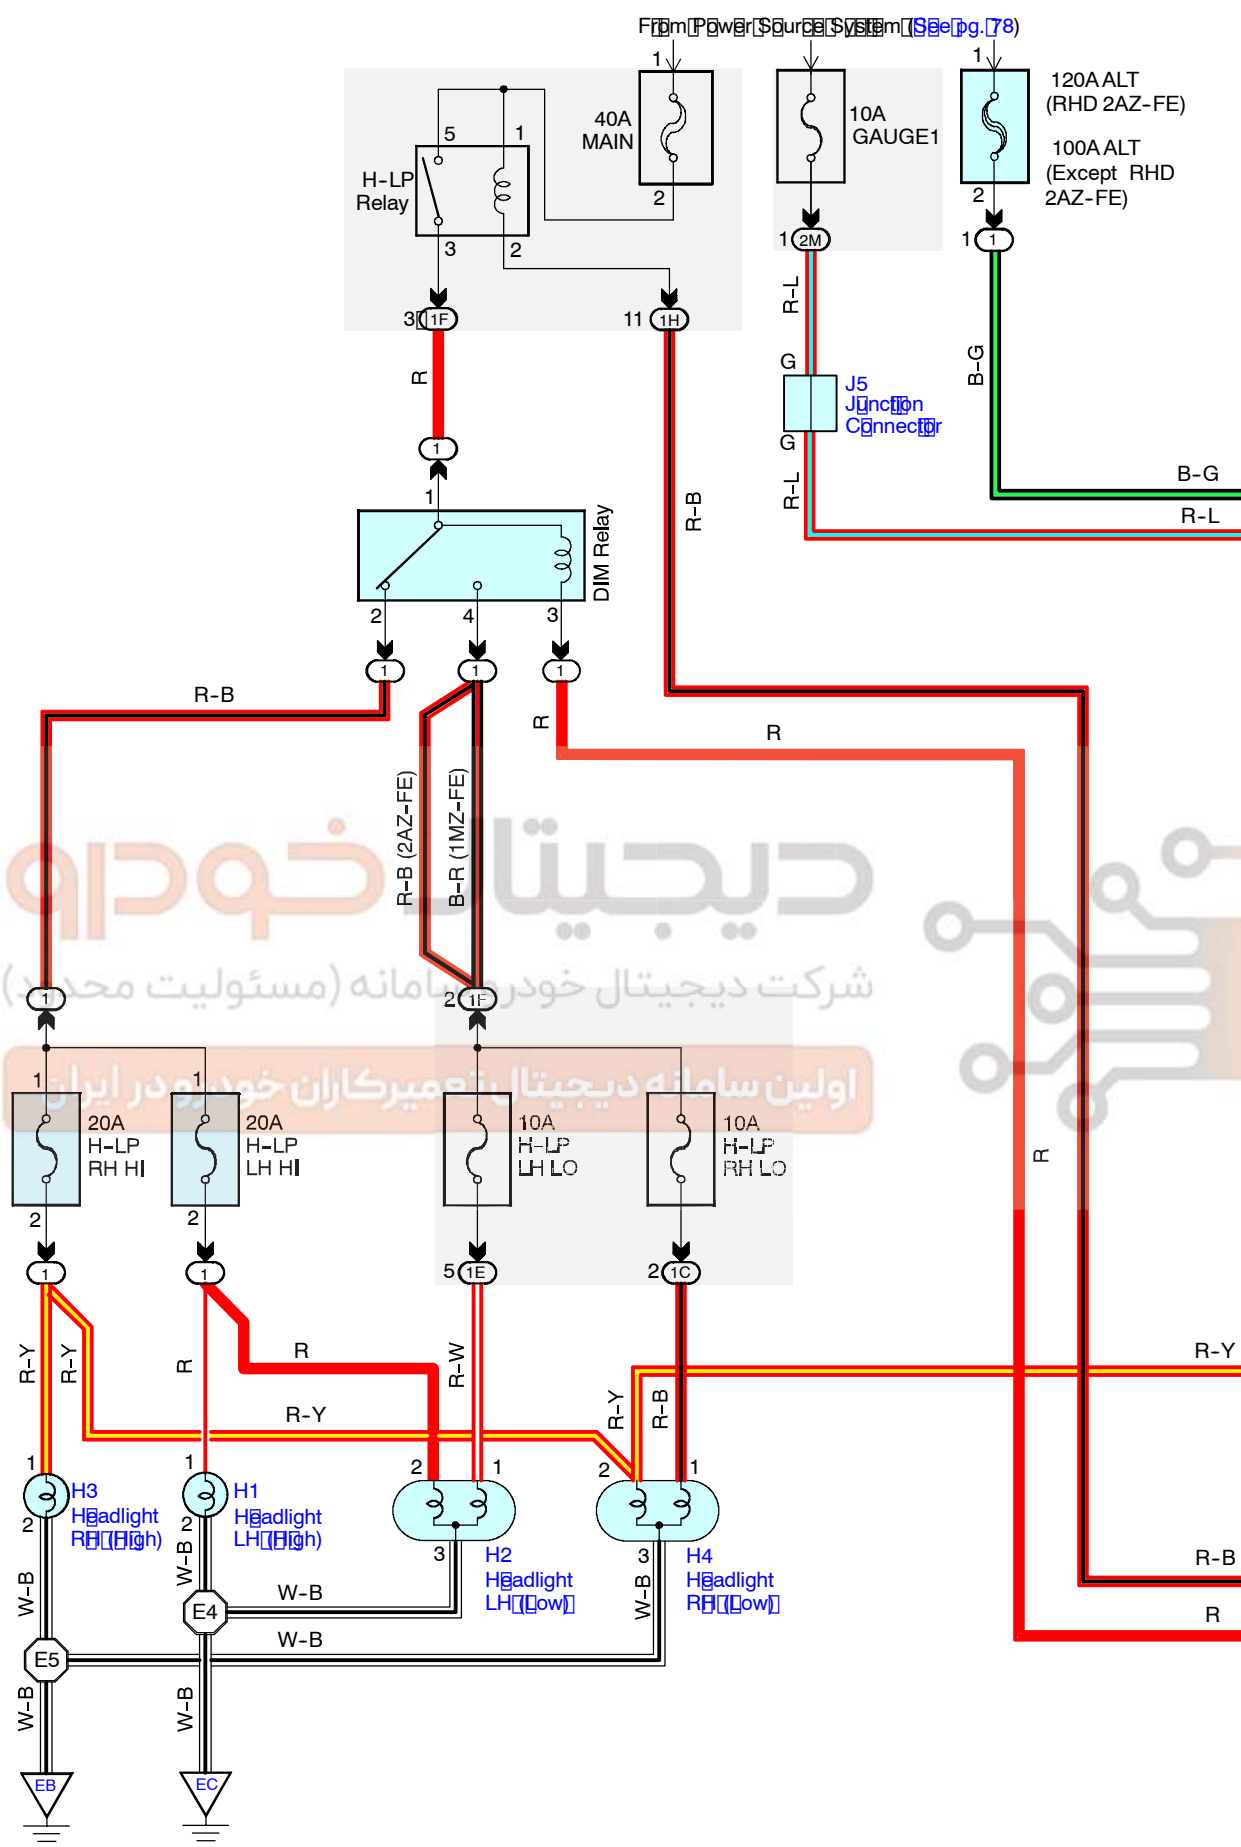

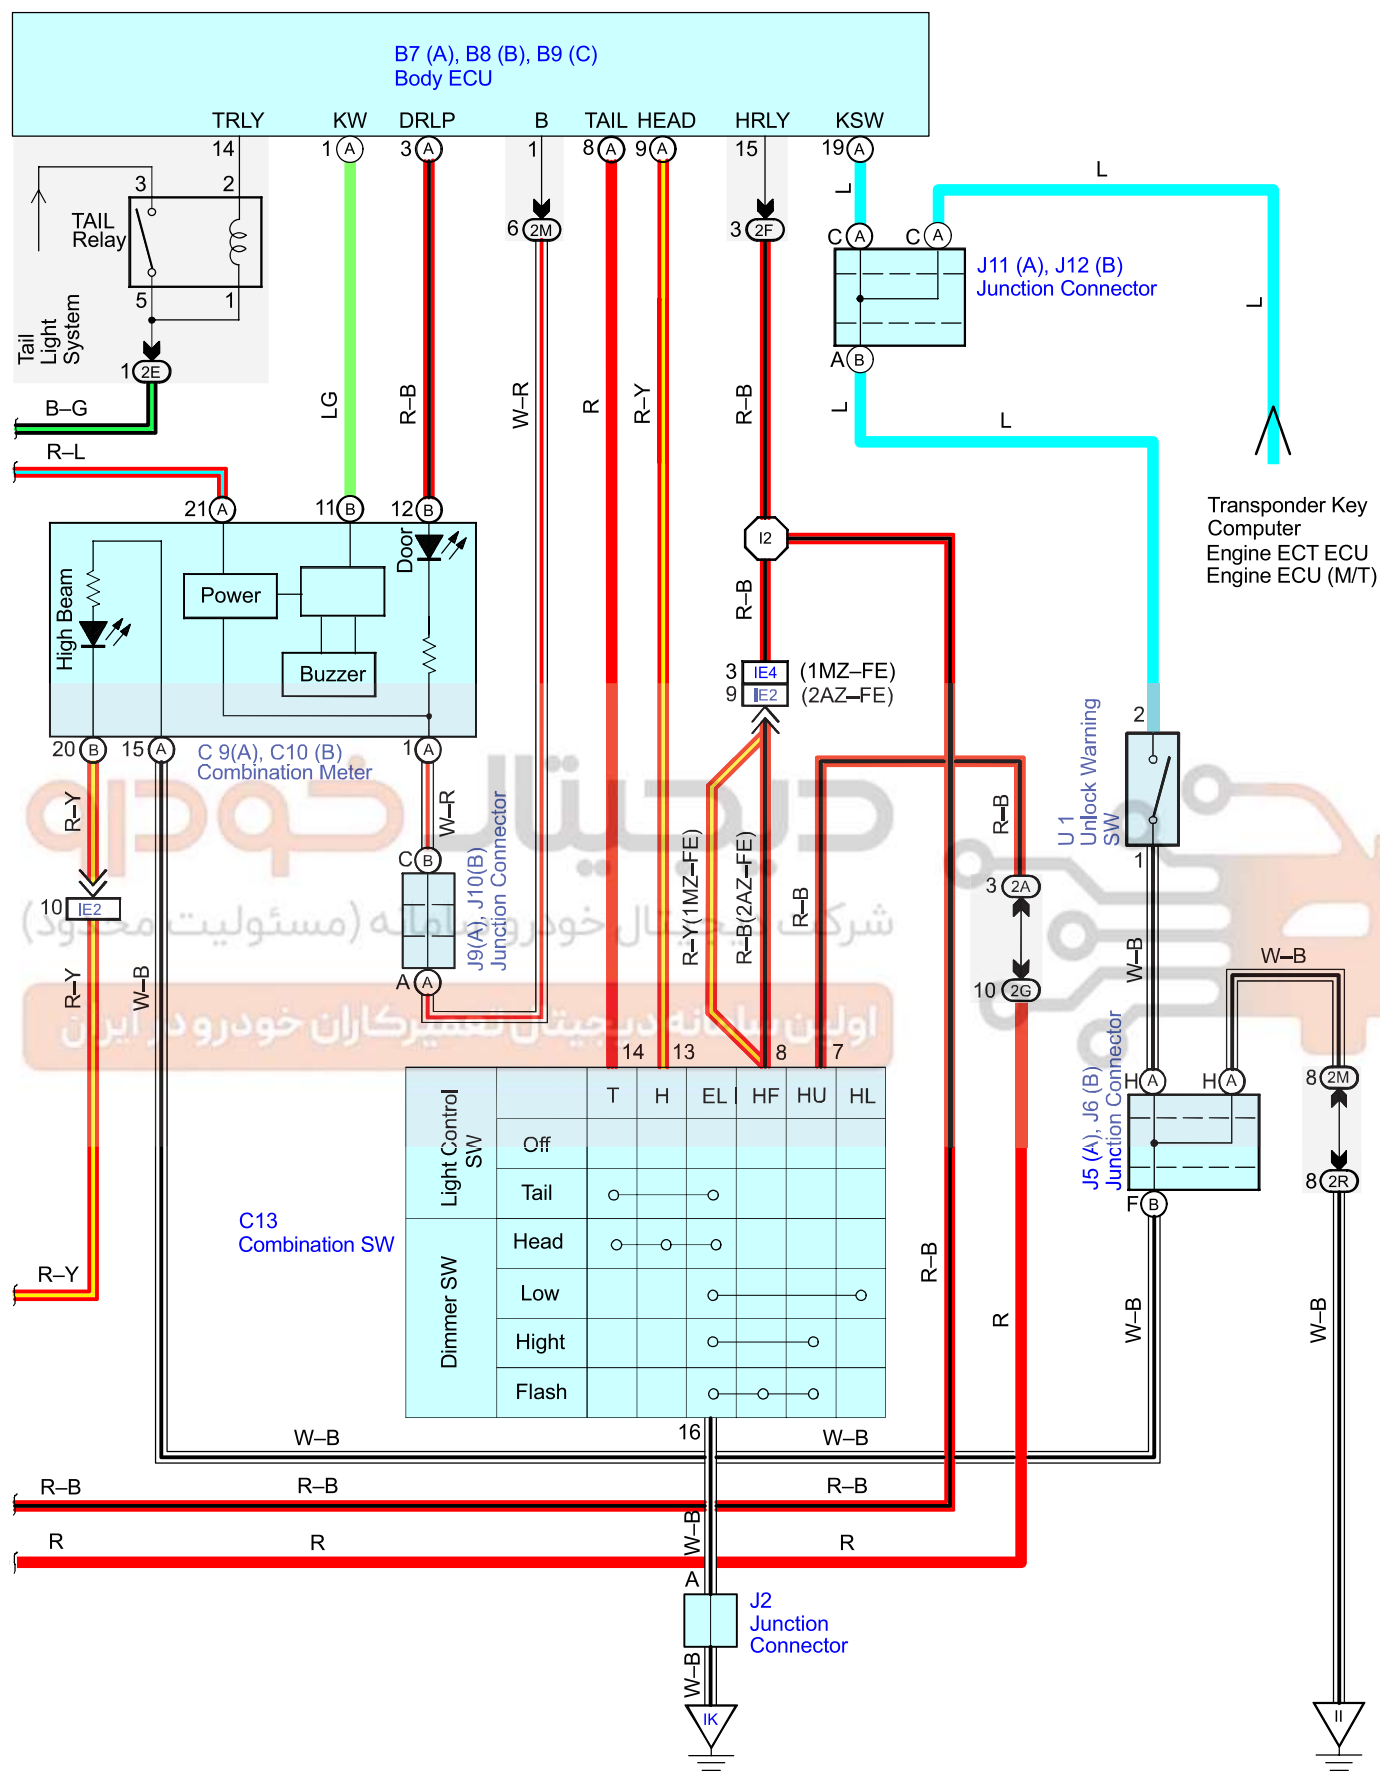

Headlight (LHD)

Service Hints

Body ECU

9-Ground : Approx. 12 volts with ignition SW at ON or ST position
 12, 24-Ground : Always continuity
 2M-6-Ground : Always approx. 12 volts

○ : Parts Location

Code		See Page	Code	See Page	Code		See Page
B7	A	36 (LHD)	H2	32 (LHD 1MZ–FE)	J5	A	37 (LHD)
B8	B	36 (LHD)		34 (LHD 2AZ–FE)	J6	B	37 (LHD)
B9	C	36 (LHD)	H3	32 (LHD 1MZ–FE)	J9	A	37 (LHD)
C9	A	36 (LHD)		34 (LHD 2AZ–FE)	J10	B	37 (LHD)
C10	B	36 (LHD)	H4	32 (LHD 1MZ–FE)	J11	A	37 (LHD)
C13		36 (LHD)		34 (LHD 2AZ–FE)	J12	B	37 (LHD)
H1		32 (LHD 1MZ–FE)	J2	37 (LHD)	U1		37 (LHD)
		34 (LHD 2AZ–FE)	J5	37 (LHD)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C		
1E	24	Engine Room Main Wire and Engine Room J/B
1F		
1H		
2A	26	Instrument Panel Wire and Driver Side J/B
2E		
2F	26	Engine Room Main Wire and Driver Side J/B
2G		
2M	26	Instrument Panel Wire and Driver Side J/B
2R		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE2	55	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column)
IE4		



: Ground Points

Code	See Page	Ground Points Location
EB	52 (LHD 1MZ-FE)	Right Fender
	54 (LHD 2AZ-FE)	
EC	52 (LHD 1MZ-FE)	Left Fender
	54 (LHD 2AZ-FE)	
II	55 (LHD)	Instrument Panel Reinforcement LH
IK	55 (LHD)	Instrument Panel Brace LH



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	52 (LHD 1MZ-FE)	Engine Room Main Wire	I2	58	Instrument Panel
	54 (LHD 2AZ-FE)				
E5	52 (LHD 1MZ-FE)	Engine Room Main Wire			
	54 (LHD 2AZ-FE)				

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Headlight (RHD)

Service Hints

From Power Source System (See pg. 78)

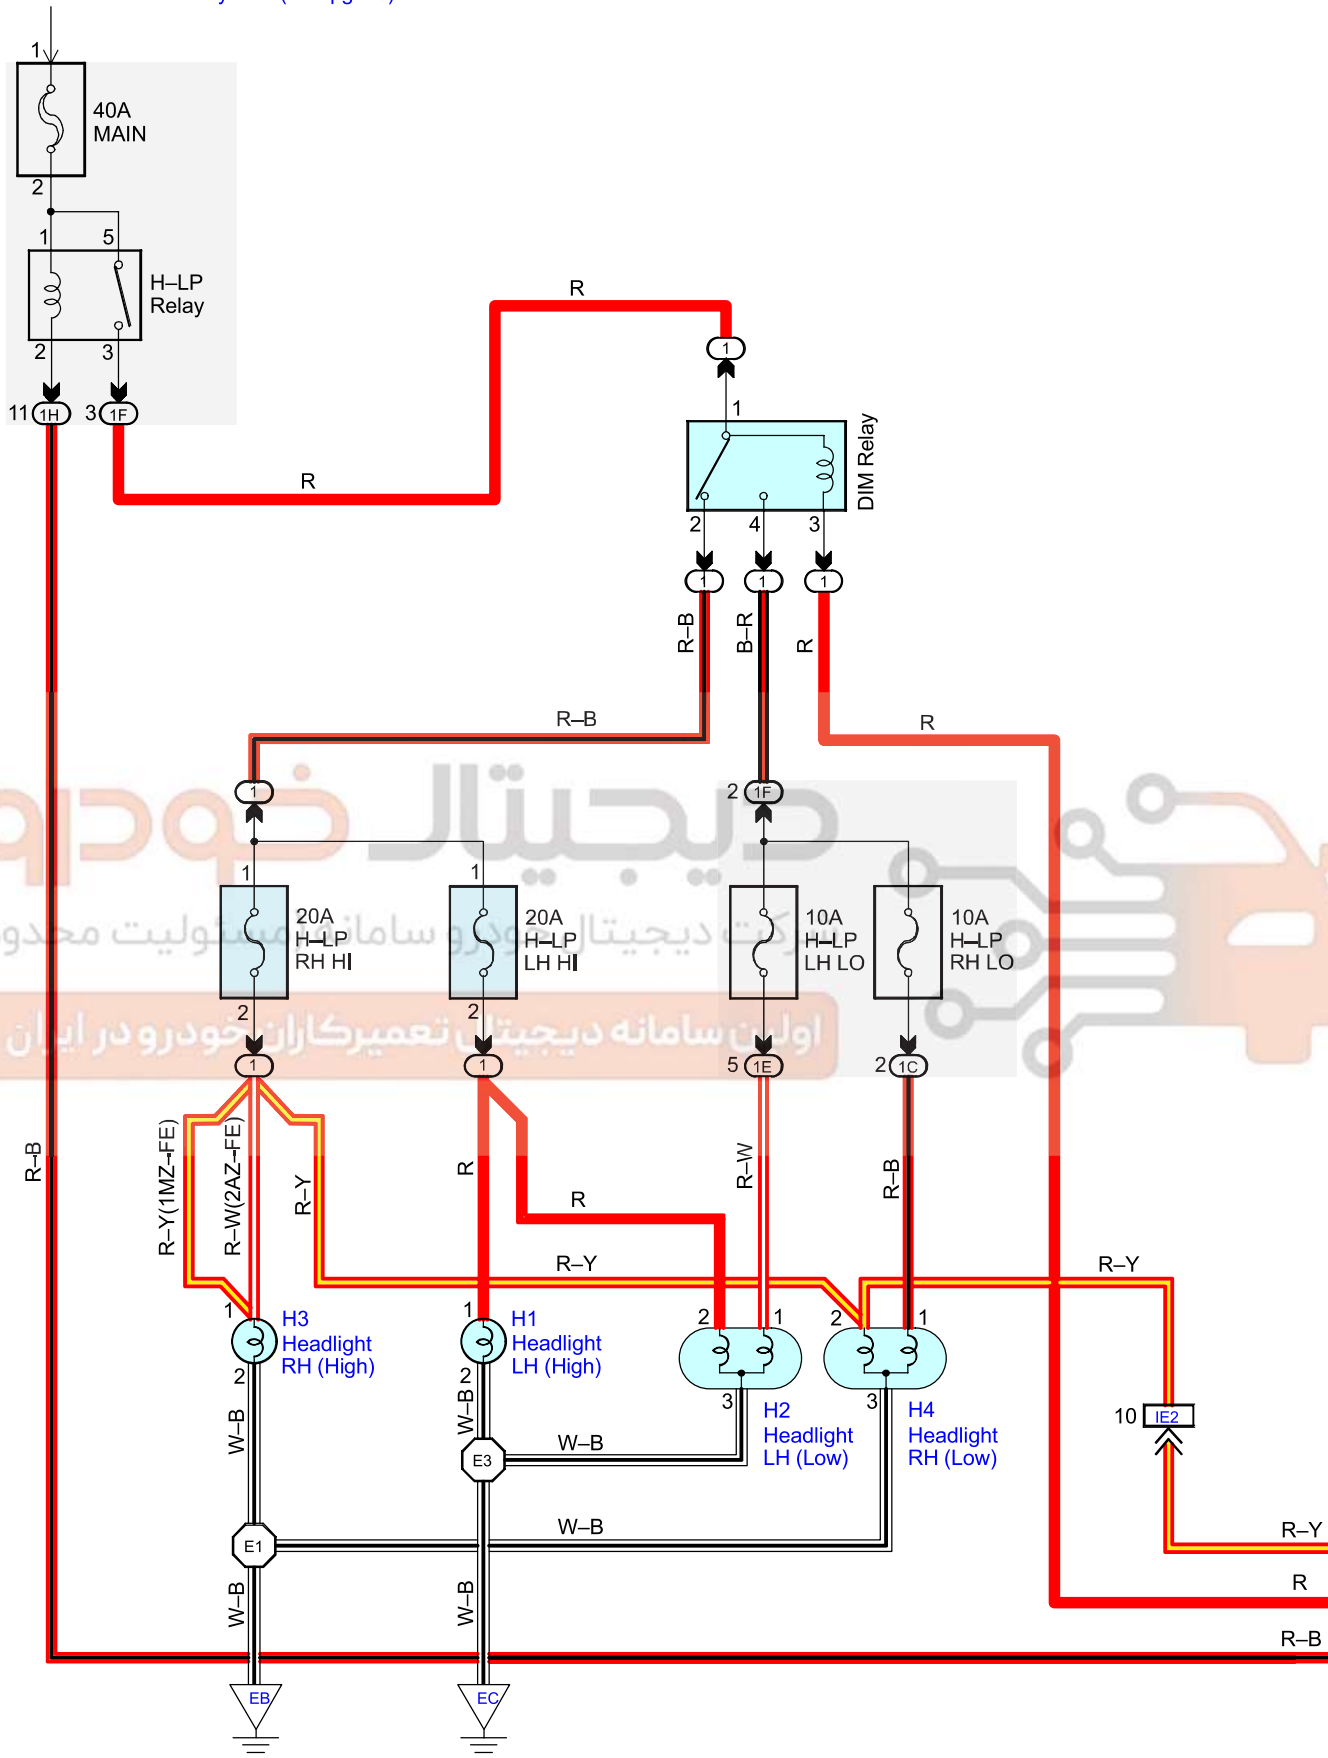



Headlight (RHD)

Service Hints

Body ECU

9-Ground : Approx. 12 volts with ignition SW at ON or ST position
12, 24-Ground : Always continuity
2M-6-Ground : Always approx. 12 volts

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
B7	A	46 (RHD)	H2	42 (RHD 1MZ–FE)		J6	B	47 (RHD)
B8	B	46 (RHD)		44 (RHD 2AZ–FE)		J9	A	47 (RHD)
B9	C	46 (RHD)	H3	42 (RHD 1MZ–FE)		J10	B	47 (RHD)
C8		46 (RHD)		44 (RHD 2AZ–FE)		J11	A	47 (RHD)
C9	A	46 (RHD)	H4	42 (RHD 1MZ–FE)		J12	B	47 (RHD)
C10	B	46 (RHD)		44 (RHD 2AZ–FE)		U1		47 (RHD)
C13		46 (RHD)	J2	47 (RHD)				
H1	42 (RHD 1MZ–FE)		J5		47 (RHD)			
	44 (RHD 2AZ–FE)		J5	A	47 (RHD)			

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B

 Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	24	Engine Room Main Wire and Engine Room J/B
1E		
1F		
1H		
2A	26	Instrument Panel Wire and Driver Side J/B
2F	26	Engine Room Main Wire and Driver Side J/B
2G		
2M		
2R		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE2	67	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column)



: Ground Points

Code	See Page	Ground Points Location
EB	64 (RHD 1MZ-FE)	Right Fender
	66 (RHD 2AZ-FE)	
EC	64 (RHD 1MZ-FE)	Left Fender
	66 (RHD 2AZ-FE)	
IK	67 (RHD)	Instrument Panel Brace LH
IM	67 (RHD)	Instrument Panel Brace RH



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
EB	64 (RHD 1MZ-FE)	Engine Room Main Wire	I19	70 (RHD)	Instrument Panel Wire
	66 (RHD 2AZ-FE)				
EC	64 (RHD 1MZ-FE)	Engine Room Main Wire			
	66 (RHD 2AZ-FE)				

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

