


HARNESS CONNECTORS

EFF55190


HARNESS CONNECTORS (1)

CC-1

CF01/CF11/CF101/CF201

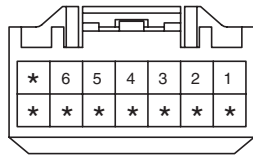


AMP_090III_14F_W

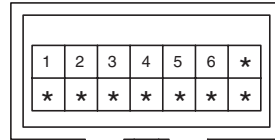


AMP_090III_14M_W

EC01/EC11

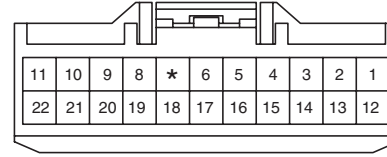


AMP_090III_22F_W

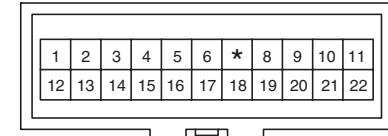


AMP_090III_22M_W

EC101

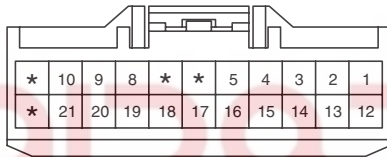


AMP_090III_22F_W

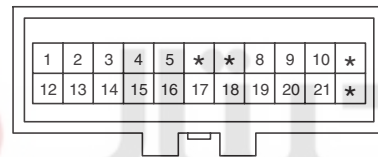


AMP_090III_22M_W

EC201

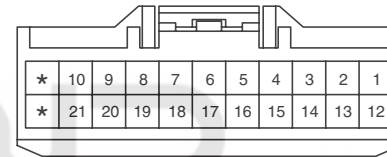


AMP_090III_22F_W

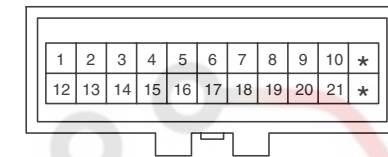


AMP_090III_22M_W

EE01/EE11

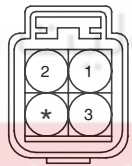


KUM_NMWP_04F_B

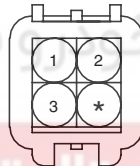


KUM_NMWP_04M_B

EE02

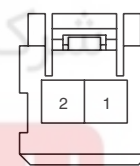


AMP_090III_02F_B

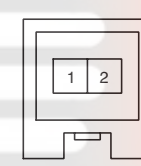


AMP_090III_02M_B

EE101/EE201

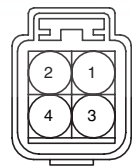


KUM_NMWP_04F_B

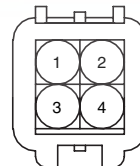


KUM_NMWP_04M_B

EF01

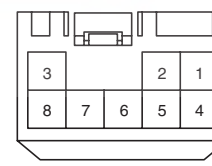


AMP_090III_08F_W

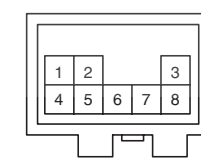


AMP_090III_08M_W

EI01

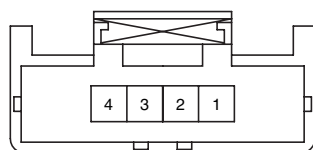


AMP_MQS_4F_Y

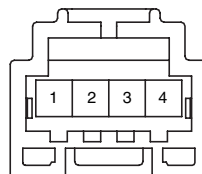


AMP_MQS_4M_Y

EM01

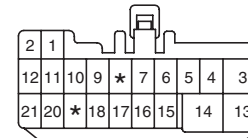

KET_1809_21F_W_A

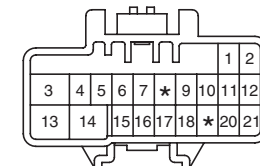


KET_1809_21M_W_A

HARNESS CONNECTORS


HARNESS CONNECTORS (2)

CC-2

EM02

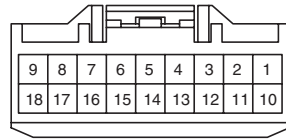



AMP_090III_18F_W

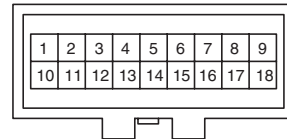

AMP_090III_18M_W



BLANK

FD01

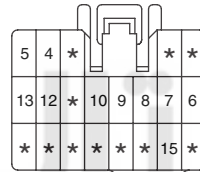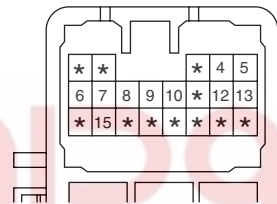


KET_050_21F_B

FD03

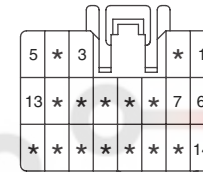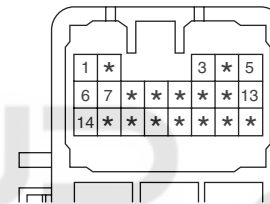


KET_050_21F_B

FD02

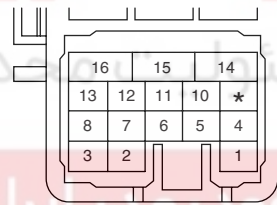


KET_180905_37M_W

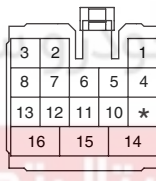

KET_1809_16F_W

FD04

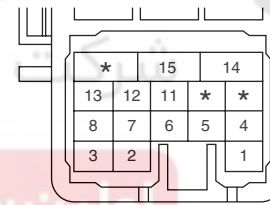


KET_180905_37M_W




KET_1809_16F_W

FD05

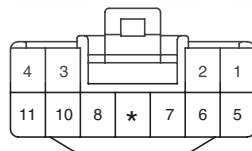


KET_090II_11F_W

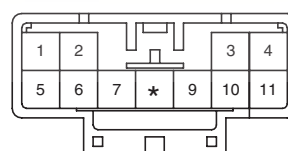


KET_090II_11M_W

FD06

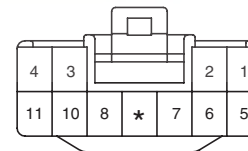


KET_090II_11F_W

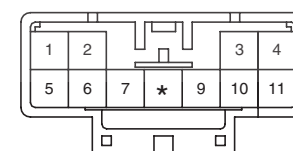


KET_090II_11M_W

FR01

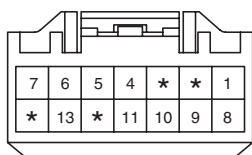


AMP_090III_14F_W

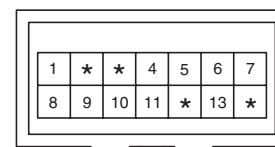


AMP_090III_14M_W

 FR02



KET_250DL_02F_W

 


KET_250DL_02M_W

HARNESS CONNECTORS


HARNESS CONNECTORS (3)

CC-3

MC01

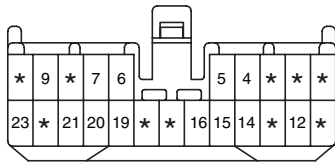


KET_050_23F_W

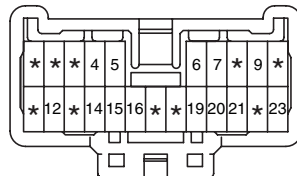


KET_050_23M_W

MC11

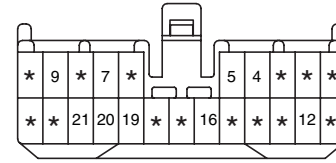


KET_050_23F_W

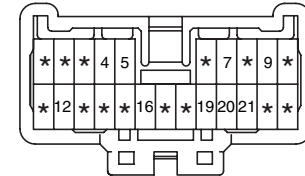


KET_050_23M_W

MC101

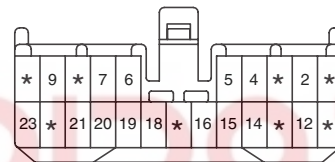


KET_050_23F_W

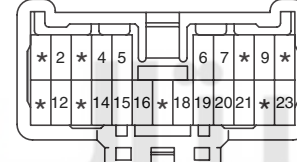


KET_050_23M_W

MC201

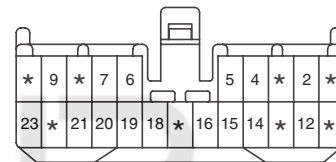


KET_050_23F_W

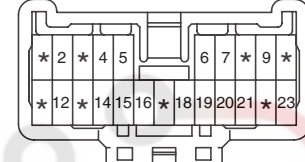

KET_050_23M_W

 MC02




KET_070II_20F_W




KET_070II_20M_W

 MC12




KET_070II_20F_W

 


KET_070II_20M_W

 MC102




KET_070II_20F_W

 


KET_070II_20M_W

 MC202




KET_070II_20F_W

 


KET_070II_20M_W

MC03

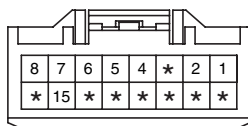


KET_090III_16F_L

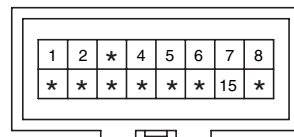


KET_090III_16M_L

MC13

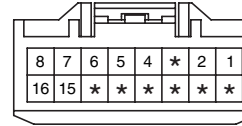

KET_090III_16F_L

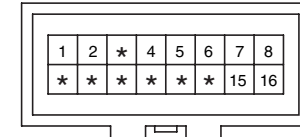


KET_090III_16M_L

HARNESS CONNECTORS


HARNESS CONNECTORS (4)

CC-4

MC103

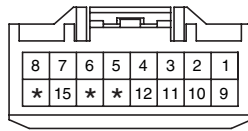


KET_090III_16F_L

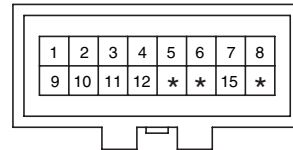


KET_090III_16M_L

MC203

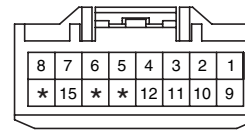


KET_090III_16F_L

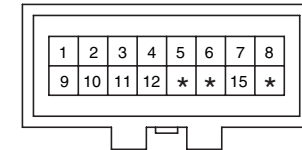


KET_090III_16M_L

MC04/MC14/MC104/MC204

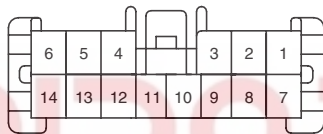


KET_070II_14F_Y

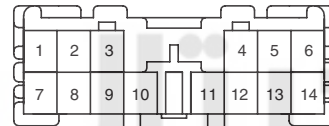


KET_070II_14M_Y

MF01

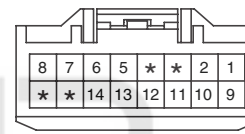


KET_090III_16F_L

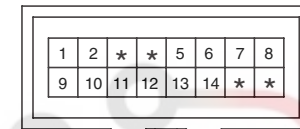


KET_090III_16M_L

MF02

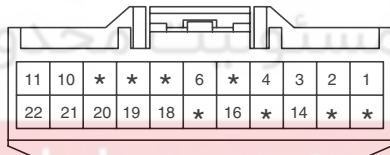


AMP_090III_22F_W

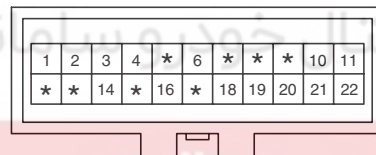


AMP_090III_22M_W

MF03

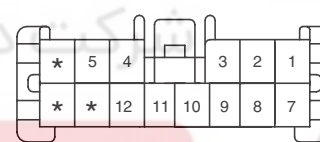


KET_070II_14F_Y

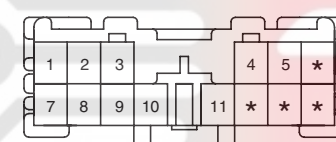


KET_070II_14M_Y

 MI01




KUM_2504_18F_B

 


KUM HY031-18027

MI02

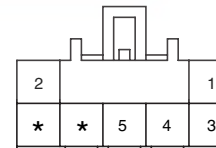


KUM_CDR_07F_B

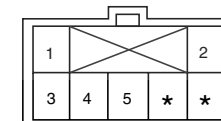


KUM PH841-07020

 MI03




KUM_2504_18F_B

 


KUM HY031-18027

MI04

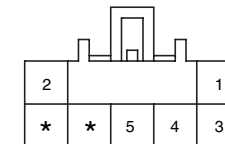

KUM_CDR_07F_B

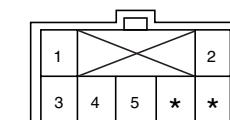


KUM PH841-07020

HARNESS CONNECTORS


HARNESS CONNECTORS (5)

CC-5

MI05

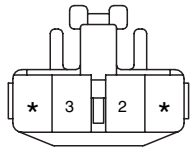


KET_090II_04F_W

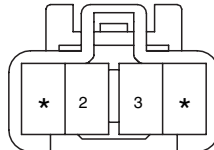


KET_090II_04M_W

MR02

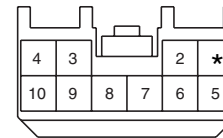


AMP_090III_10F_W

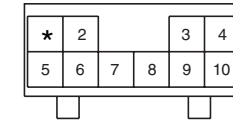


AMP_090III_10M_W

RR01

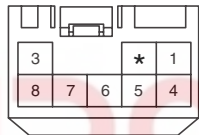


AMP_090III_08F_W

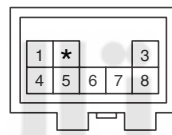


AMP_090III_08M_W

RR02

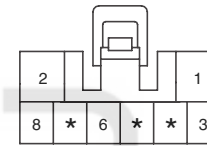


KET_2507_08F_W

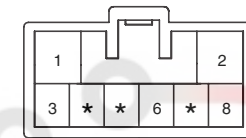


KET_2507_08M_W

RR03

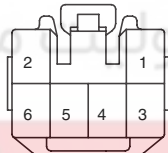

KET_090II_06F_W

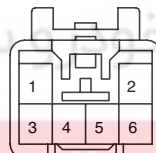

KET_090II_06M_W

 
BLANK

E/R & I/P JUNCTION BOX E4F98C6D

E/R & I/P JUNCTION BOX (1)


CC-6

I/P-A




AMP_0925_20F_W

I/P-B

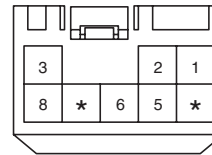


AMP_090III_08F_W

I/P-C

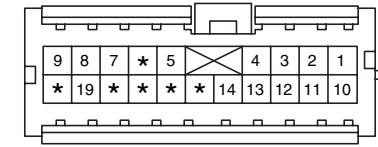


AMP_040III_20F_Br

 I/P-D




AMP_0925_16F_W

I/P-E

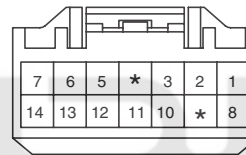


AMP_090III_14F_W

 I/P-F




AMP_0925_18F_W

 I/P-G




AMP_0925_14F_W

I/P-H

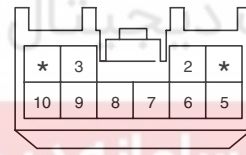


AMP_090III_10F_W

 I/P-J




KET_58L_02F_W

 I/P-AR




AMP_0925_20F_W

I/P-BR

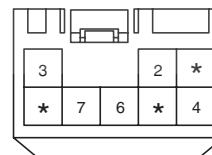


AMP_090III_08F_W

I/P-CR

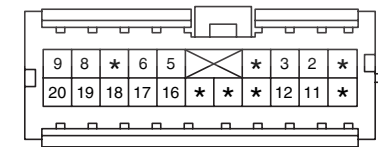


AMP_040III_20F_Br

 I/P-DR




AMP_0925_16F_W

I/P-ER

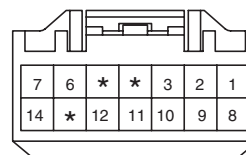

AMP_090III_14F_W

 I/P-FR




AMP_0925_18F_W

E/R & I/P JUNCTION BOX

E/R & I/P JUNCTION BOX (2)


CC-7

 I/P-GR




AMP_0925_14F_W

I/P-HR

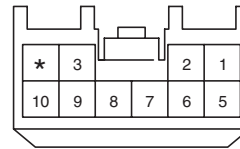


AMP_090III_10F_W

 I/P-JR




KET_58L_02F_W

JC04

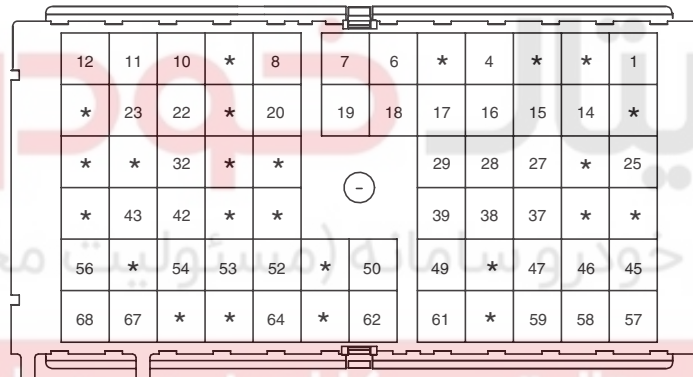


PKD_280_68F_N_104

JC14

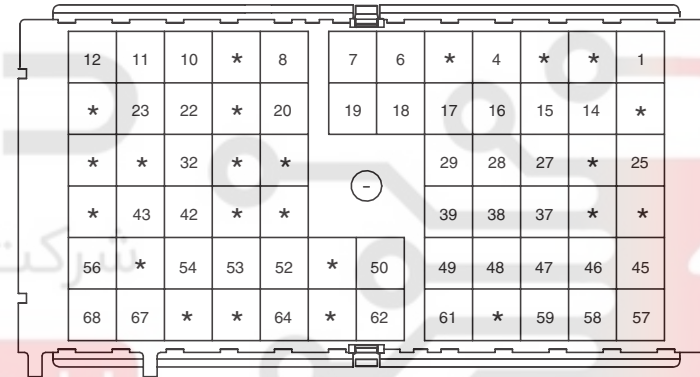


PKD_280_68F_N_104

JC104

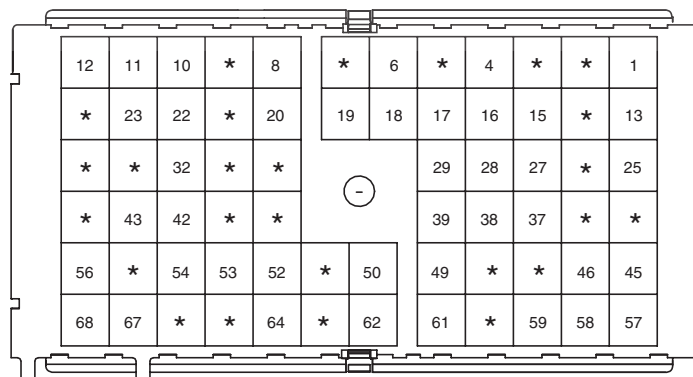

PKD_280_68F_N_104

JC204

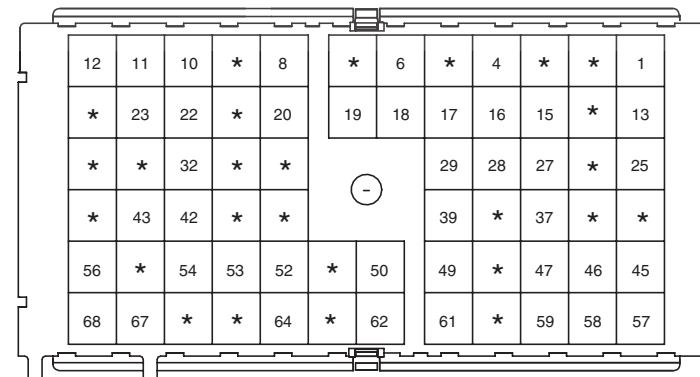

PKD_280_68F_N_104


EKMCC6002BL

E/R & I/P JUNCTION BOX

E/R & I/P JUNCTION BOX (3)


CC-8

JE01

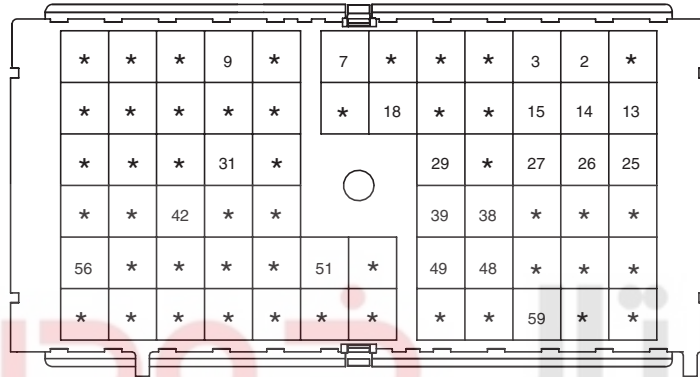


PKD_280_68F_B_102

JE02

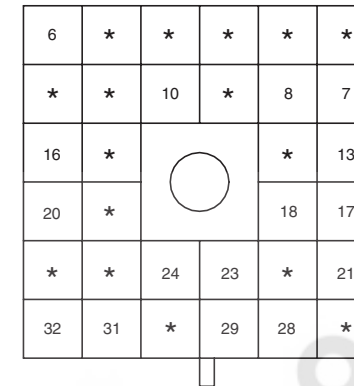


PKD_280_32F_N_101

JE03

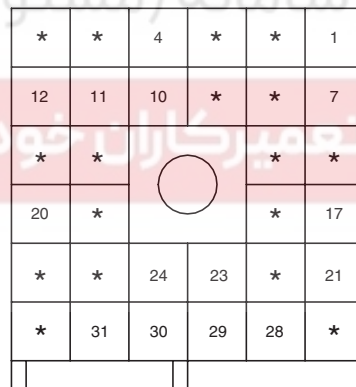


PKD_280_32F_GR_102

JE05

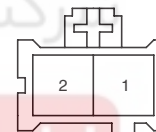

PKD_800_02F_GR_104

JE06

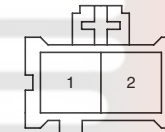

PKD_800_02F_G_102


BLANK

JOINT CONNECTORS E8AD1A7C

JOINT CONNECTORS (1)


CC-9

C24

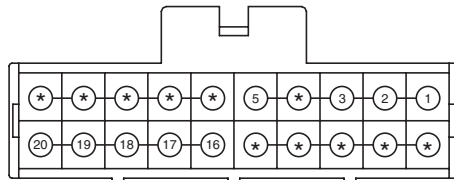


KET_090II_20F_B_JCH

C25

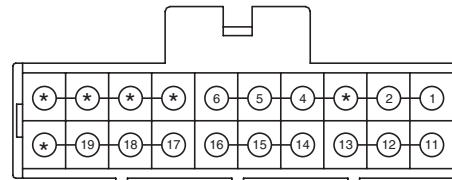


KET_090II_20F_B_JCH

C26

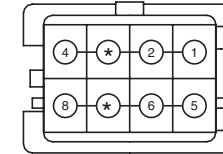


KET_070_08F_JCH

C73

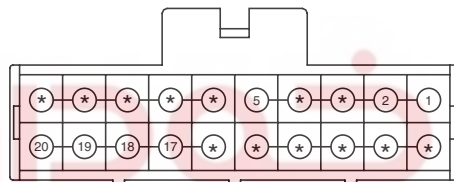


KET_090II_20F_B_JCH

C74

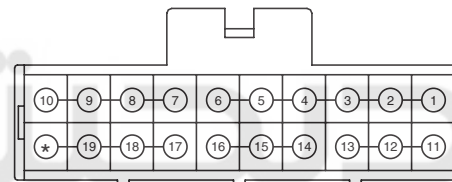


KET_090II_20F_B_JCH

C75

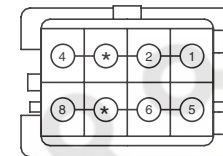


KET_070_08F_JCH

C76

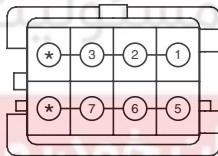


KET_070_08F_JCH

C126

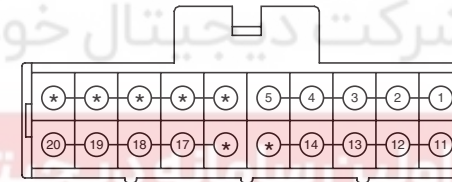


KET_090II_20F_B_JCH

C127

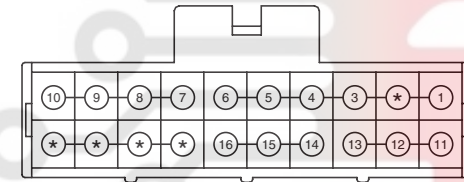


KET_090II_20F_B_JCH

C128

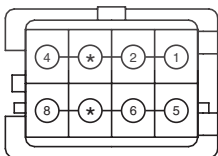


KET_070_08F_JCH

C129

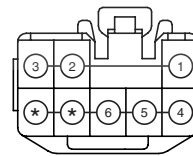


KET_090II_08F_W

C148

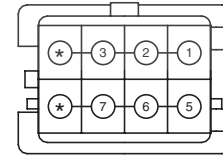


KET_070_08F_JCH

C226

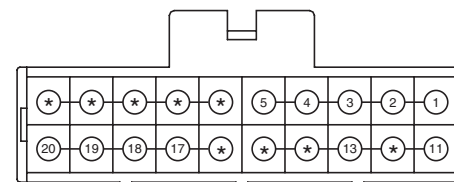


KET_090II_20F_B_JCH

C227

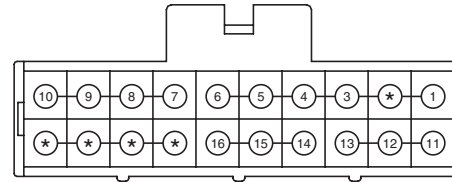

KET_090II_20F_B_JCH

C228

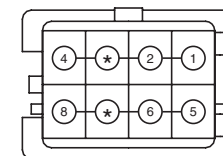


KET_070_08F_JCH

JOINT CONNECTORS

JOINT CONNECTORS (2)


CC-10

C248

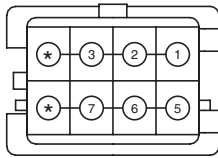


KET_070_08F_JCH

D03

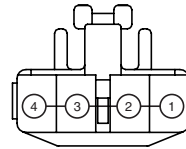


KET_090II_04F_W

F20

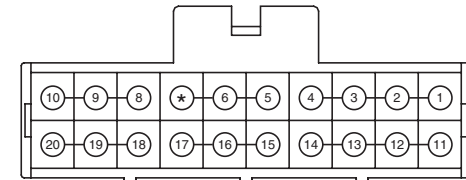


KET_090II_20F_B_JCH

F21

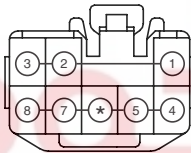


KET_090II_08F_W

F22

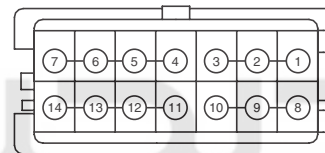


KET_070_14F_B_JCH

M16

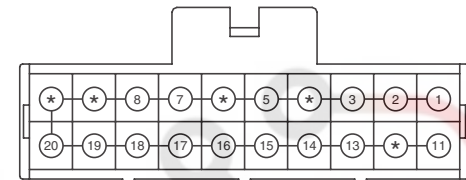


KET_090II_20F_B_JCH

M17

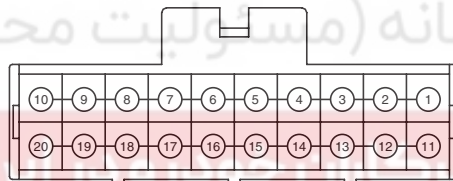


KET_090II_20F_B_JCH

M18

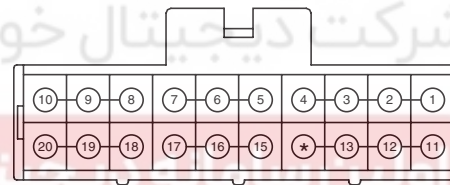


KET_090II_20F_B_JCH

M19

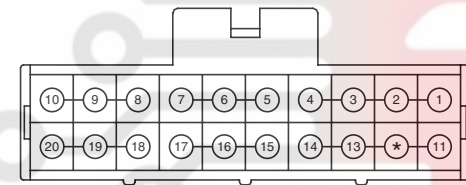

KET_090II_20F_B_JCH

M40

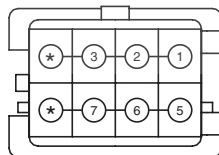

KET_070_08F_W_JCH


BLANK

BLANK

MAIN HARNESS E44DBA8C

MAIN HARNESS (1)

HL-1

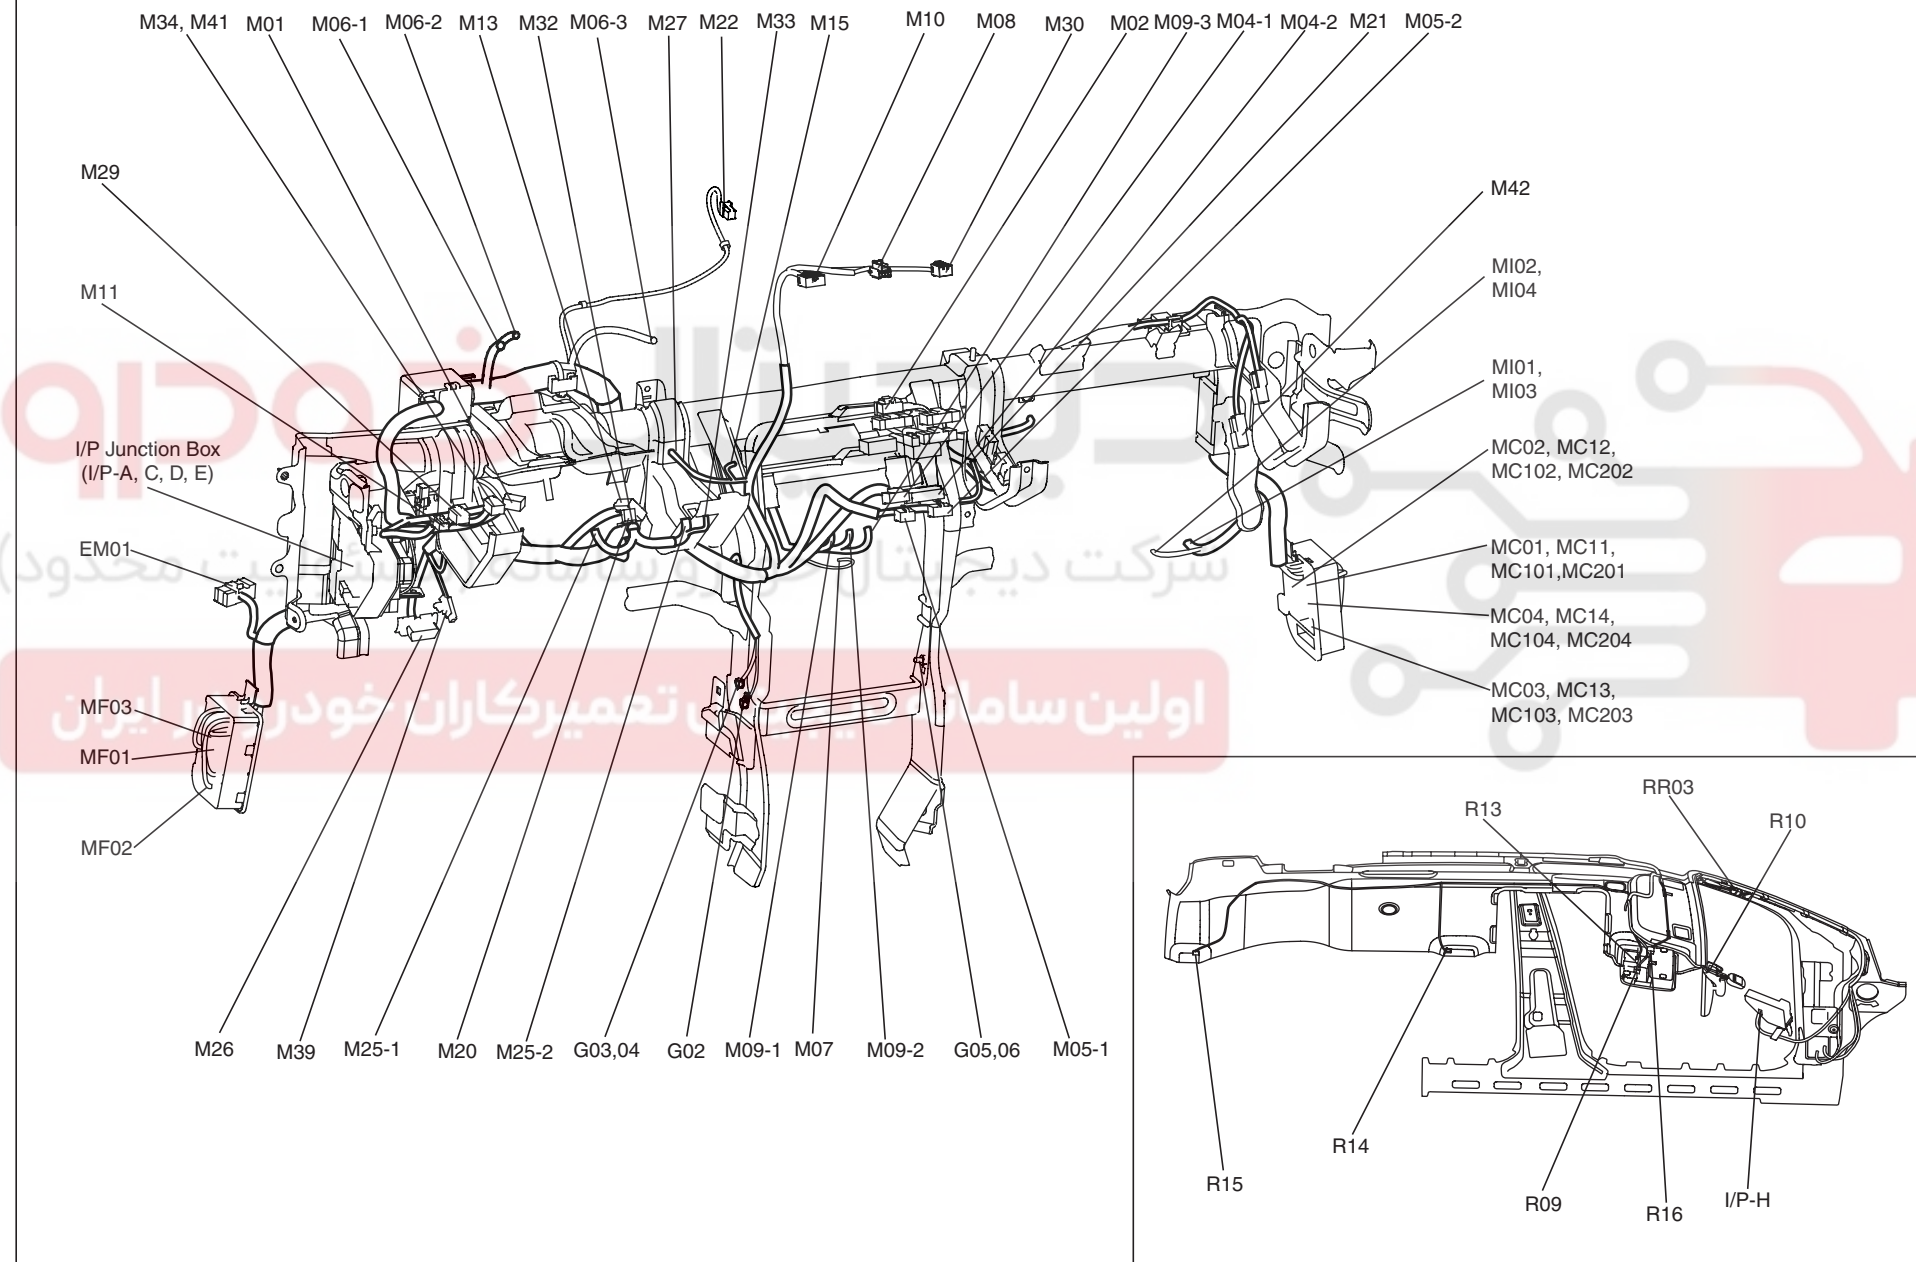

MAIN HARNESS

MAIN HARNESS (2)

HL-2

MAIN HARNESS

M01 4WD Lock Switch
 M02 Audio
 M04-1 A/C Control Module (Auto)
 M04-2 A/C Control Module (Auto)
 M05-1 A/C Control Module (Manual)
 M05-2 A/C Control Module (Manual)
 M06-1 Instrument Cluster
 M06-2 Instrument Cluster
 M06-3 Instrument Cluster
 M07 Cigarette Lighter
 M08 Digital Clock
 M09-1 ETACM
 M09-2 ETACM
 M09-3 ETACM
 M10 Hazard Switch
 M11 Head Lamp Leveling Switch
 M13 Ignition Switch
 M14 SMATRA
 M14-1 Immobilizer Control Module
 M14-2 Immobilizer Control Module
 M15 Incar & Humidity Sensor
 M16 Joint Connector
 M17 Joint Connector
 M18 Joint Connector
 M19 Joint Connector
 M20 Key Remind Switch
 M21 Flasher Unit
 M22 Auto Light & Photo Sensor
 M25-1 Multifunction Switch (LHD)
 M25-1R Multifunction Switch (RHD)
 M25-2 Multifunction Switch (LHD)
 M25-2R Multifunction Switch (RHD)
 M26 Data Link Connector
 M27 Mode Switch
 M29 Rheostat
 M30 Rear Fog Lamp Switch
 M32 Multifunction Switch
 M33 Steering Angle Sensor
 M34 TCS Switch
 M37-1 ICM Box
 M37-2 CM Box
 M39 Vertical Resistor
 M40 Joint Connector
 M41 ESP Switch
 M42 Glove Box Lamp
 Z01 PRE - Excitation Resistor

EM01 Connection With ENGINE Harness RH
 EM02 Connection With ENGINE Harness RH
 I/P-A Connection With I/P JUNCTION BOX Harness (LHD)
 I/P-AR Connection With I/P JUNCTION BOX Harness (RHD)
 I/P-C Connection With I/P JUNCTION BOX Harness (LHD)
 I/P-CR Connection With I/P JUNCTION BOX Harness (RHD)
 I/P-D Connection With I/P JUNCTION BOX Harness (LHD)
 I/P-DR Connection With I/P JUNCTION BOX Harness (RHD)
 I/P-E Connection With I/P JUNCTION BOX Harness (LHD)
 I/P-ER Connection With I/P JUNCTION BOX Harness (RHD)
 I/P-HR Connection With I/P JUNCTION BOX Harness (RHD)
 MC01 Connection With CONTROL Harness (2.0 GSL)
 MC02 Connection With CONTROL Harness (2.0 GSL)
 MC03 Connection With CONTROL Harness (2.0 GSL)
 MC04 Connection With CONTROL Harness (2.0 GSL)
 MC11 Connection With CONTROL Harness (2.7 GSL)
 MC12 Connection With CONTROL Harness (2.7 GSL)
 MC13 Connection With CONTROL Harness (2.7 GSL)
 MC14 Connection With CONTROL Harness (2.7 GSL)
 MC101 Connection With CONTROL Harness (DSL EURO-III)
 MC102 Connection With CONTROL Harness (DSL EURO-III)
 MC103 Connection With CONTROL Harness (DSL EURO-III)
 MC104 Connection With CONTROL Harness (DSL EURO-III)
 MC201 Connection With CONTROL Harness (DSL EURO-IV)
 MC202 Connection With CONTROL Harness (DSL EURO-IV)
 MC203 Connection With CONTROL Harness (DSL EURO-IV)
 MC204 Connection With CONTROL Harness (DSL EURO-IV)
 MF01 Connection With FLOOR Harness
 MF02 Connection With FLOOR Harness
 MF03 Connection With FLOOR Harness
 MI01 Connection With A/C Harness (Auto A/C)
 MI02 Connection With A/C Harness (Auto A/C)
 MI03 Connection With A/C Harness (Manual A/C)
 MI04 Connection With A/C Harness (Manual A/C)
 MI05 Connection With A/BAG Harness
 MR02 Connection With ROOF Harness (RHD)
 G01 Ground
 G02 Ground
 G03 Ground
 G04 Ground
 G05 Ground
 G06 Ground

ROOF HARNESS

R09 Sunroof Switch
 R10 Electro Chrome Mirror (ECM)
 R13 MAP Lamp
 R14 Room Lamp
 R15 Cargo Lamp
 R26 Vanity Lamp LH
 R27 Vanity Lamp RH
 I/P-H Connection With
 I/P JUNCTION BOX Harness (LHD)
 MR02 Connection With MAIN Harness (RHD)
 RR03 Connection With S/ROOF Harness


SUNROOF HARNESS

R16 Sunroof Controller
 RR03 Connection With ROOF Harness

ENGINE HARNESS E2694A0F

ENGINE HARNESS (1)

HL-3

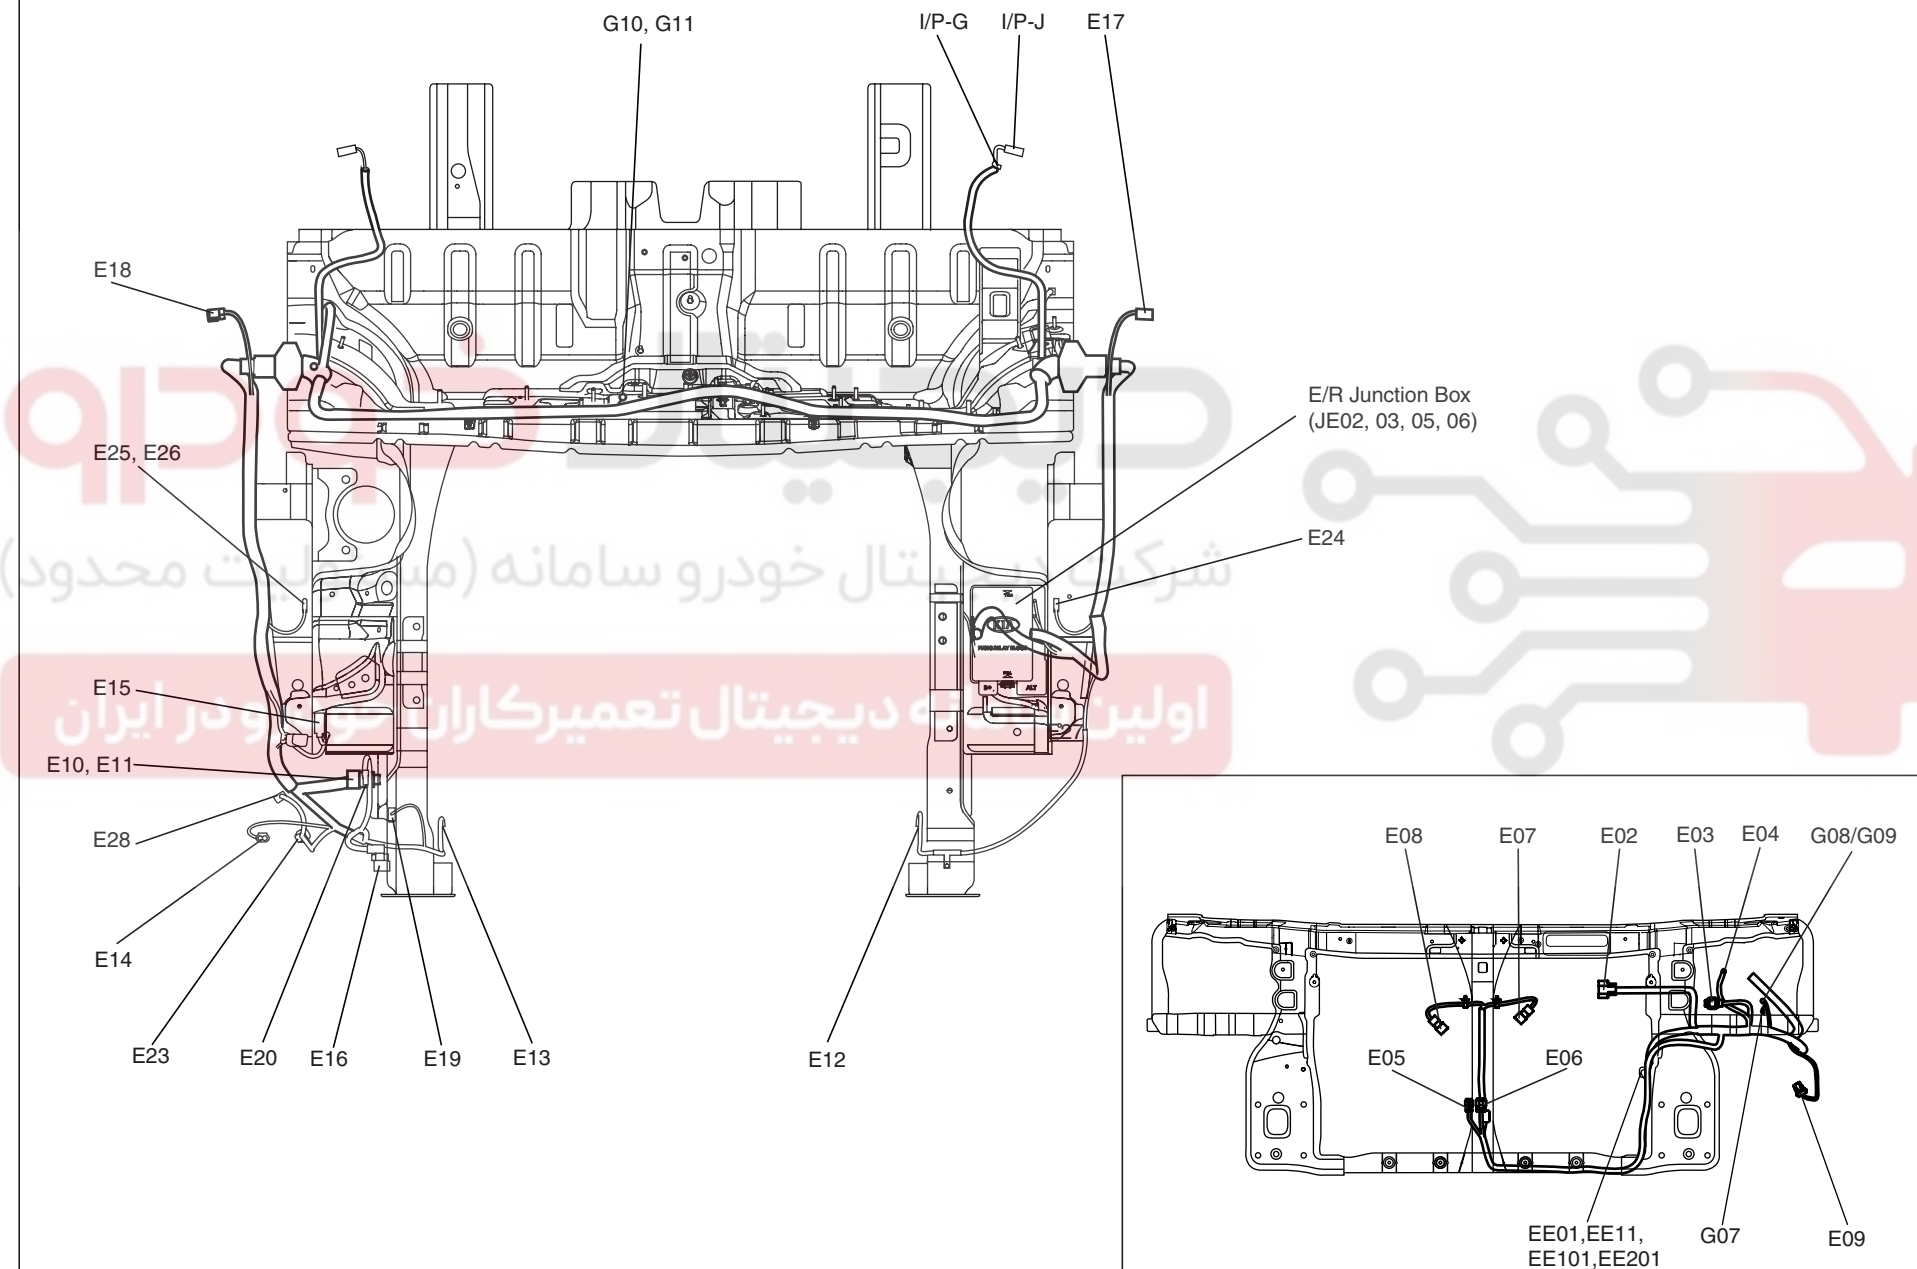

ENGINE HARNESS

ENGINE HARNESS (2)

HL-4

ENGINE HARNESS RH

E10	ABS Control Module
E11	ESP Control Module
E12	Driver Impact Sensor
E13	Assistor Impact Sensor
E14	Front Fog Lamp RH
E15	Hood Switch
E16	Head Lamp RH
E17	Side Repeater Lamp LH
E18	Side Repeater Lamp RH
E19	Triple Switch
E20	Head Lamp Leveling Actuator RH
E23	Washer Motor
E24	Front Wheel Sensor LH
E25	Front Wheel Sensor RH (4WD)
E26	Front Wheel Sensor RH
E28	Washer Level Switch
E31	Air Pressusr Transducer (DSL EURO-IV)
EC01	Connection With CONTROL Harness (2.0 GSL)
EC11	Connection With CONTROL Harness (2.7 GSL)
EC101	Connection With CONTROL Harness (DSL EURO-III)
EC201	Connection With CONTROL Harness (DSL EURO-IV)
EF01	Connection With FLOOR Harness
EI01	Connection With A/BAG Harness
EM01	Connection With MAIN Harness
EM02	Connection With MAIN Harness
I/P-G	Connection With I/P JUNCTION BOX Harness (LHD)
I/P-GR	Connection With I/P JUNCTION BOX Harness (RHD)
I/P-J	Connection With I/P JUNCTION BOX Harness (LHD)
I/P-JR	Connection With I/P JUNCTION BOX Harness (RHD)
JE02	Connection With E/R JUNCTION BOX Harness
JE03	Connection With E/R JUNCTION BOX Harness
JE05	Connection With E/R JUNCTION BOX Harness
JE06	Connection With E/R JUNCTION BOX Harness
G10	Ground
G11	Ground
G12	Ground
G13	Ground
G14	Ground
G15	Ground

ENGINE HARNESS LH

E02	Cooling Fan Motor
E03	Head Lamp LH
E04	Head Lamp Leveling Actuator LH
E05	Ambient Sensor
E06	AQS Sensor
E07	Horn LH
E08	Horn RH
E09	Front Fog Lamp LH
EE01	Connection With BATTERY Harness (2.0 GSL)
EE11	Connection With BATTERY Harness (2.7 GSL)
EE101	Connection With BATTERY Harness (DSL EURO-III)
EE201	Connection With BATTERY Harness (DSL EURO-IV)
JE01	Connection With E/R JUNCTION BOX Harness
G07	Ground
G08	Ground
G09	Ground


BATTERY HARNESS

E51	Alternator (2.0 GSL)
E52	Alternator (2.0 GSL)
E53	Start Motor (2.0 GSL)
E54	Start Solenoid (2.0 GSL)
E61	Alternator (2.7 GSL)
E62	Alternator (2.7 GSL)
E63	Start Motor (2.7 GSL)
E64	Start Solenoid (2.7 GSL)
E104	A/C Compressor (DSL EURO-III)
E151	Alternator (DSL EURO-III)
E152	Alternator (DSL EURO-III)
E153	Start Motor (DSL EURO-III)
E154	Start Solenoid (DSL EURO-III)
E204	A/C Compressor (DSL EURO-IV)
E251	Alternator (DSL EURO-IV)
E252	Alternator (DSL EURO-IV)
E253	Start Motor (DSL EURO-IV)
E254	Start Solenoid (DSL EURO-IV)
EE01	Connection With ENGINE LH Harness (2.0 GSL)
EE11	Connection With ENGINE LH Harness (2.7 GSL)
EE101	Connection With ENGINE LH Harness (DSL EURO-III)
EE201	Connection With ENGINE LH Harness (DSL EURO-IV)

FLOOR HARNESS EE56B61A

FLOOR HARNESS (1)

HL-5

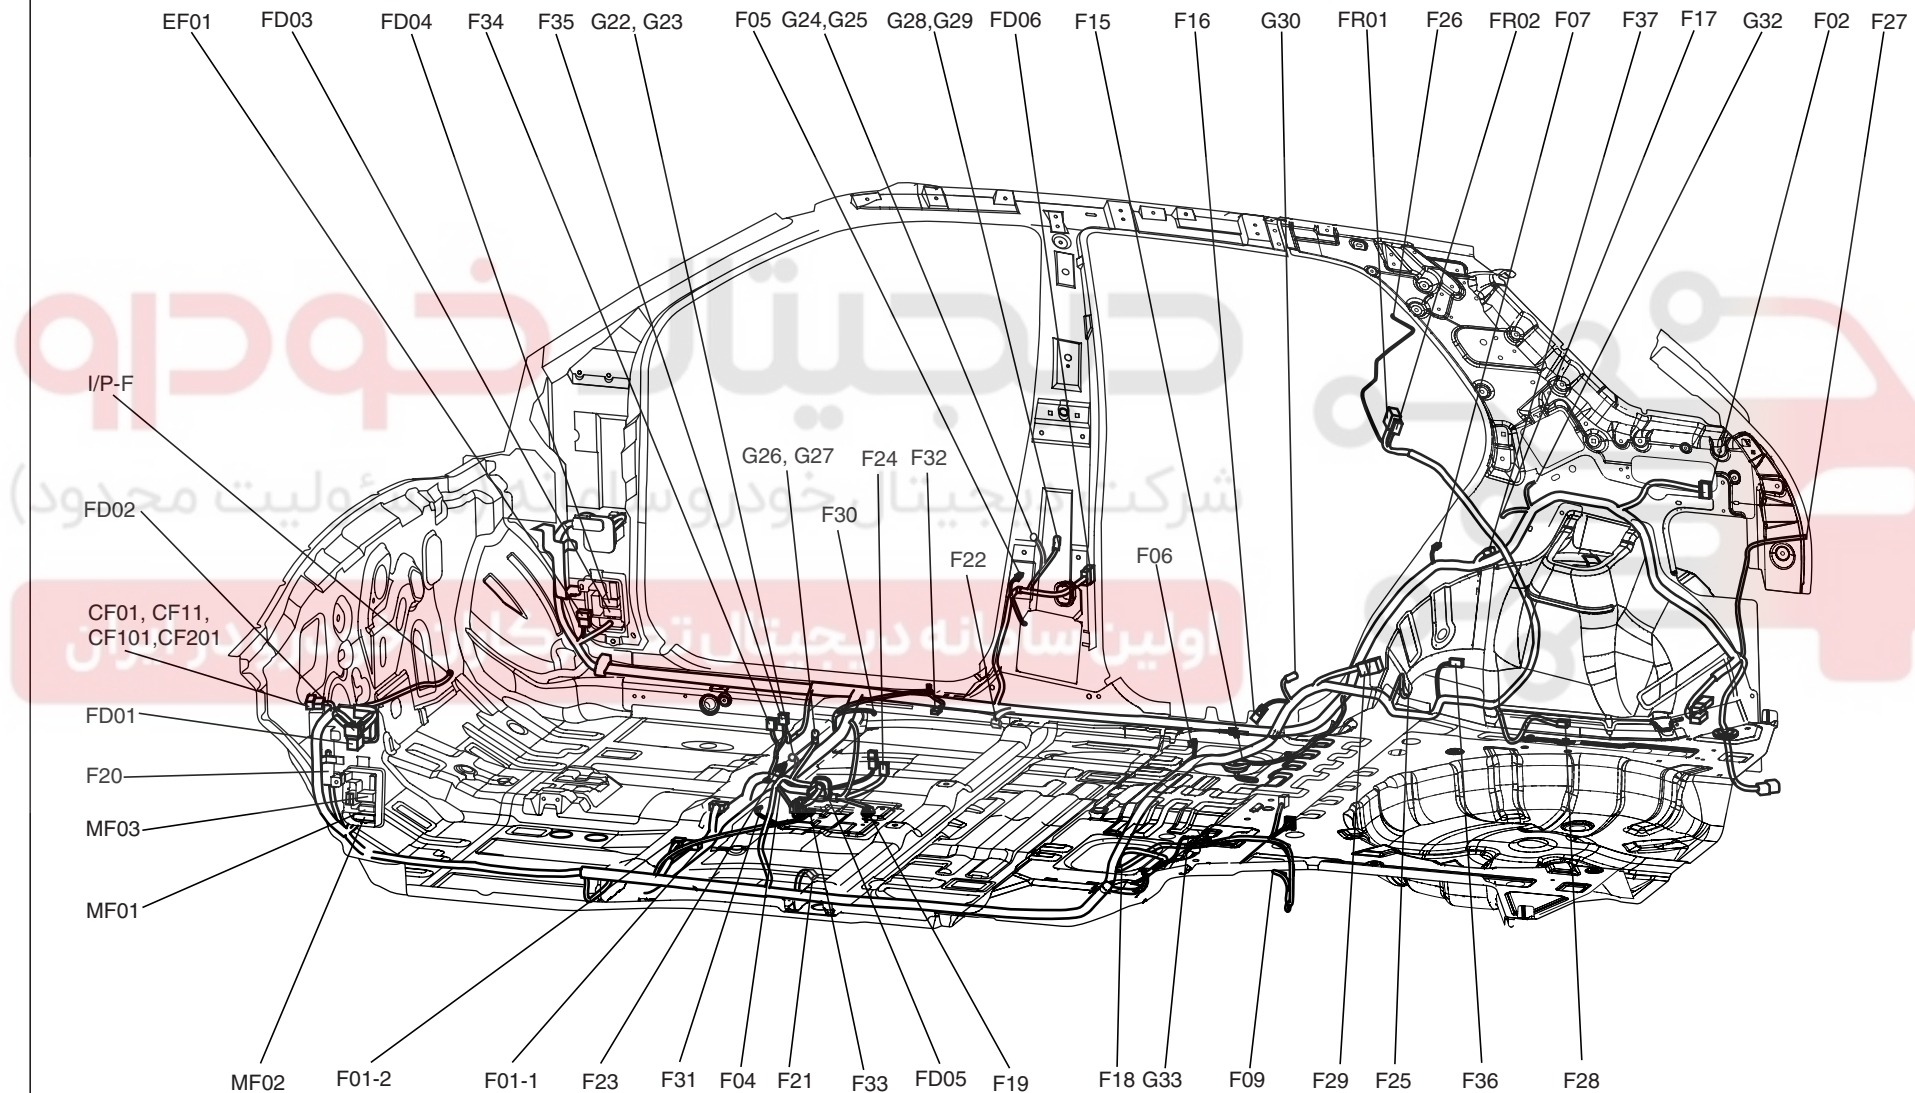

FLOOR HARNESS

FLOOR HARNESS (2)

HL-6

FLOOR HARNESS


F01-1	AMP #1	F36	Luggage Lamp
F01-2	AMP #2	F37	Joint Connector
F04	Front Door Switch LH	CF01	Connection With CONTROL Harness (2.0 GSL)
F05	Front Door Switch RH	CF11	Connection With CONTROL Harness (2.7 GSL)
F06	Rear Door Switch LH	CF101	Connection With CONTROL Harness (DSL EURO-III)
F07	Rear Door Switch RH	CF201	Connection With CONTROL Harness (DSL EURO-IV)
F09	Electronic Magnetic Valve Clutch	EF01	Connection With ENGINE RH Harness
F15	Sub Sender	FD01	Connection With DRIVER DOOR Harness
F16	Rear Wheel Sensor LH	FD02	Connection With DRIVER DOOR Harness
F17	Rear Wheel Sensor RH	FD03	Connection With PASSENGER DOOR Harness
F18	Fuel Sender & Fuel Pump Motor	FD04	Connection With PASSENGER DOOR Harness
F19	G-SENSOR	FD05	Connection With REAR DOOR Harness LH
F20	Joint Connecetor	FD06	Connection With REAR DOOR Harness RH
F21	Joint Connecetor	FR01	Connection With TAIL GATE EXT. Harness
F22	Joint Connecetor	FR02	Connection With TAIL GATE EXT. Harness
F23	Parking Brake Switch	MF01	Connection With MAIN Harness
F24	Front Power Outlet	MF02	Connection With MAIN Harness
F25	Rear Power Outlet	MF03	Connection With MAIN Harness
F26	Roof Antenna	I/P-F	Connection With I/P JUNCTION BOX Harness (LHD)
F27	Rear Combi Lamp RH	I/P-FR	Connection With I/P JUNCTION BOX Harness (RHD)
F28	Rear Combi Lamp LH	G22	Ground
F29	Rear Wiper Relay	G23	Ground
F30	Sub Woofer	G24	Ground
F31	Driver Seat Belt Switch	G25	Ground
F32	Passenger Seat Warmer	G26	Ground
F33	Driver Seat Warmer	G27	Ground
F34	Passenger Seat Warmer Switch	G28	Ground
F35	Driver Seat Warmer Switch	G29	Ground
		G30	Ground
		G32	Ground
		G33	Ground

CONTROL HARNESS E9D2D48C

CONTROL HARNESS (1)

HL-7

2.0 GASOLINE

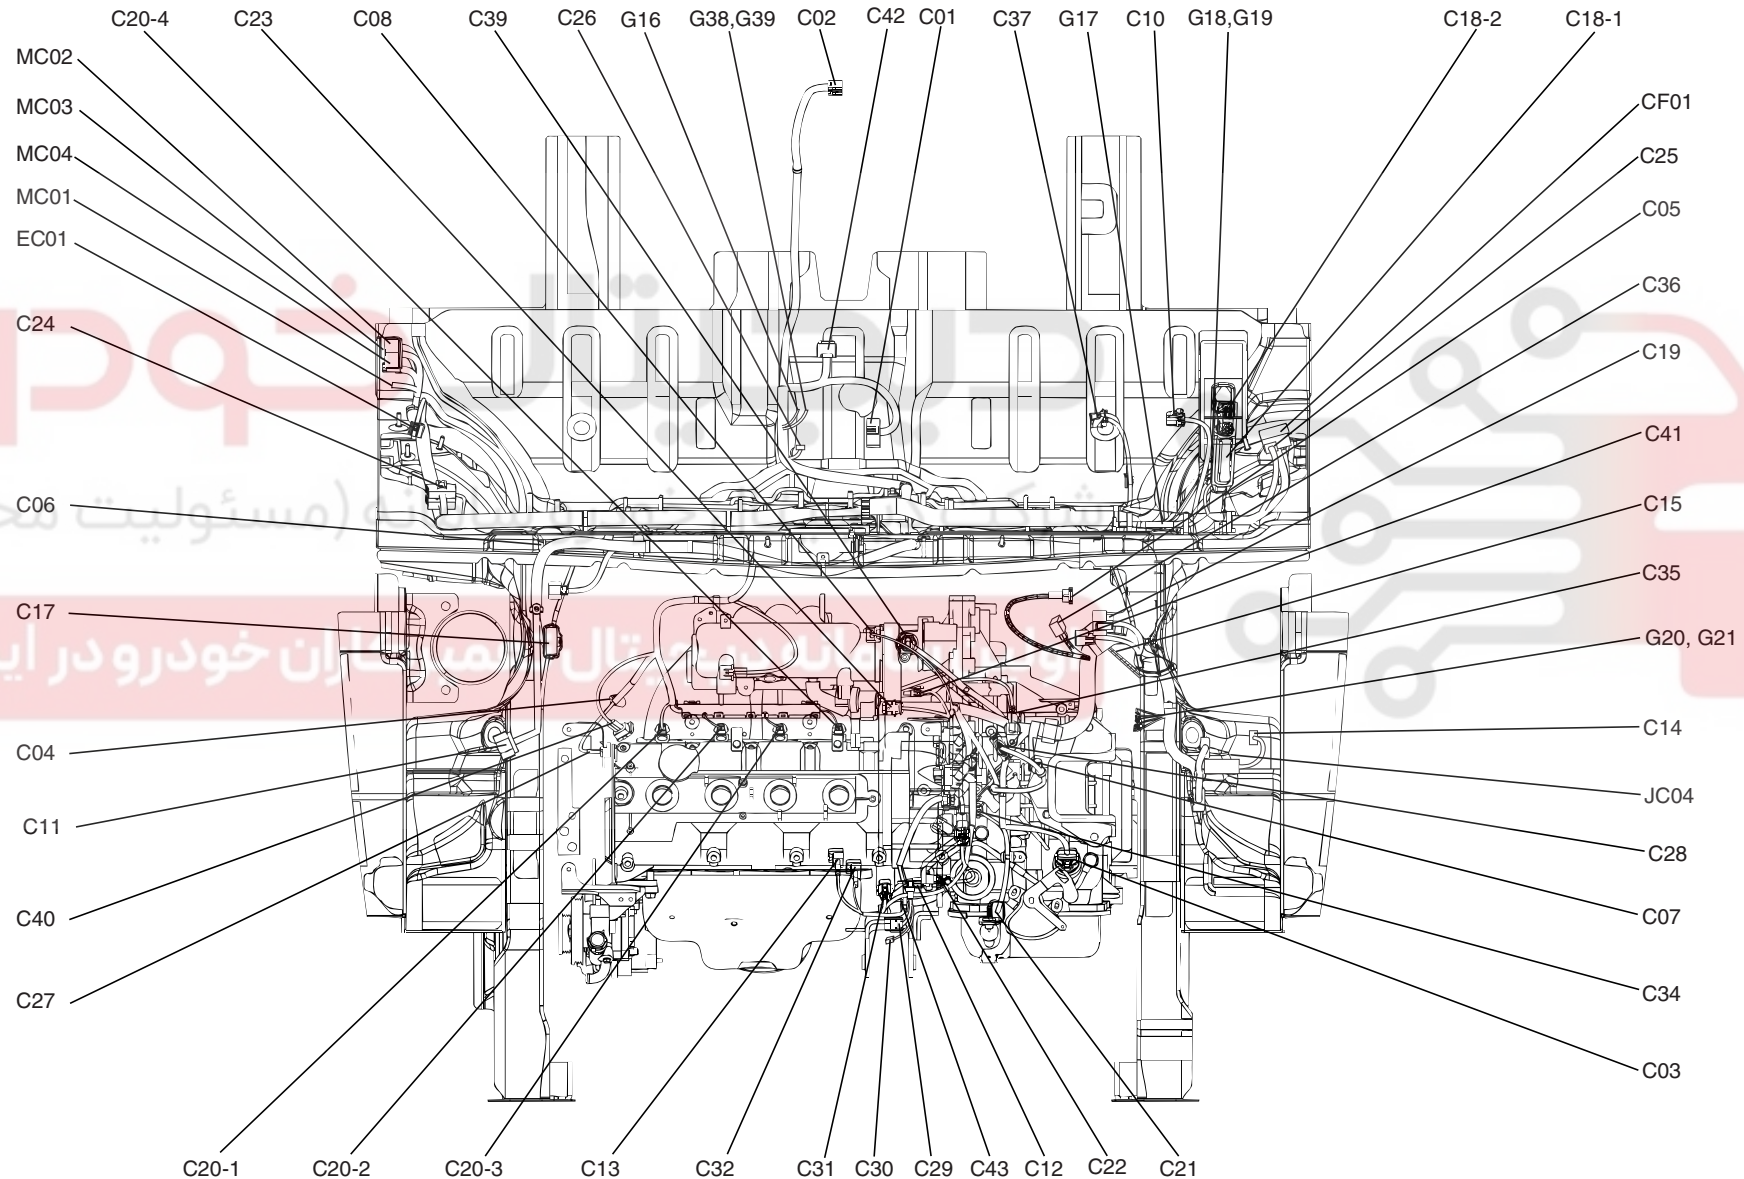

CONTROL HARNESS

CONTROL HARNESS (2)

HL-8

CONTROL HARNESS(2.0 GASOLINE)


C01	4WD ECM	C28	Mass Air Flow Sensor
C02	ATM Lever Switch	C29	Oxygen Sensor #1
C03	ATM Solenoid Valve	C30	Oxygen Sensor #2
C04	A/C Compressor	C31	Oil Pressure Switch
C05	Brake Fluid Level Sensor	C32	Oil Temperature Sensor
C06	Burglar Horn	C34	Pulse Generator 'A'
C07	Back-Up Lamp Switch	C35	Pulse Generator 'B'
C08	Canister Purge Control Valve	C36	Pressure Sensor
C10	Cruise Clutch Pedal Position Switch	C37	Stop Lamp Switch
C11	Cruise Control Module	C39	Vehicle Speed Sensor
C12	Crankshaft Position Sensor	C40	Camshaft Position Sensor
C13	CVVT Oil Control Valve	C41	Throttle Position Sensor
C14	Multipurpose Check Connector	C42	G-YAM Sensor
C15	Windshield Defogger	C43	Engine Coolant Temperature Sensor & Sender
C17	DRL Control Module	CF01	Connection With FLOOR Harness
C18-1	ECM	EC01	Connection With ENGINE Harness RH
C18-2	TCM	MC01	Connection With MAIN Harness
C19	Front Wiper Motor	MC02	Connection With MAIN Harness
C20-1	Injector #1	MC03	Connection With MAIN Harness
C20-2	Injector #2	MC04	Connection With MAIN Harness
C20-3	Injector #3	JC04	Connection With E/R JUNCTION BOX Harness
C20-4	Injector #4	G16	Ground
C21	Transaxle Range Switch	G17	Ground
C22	Ignition Coil	G18	Ground
C23	Idle Speed Control Actuator	G19	Ground
C24	Joint Connector	G20	Ground
C25	Joint Connector	G21	Ground
C26	Joint Connector	G38	Ground
C27	Knock Sensor	G39	Ground

CONTROL HARNESS

CONTROL HARNESS (3)

HL-9

2.7 GASOLINE

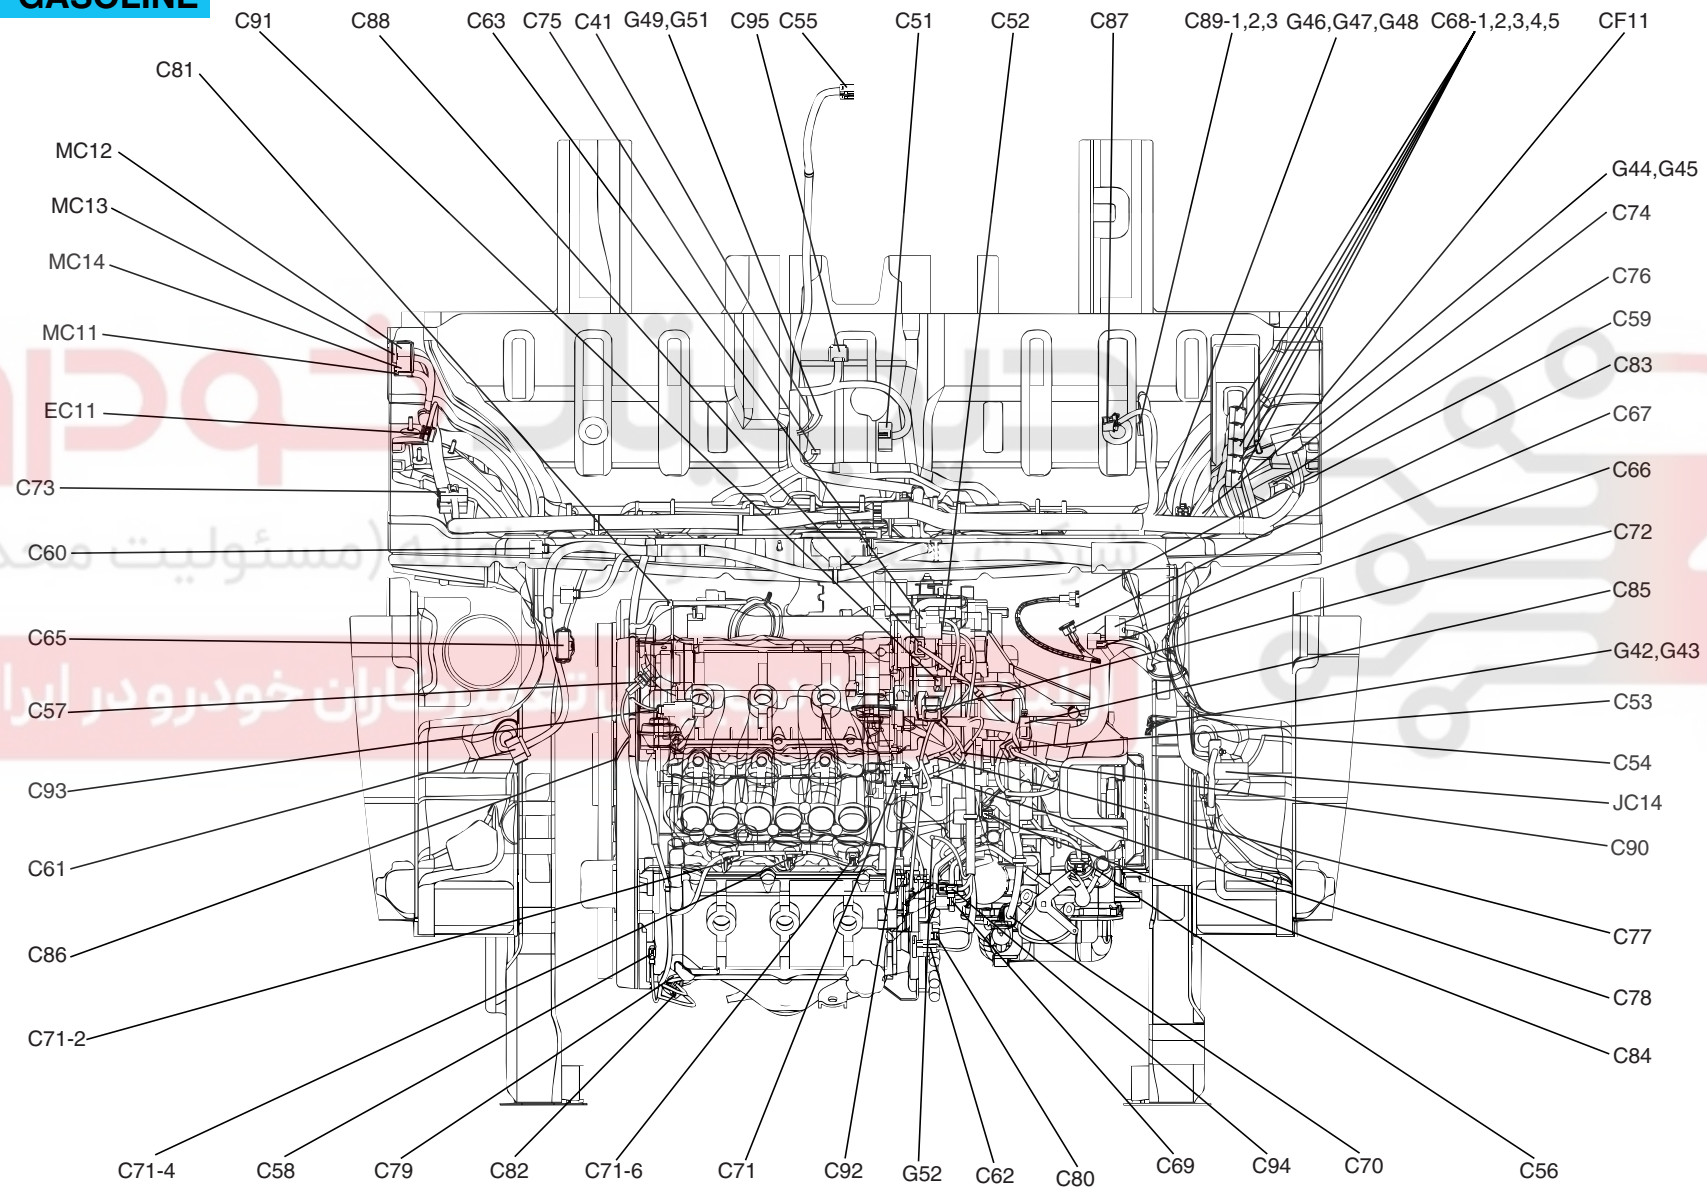

CONTROL HARNESS

CONTROL HARNESS (4)

HL-10

CONTROL HARNESS (2.7 GASOLINE)


C51	4WD ECM	C81	Oxygen Sensor #4 (EURO)
C52	Oxygen Sensor #1	C82	Oil Pressure Switch
C53	Mass Air flow Sensor	C83	Pressure Sensor
C54	Multipurpose Check Connector	C84	Pulse Generator "A"
C55	ATM Lever Switch	C85	Pulse Generator "B"
C56	ATM Solenoid Valve	C86	Power Steering Switch
C57	Air Temperature Sensor	C87	Stop Lamp Switch
C58	A/C Compressor	C88	Vehicle Speed Sensor
C59	Brake Fluid Level Sensor	C89-1	TCM
C60	Burglar Horn	C89-2	TCM
C61	Cruise Control Module	C89-3	TCM
C62	Crankshaft Position Sensor	C90	Camshaft Position Sensor
C63	Canister Purge Control Valve	C91	Throttle Position Sensor
C65	DRL Control Module	C92	Variable Intake Manifold Control Motor #2
C66	Windshield Defogger	C93	Variable Intake Manifold Control Motor #1
C67	Front Wiper Motor	C94	Engine Coolant Temperature Sensor & Sender
C68-1	ECM	C95	G-YAW Sensor
C68-2	ECM	CF11	Connection With FLOOR Harness
C68-3	ECM	EC11	Connection With ENGINE Harness RH
C68-4	ECM	MC11	Connection With MAIN Harness
C68-5	ECM	MC12	Connection With MAIN Harness
C69	Ignition Coil	MC13	Connection With MAIN Harness
C70	Transaxle Range Switch	MC14	Connection With MAIN Harness
C71	Connection With INJECTOR Harness #1, #3, #5	JC14	Connection With E/R JUNCTION BOX Harness
C71-2	Injector #2	G41	Ground
C71-4	Injector #4	G42	Ground
C71-6	Injector #6	G43	Ground
C72	Idle Speed Control Actuator	G44	Ground
C73	Joint Connector	G45	Ground
C74	Joint Connector	G46	Ground
C75	Joint Connector	G47	Ground
C76	Joint Connector	G48	Ground
C77	Knock Sensor #2	G49	Ground
C78	Knock Sensor #1	G51	Ground
C79	Oxygen Sensor #2	G52	Ground
C80	Oxygen Sensor #3 (EURO)		

CONTROL HARNESS

CONTROL HARNESS (5)

HL-11

DIESEL EURO-III

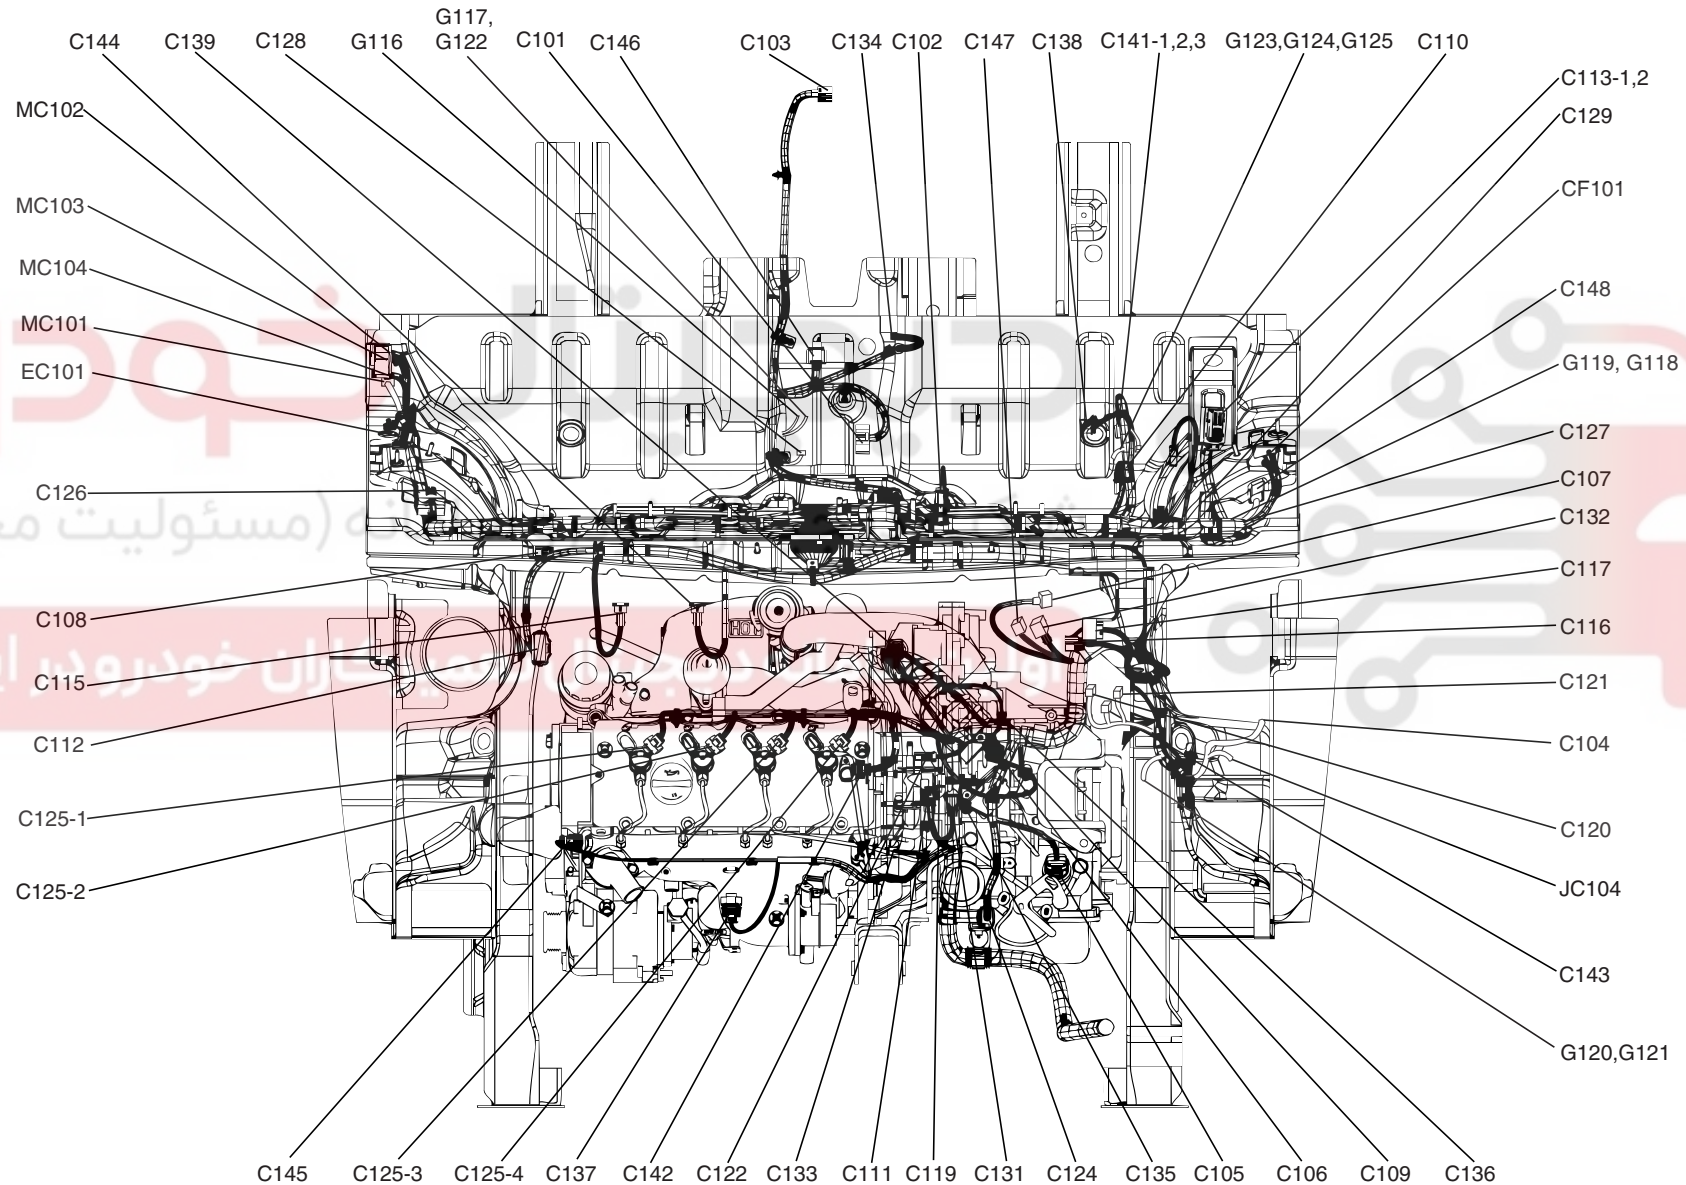

CONTROL HARNESS

CONTROL HARNESS (6)

HL-12

CONTROL HARNESS (DIESEL EURO-III)


C101	4WD ECM	C135	Pulse Generator 'A'
C102	Accelerator Pedal Sensor	C136	Pulse Generator 'B'
C103	ATM Lever Switch	C137	Rail Pressure Sensor
C104	Multipurpose Check Connector	C138	Stop Lamp Switch
C105	ATM Solenoid Valve	C139	Vehicle Speed Sensor
C106	Air Flow Sensor	C141-1	TCM
C107	Brake Fluid Level Sensor	C141-2	TCM
C108	Burglar Horn	C141-3	TCM
C109	Back-Up Lamp Switch	C142	Camshaft Position Sensor
C110	Clutch Switch	C143	Thermo Switch
C111	Crankshaft Position Sensor	C144	Throttle Flap Actuator
C112	DRL Control Module	C145	Engine Coolant Temperature Sensor & Sender
C113-1	ECM	C146	G-YAW Sensor
C113-2	ECM	C147	Vacuum Switch
C115	EGR Actuator	C148	Joint Connector
C116	Windshield Defogger	C151	Glow Plug Relay
C117	Front Wiper Motor	C153	PTC Heater Relay #1
C119	Fuel Temperature Sensor	C154	PTC Heater Relay #2
C120	Fuel Filter Heater	C155	PTC Heater Relay #3
C121	Fuel Filter Warning Switch	C156	Fuel Filter Heater Relay
C122	Glow Plug	CF101	Connection With FLOOR Harness
C124	Transaxle Range Switch	EC101	Connection With ENGINE Harness RH
C125-1	Injector #1	MC101	Connection With MAIN Harness
C125-2	Injector #1	MC102	Connection With MAIN Harness
C125-3	Injector #1	MC103	Connection With MAIN Harness
C125-4	Injector #1	MC104	Connection With MAIN Harness
C126	Joint Connector	JC104	Connection With E/R JUNCTION BOX Harness
C127	Joint Connector	G116	Ground
C128	Joint Connector	G117	Ground
C129	Joint Connector	G118	Ground
C130	First Gear Switch	G119	Ground
C131	Oil Pressure Switch	G120	Ground
C132	Pressure Sensor	G121	Ground
C133	Rail Pressure Regulator	G122	Ground
C134	PTC Heater	G123	Ground
		G124	Ground
		G125	Ground

CONTROL HARNESS

CONTROL HARNESS (7)

HL-13

DIESEL EURO-IV

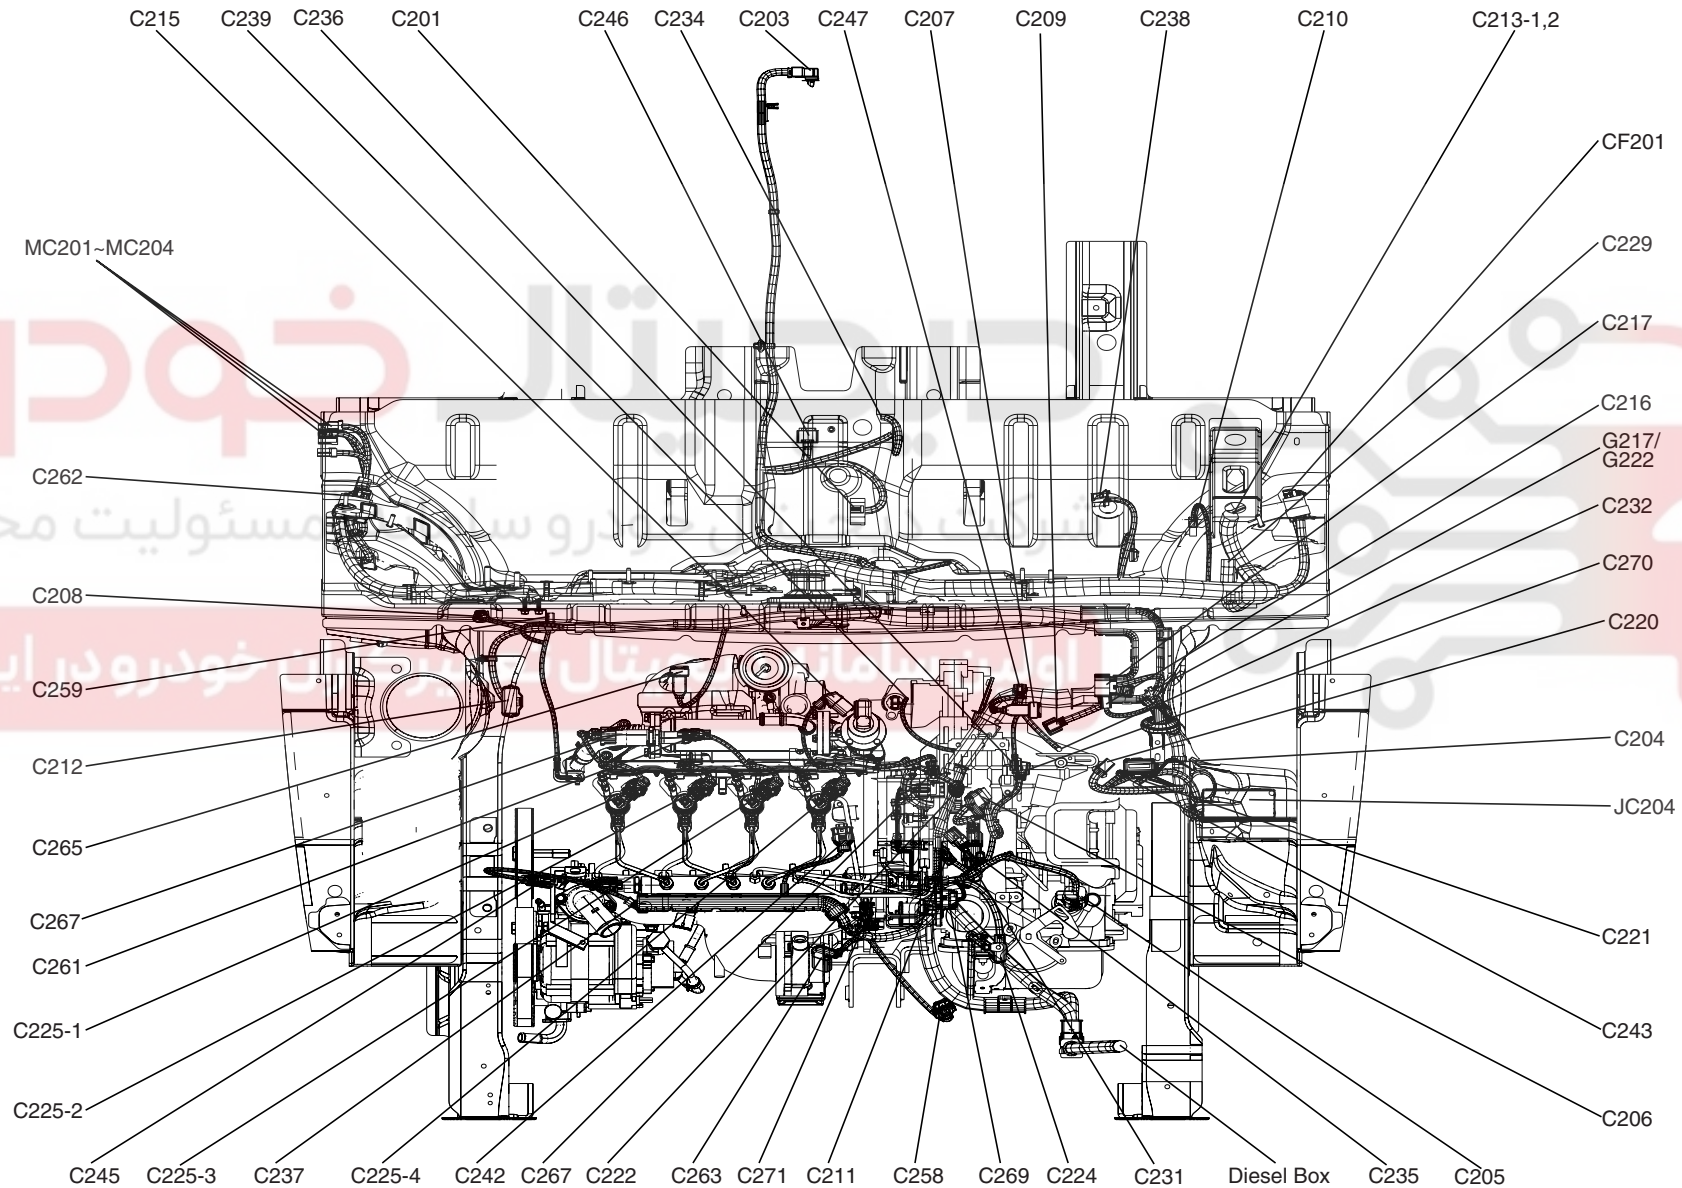

CONTROL HARNESS

CONTROL HARNESS (8)

HL-14

CONTROL HARNESS (DIESEL EURO-IV)

C201	4WD ECM	C241-1	TCM
C202	Accelerator Pedal Sensor	C241-2	TCM
C203	ATM Lever Switch	C241-3	TCM
C204	Multipurpose Check Connector	C242	Camshaft Position Sensor
C205	ATM Solenoid Valve	C243	Thermo Switch
C206	Air Flow Sensor	C245	Engine Coolant Temperature Sensor & Sender
C207	Brake Fluid Level Sensor	C246	G-YAW Sensor
C208	Burglar Horn	C247	Vacuum Switch
C209	Back-Up Lamp Switch	C248	Joint Connector
C210	Clutch Switch	C251	Glow Plug Relay
C211	Crankshaft Position Sensor	C253	PTC Heater Relay #1
C212	DRL Control Module	C254	PTC Heater Relay #2
C213-1	ECM	C255	PTC Heater Relay #3
C213-2	ECM	C256	Fuel Filter Heater Relay
C215	EGR Actuator	C258	Boost Pressure Sensor
C216	Windshield Defogger	C259	Differential Pressure Sensor
C217	Front Wiper Motor	C261	Exhaust Gas Temperature Sensor #1
C219	Fuel Temperature Sensor	C262	Exhaust Gas Temperature Sensor #2
C220	Fuel Filter Heater	C263	Electrical Throttle Control Actuator
C221	Fuel Filter Warning Switch	C265	VGT Actuator
C222	Glow Plug	C267	Fuel Metering Unit
C224	Transaxle Range Switch	C268	Lambda Sensor
C225-1	Injector #1	C269	Variable Swirl Control Actuator
C225-2	Injector #1	C270	Neutral Switch
C225-3	Injector #1	C271	Fuel Pressure Regulating Valve
C225-4	Injector #1	CF201	Connection With FLOOR Harness
C226	Joint Connector	EC201	Connection With ENGINE Harness RH
C227	Joint Connector	MC201	Connection With MAIN Harness
C228	Joint Connector	MC202	Connection With MAIN Harness
C231	Oil Pressure Switch	MC203	Connection With MAIN Harness
C232	Pressure Sensor	MC204	Connection With MAIN Harness
C234	PTC Heater	JC204	Connection With E/R JUNCTION BOX Harness
C235	Pulse Generator 'A'	G216	Ground
C236	Pulse Generator 'B'	G217	Ground
C237	Rail Pressure Sensor	G218	Ground
C238	Stop Lamp Switch	G220	Ground
C239	Vehicle Speed Sensor(A/T)	G221	Ground
C240	Vehicle Speed Sensor(M/T)	G222	Ground
		G223	Ground


AIR BAG HARNESS E2A47D60

AIR BAG HARNESS (1)

HL-15

A/BAG HARNESS


- I01 Driver Side Air Bag
- I02 Passenger Side Air Bag
- I03 Multifunction Switch (Driver Air Bag)
- I04 Passenger Air Bag
- I06 Passenger Seat Buckle Switch
- I07 Driver Seat Buckle Switch
- I08 Driver Side Impact Sensor
- I09 Passenger Side Impact Sensor
- I10 SRS Control Module
- I11 Passenger Curtain Air Bag
- I12 Driver Curtain Air Bag
- I13 Passenger Seat Belt Pretensioner
- I14 Driver Seat Belt Pretensioner
- EI01 Connection With FRONT Harness LH
- I/P-B Connection With I/P JUNCTION BOX Harness (LHD)
- I/P-BR Connection With I/P JUNCTION BOX Harness (RHD)
- MI05 Connection With MAIN Harness
- G37 Ground

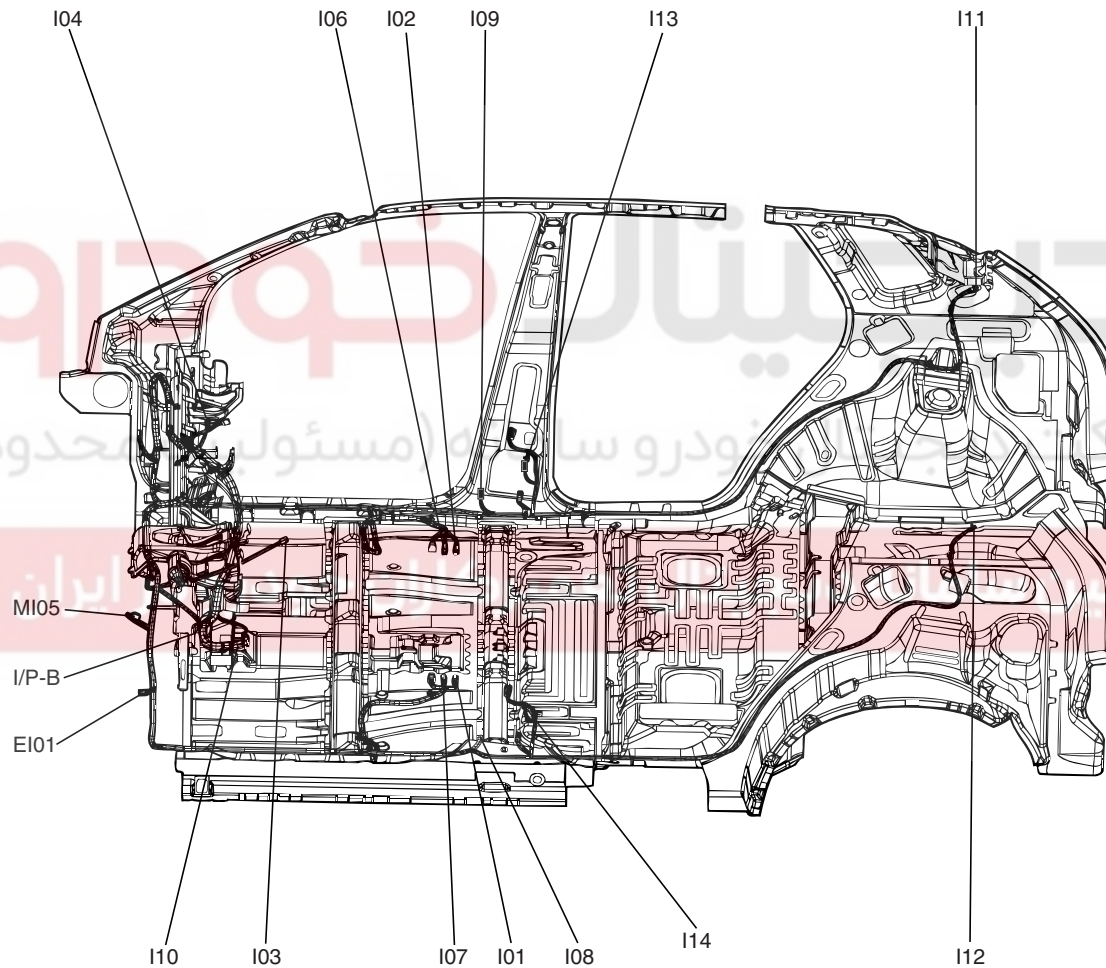

A/C HARNESS EFFE9DFC

A/C HARNESS (1)

HL-16

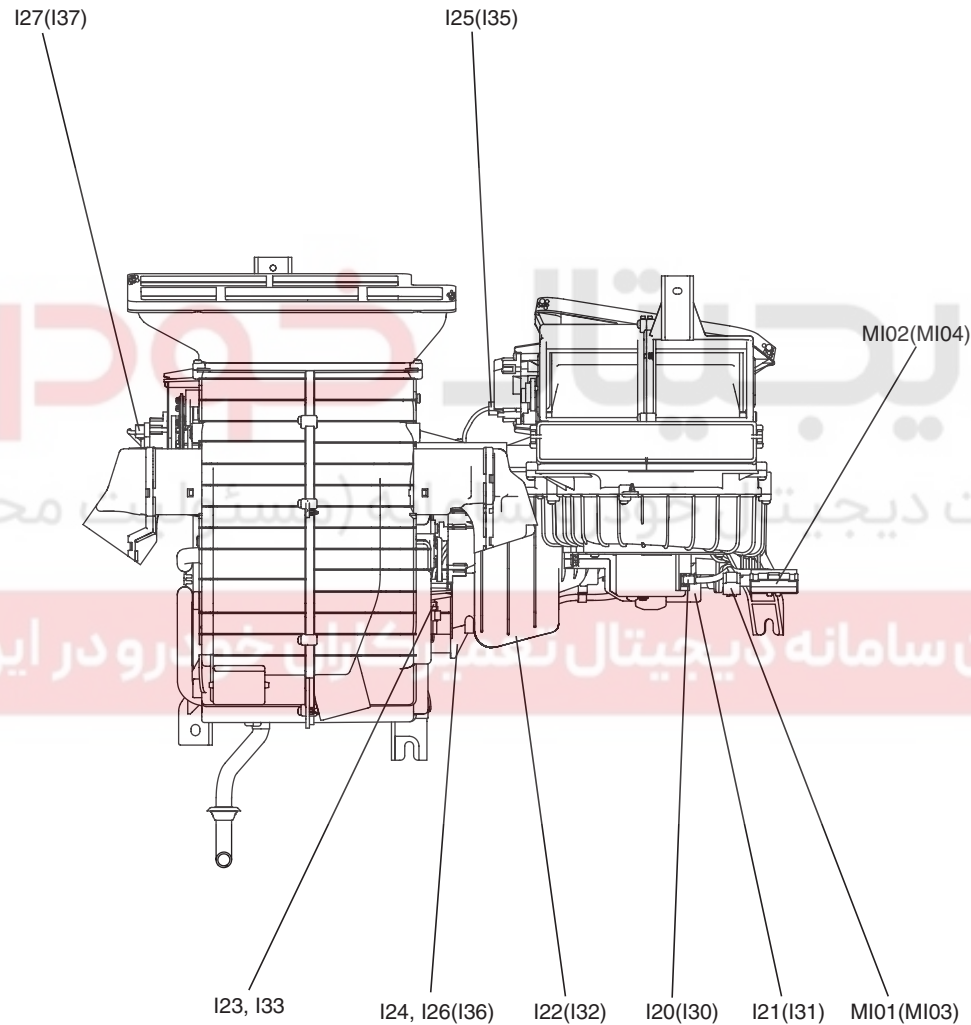

A/C HARNESS (AUTO)

I20	Bower Motor
I21	Bower Relay
I22	Power Mosfet
I23	Mix Actuator
I24	Water Temperature Sensor
I25	Intake Actuator
I26	Evaporator Temperature Sensor
I27	Mode Actuator
MI01	Connection With MAIN Harness
MI02	Connection With MAIN Harness

A/C HARNESS (MANUAL)

I30	Bower Motor
I31	Bower Relay
I32	Power Mosfet
I33	Mix Actuator
I35	Intake Actuator
I36	Evaporator Temperature Sensor
I37	Mode Actuator
MI02	Connection With MAIN Harness
MI04	Connection With MAIN Harness


() : MANUAL A/C

DOOR HARNESS E754DBE1

DOOR HARNESS (1)

HL-17

FRONT DOOR

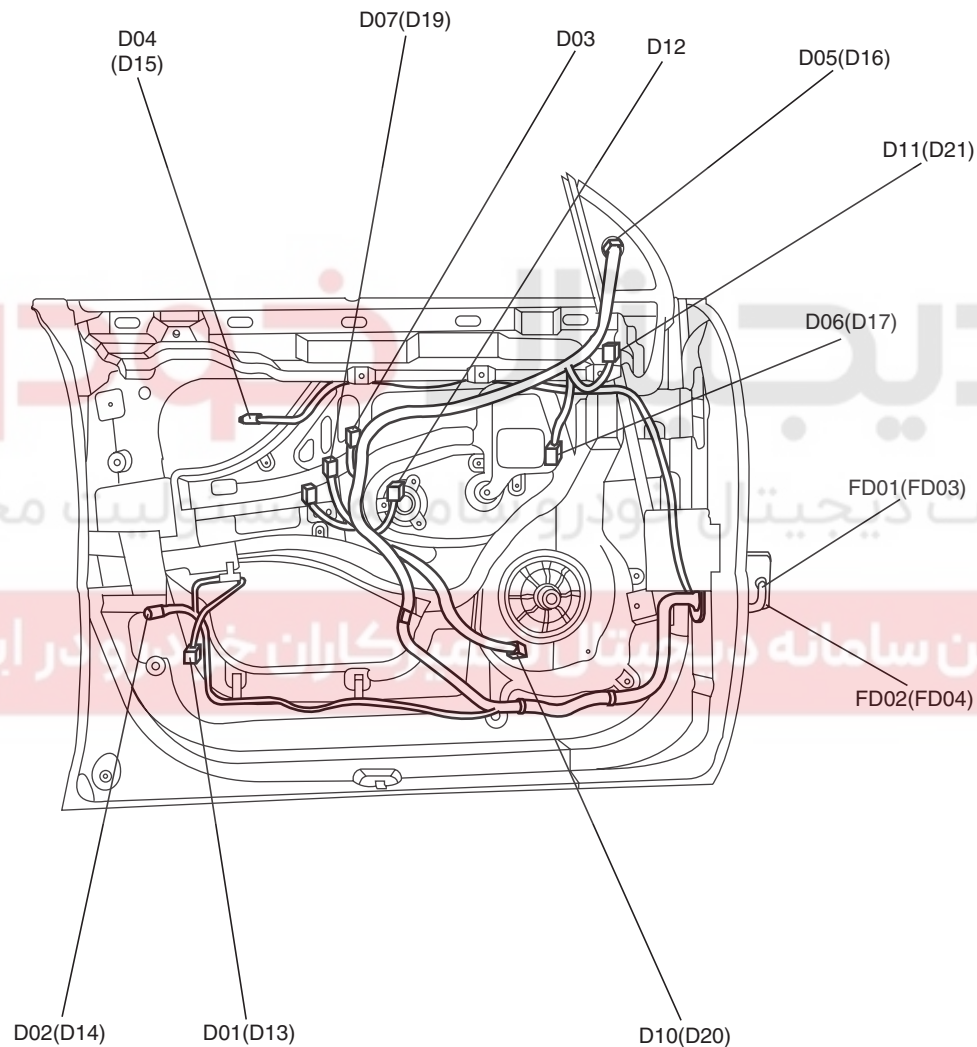

DRIVER DOOR HARNESS

- D01 Driver Door Lamp
- D02 Driver Door Lock Actuator (LHD)
- D02R Driver Door Lock Actuator (RHD)
- D03 Joint Connector
- D04 Driver Door Key Switch
- D05 Driver Power Outside Mirror Motor
- D06 Driver Power Window Motor
- D07 Driver Power Window Switch
- D10 Driver Door Speaker
- D11 Driver Tweeter Speaker
- D12 Power Outside Mirror Switch (LHD)
- D12R Power Outside Mirror Switch (RHD)
- FD01 Connection With FLOOR Harness
- FD02 Connection With FLOOR Harness

PASSENGER DOOR HARNESS

- D13 Passenger Door Lock Actuator (LHD)
- D14 Passenger Door Lock Actuator (RHD)
- D14R Passenger Door Key Switch
- D15 Passenger Power Outside Mirror Motor
- D16 Passengerr Power Window Motor
- D17 Passenger Power Window Switch
- D19 Passenger Door Speaker
- D20 Passenger Tweeter Speaker
- D21 Connection With FLOOR Harness
- FD03 Connection With FLOOR Harness
- FD04


() : PASSENGER

DOOR HARNESS

DOOR HARNESS (2)

HL-18

REAR DOOR

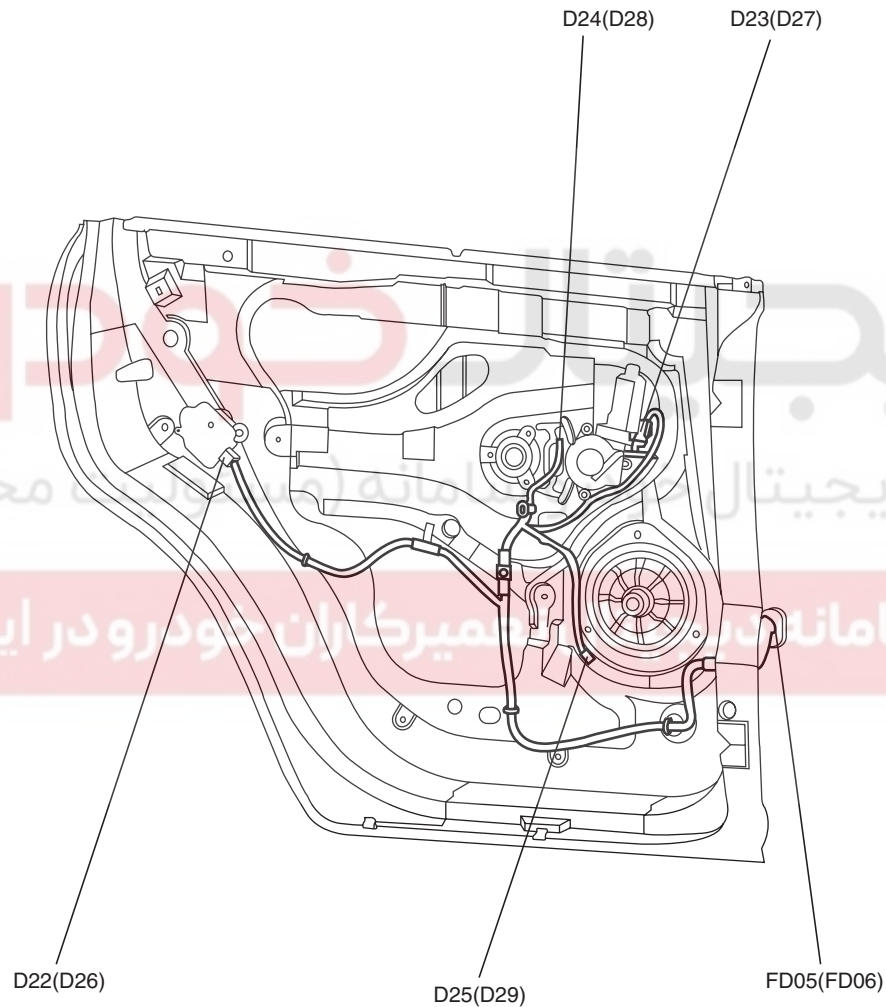

REAR DOOR HARNESS LH

- D22 Rear Door Lock Actuator LH
- D23 Rear Power Window Motor LH
- D24 Rear Power Window Switch LH
- D25 Rear Door Speaker LH
- FD05 Connection With FLOOR Harness

REAR DOOR HARNESS RH


- D26 Rear Door Lock Actuator RH
- D27 Rear Power Window Motor RH
- D28 Rear Power Window Switch RH
- D29 Rear Door Speaker RH
- FD06 Connection With FLOOR Harness

() : RIGHT

TAIL GATE HARNESS E279E58B

TAIL GATE HARNESS (1)

HL-19

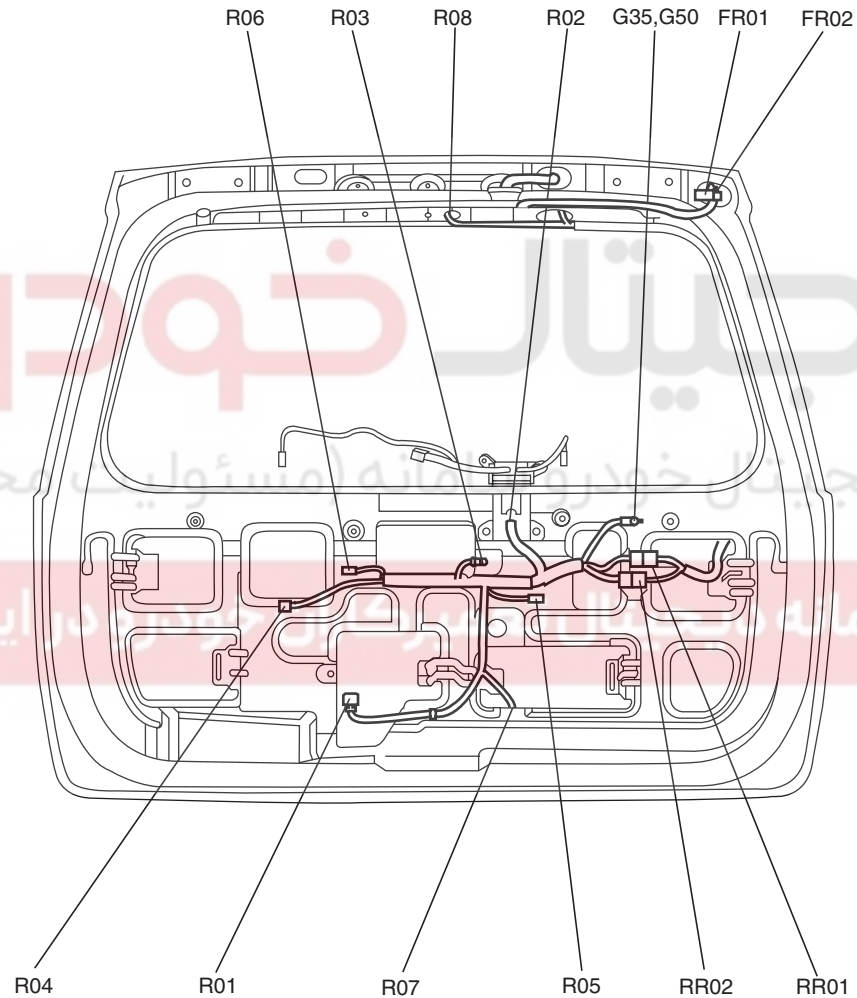

TAIL GATE HARNESS

R01	Tail Gate Lock Actuator
R02	Contact
R03	Rear Window Switch
R04	Tail Gate Key Switch
R05	License Lamp LH
R06	License Lamp RH
R07	Tail Gate Switch
RR01	Connection With TAIL GATE EXT. Harness
RR02	Connection With TAIL GATE EXT. Harness
G35	Ground
G50	Ground

TAIL GATE EXT. HARNESS

R08	High Mounted Stop Lamp
FR01	Connection With FLOOR Harness
FR02	Connection With FLOOR Harness
RR01	Connection With TAIL GATE Harness
RR02	Connection With TAIL GATE Harness