


Starting system (JLB-4G15-4AT)

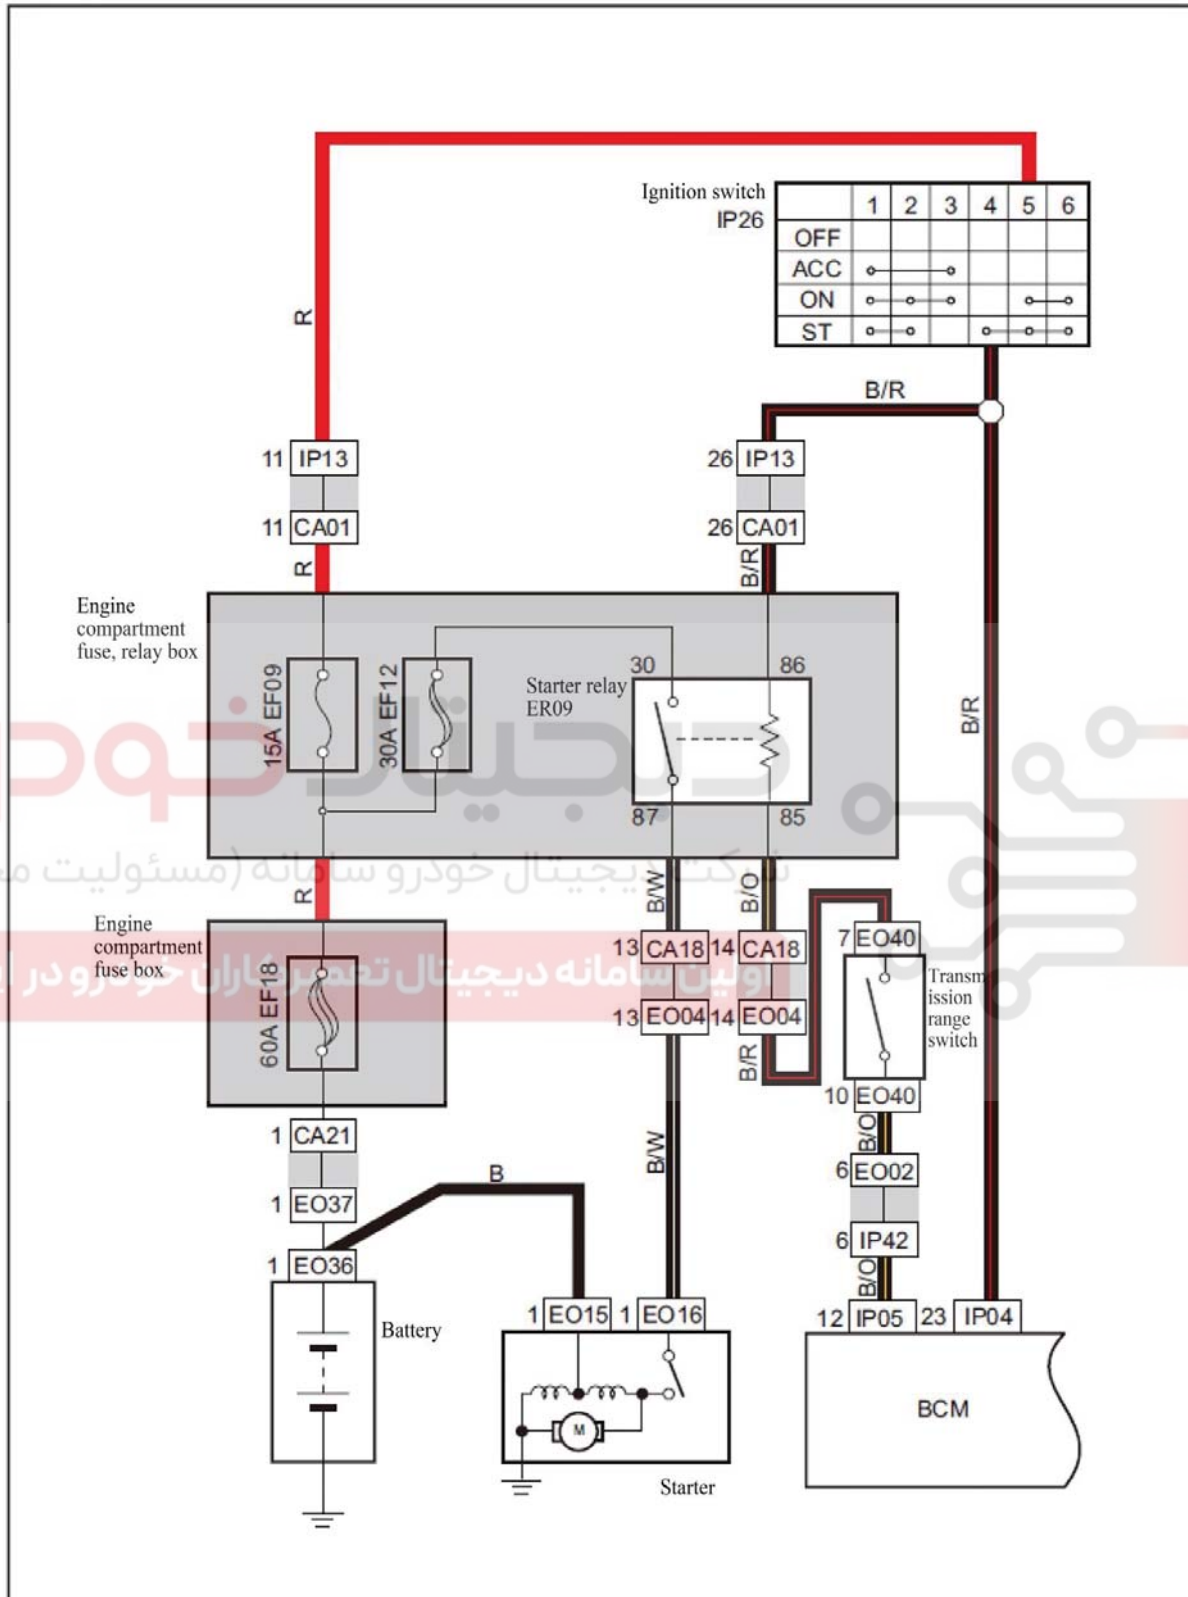

Harness connector	Name	Page
CA01	To instrument harness connector	33
CA18	To engine harness connector	33
IP13	To engine compartment harness connector	54
CA21	Fuse box (blade terminal)	32
EO37	Fuse box (blade terminal)	48
EO36	Battery (blade terminal 1)	48
EO15	Starter harness connector	48
EO16	Starter solenoid switch harness connector	48
CA18	To engine harness connector	32
EO04	To engine compartment harness connector	49
EO02	To instrument harness connector A	49
EO40	Transmission range switch harness connector (AT)	48
IP05	BCM harness connector B	54
IP04	BCM harness connector A2	54

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

