


ECM ignition System (JL4G18-G-CVT)

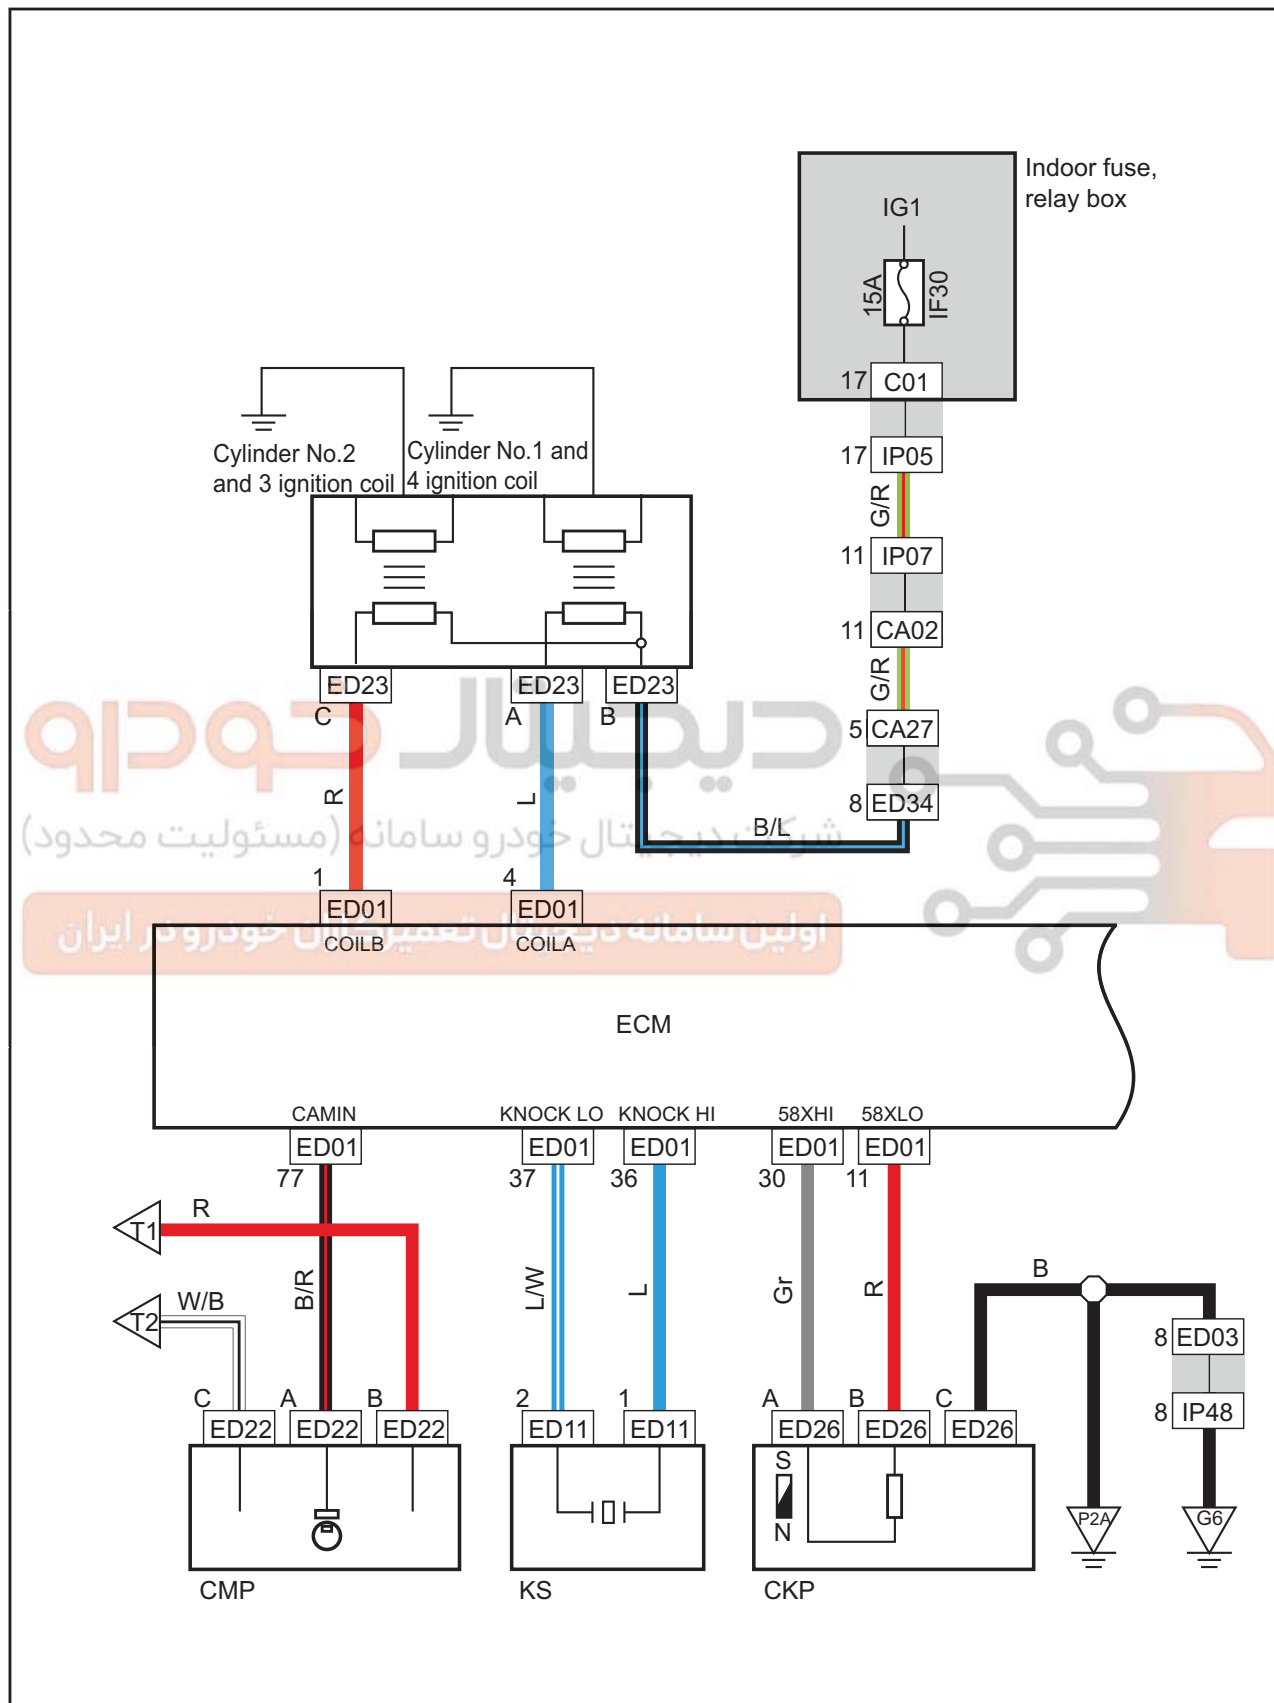

Harness connector	Name	Pages
C01	Rear Connector of Indoor Fuse Box	17
IP05	To harness connector of indoor fuse box	80
IP07	To harness connector of engine compartment harness	80
IP48	To engine harness connector	80
ED23	Harness connector of ignition coil	43
ED34	To harness connector of engine compartment distribution box (3)	43
ED01	Harness connector of engine control module	42
ED03	To instrument harness connector	42
ED22	Harness connector of camshaft position sensor	43
ED11	Harness connector of knock sensor	43
ED26	Engine speed sensor harness connector	43
CA02	To harness connector of instrument harness 2	22
CA27	To harness connector of engine harness	23
G6	Instrument grounding	125
P2A	Engine grounding	121

Connection point	Descriptions	Pages
T1	Sensor grounding	213
T2	5Vpower supply of sensor	213