
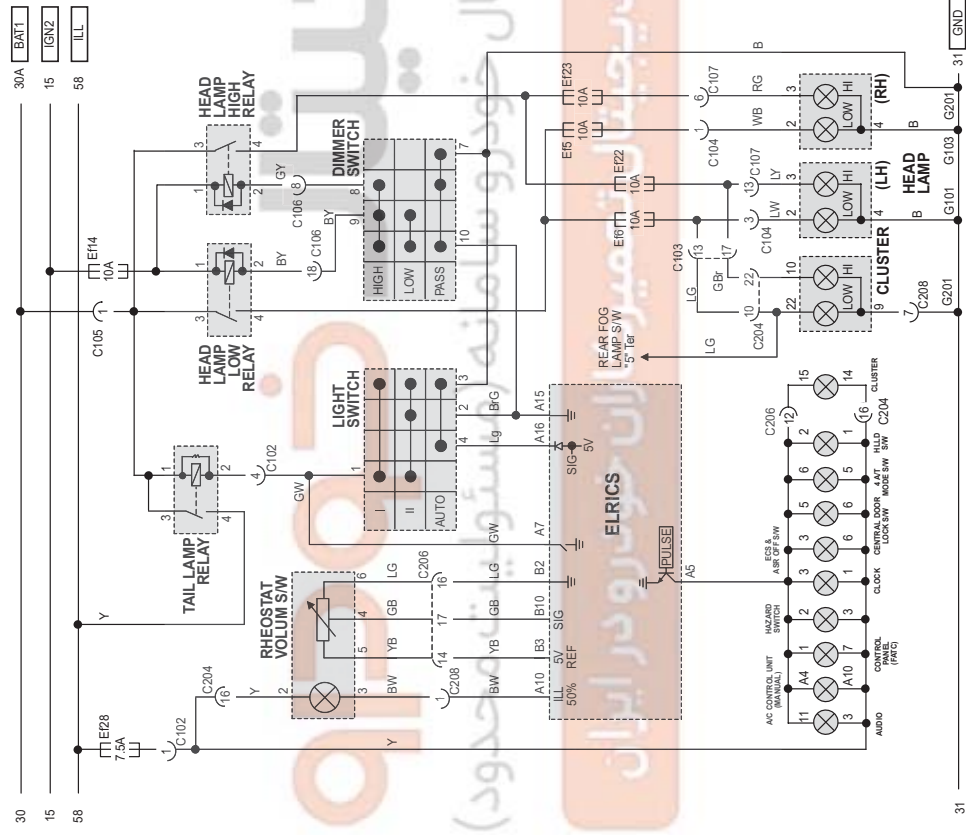


a. CONNECTOR INFORMATION

CONNECTOR NUMBER	WIRING HARNESS	GROUND POSITION
G101	Engine Room	Below Left Head Lamp
G103	Engine Room	Below Right Head Lamp
G201	Main	Above Driver Seat Leg Room


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

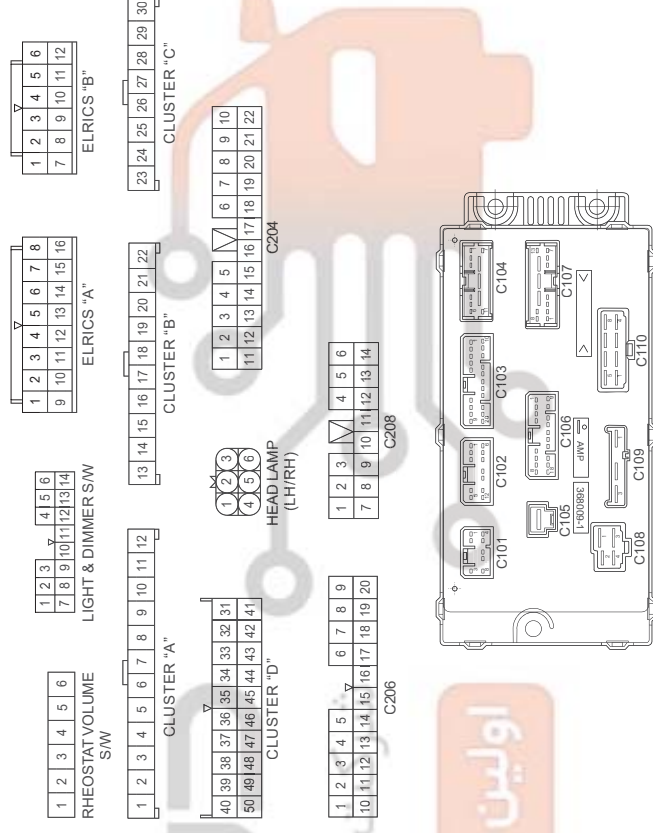


C. POSITION OF CONNECTORS AND GROUNDS

- W/H MAIN : FRONT


HEAD LAMP

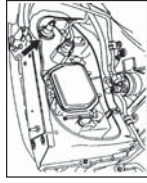

LIGHT & TURN
SIGNAL LAMP SW

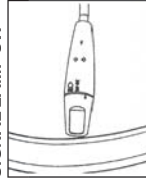

ELRICS

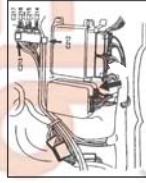


RHEOSTAT VOLUME SW



CLUSTER



LIGHT &
TURN SIGNAL
LAMP SW

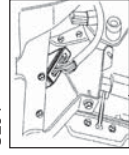

G201

C206




ELRICS



- W/H ENGINE ROOM


- W/H INSTRUMENT PANEL

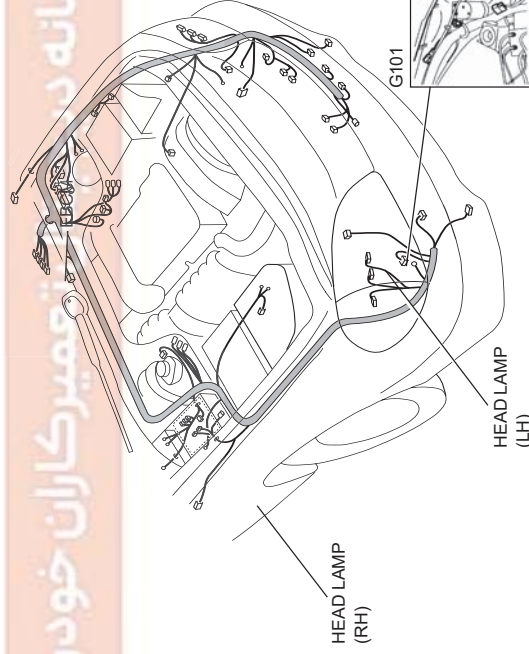

HEAD LAMP
(RH)

HEAD LAMP
(LH)

G101

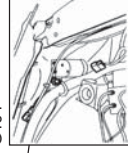

RHEOSTAT
VOLUME SW

CLUSTER

C206

C208