




## 34. PARKING AID CIRCUIT

8790

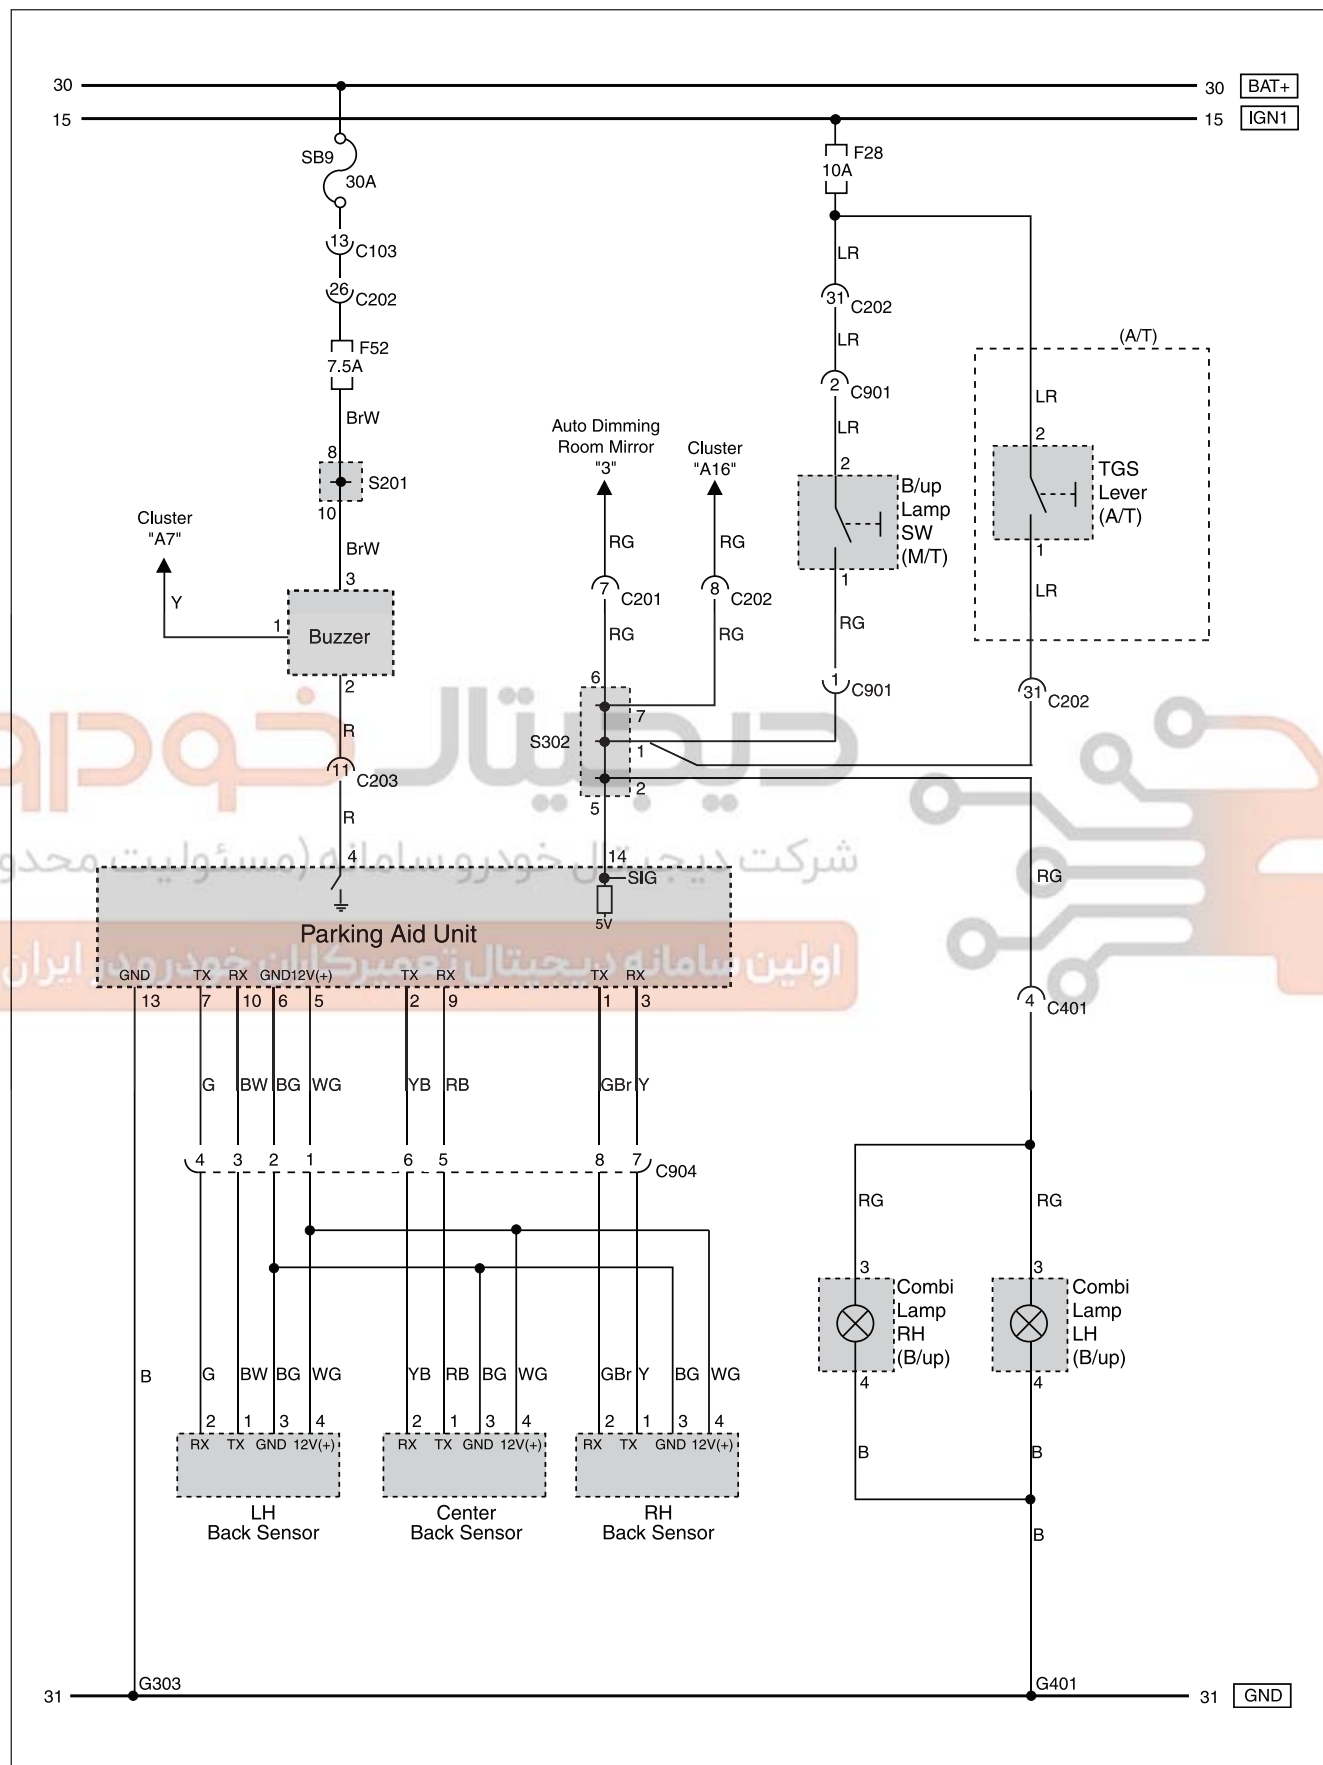

## A. CONNECTOR INFORMATION

| Connector Number<br>(Pin Number, Color) | Connecting Wiring<br>Harness          | Connector Position                   | Remark |
|-----------------------------------------|---------------------------------------|--------------------------------------|--------|
| C103 (16Pin, White)                     | W/H Floor - Eng Room Fuse & Relay Box | Eng Room Fuse & Relay Box            |        |
| C201 (20Pin, White)                     | W/H Floor - W/H Roof                  | Inside Driver Cowl Side PNL          |        |
| C202 (39Pin, Black)                     | W/H Main - W/H Floor                  | Driver Cowl Side C/Holder            |        |
| C203 (18Pin, White)                     | W/H Main - W/H Floor                  | Driver Cowl Side C/Holder            |        |
| C401 (12Pin, Black)                     | W/H Floor - W/H T/Gate                | Upper the RH T/Gate                  |        |
| C901 (4Pin, Black)                      | W/H Floor - W/H T/M                   | Upper the T/M                        | M/T    |
| C904 (8Pin, Black)                      | W/H Floor - W/H PAS                   | Under LH Bumper                      |        |
| G303                                    | W/H Floor                             | Driver QTR PNL (Under the QTR Glass) |        |
| G401                                    | W/H T/Gate                            | Center the T/Gate                    |        |
| S302 (14Pin, Black)                     | W/H Main                              | Beside RR LH Seat W/H Protector      |        |

## B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

