


Back-Up Light

Service Hints

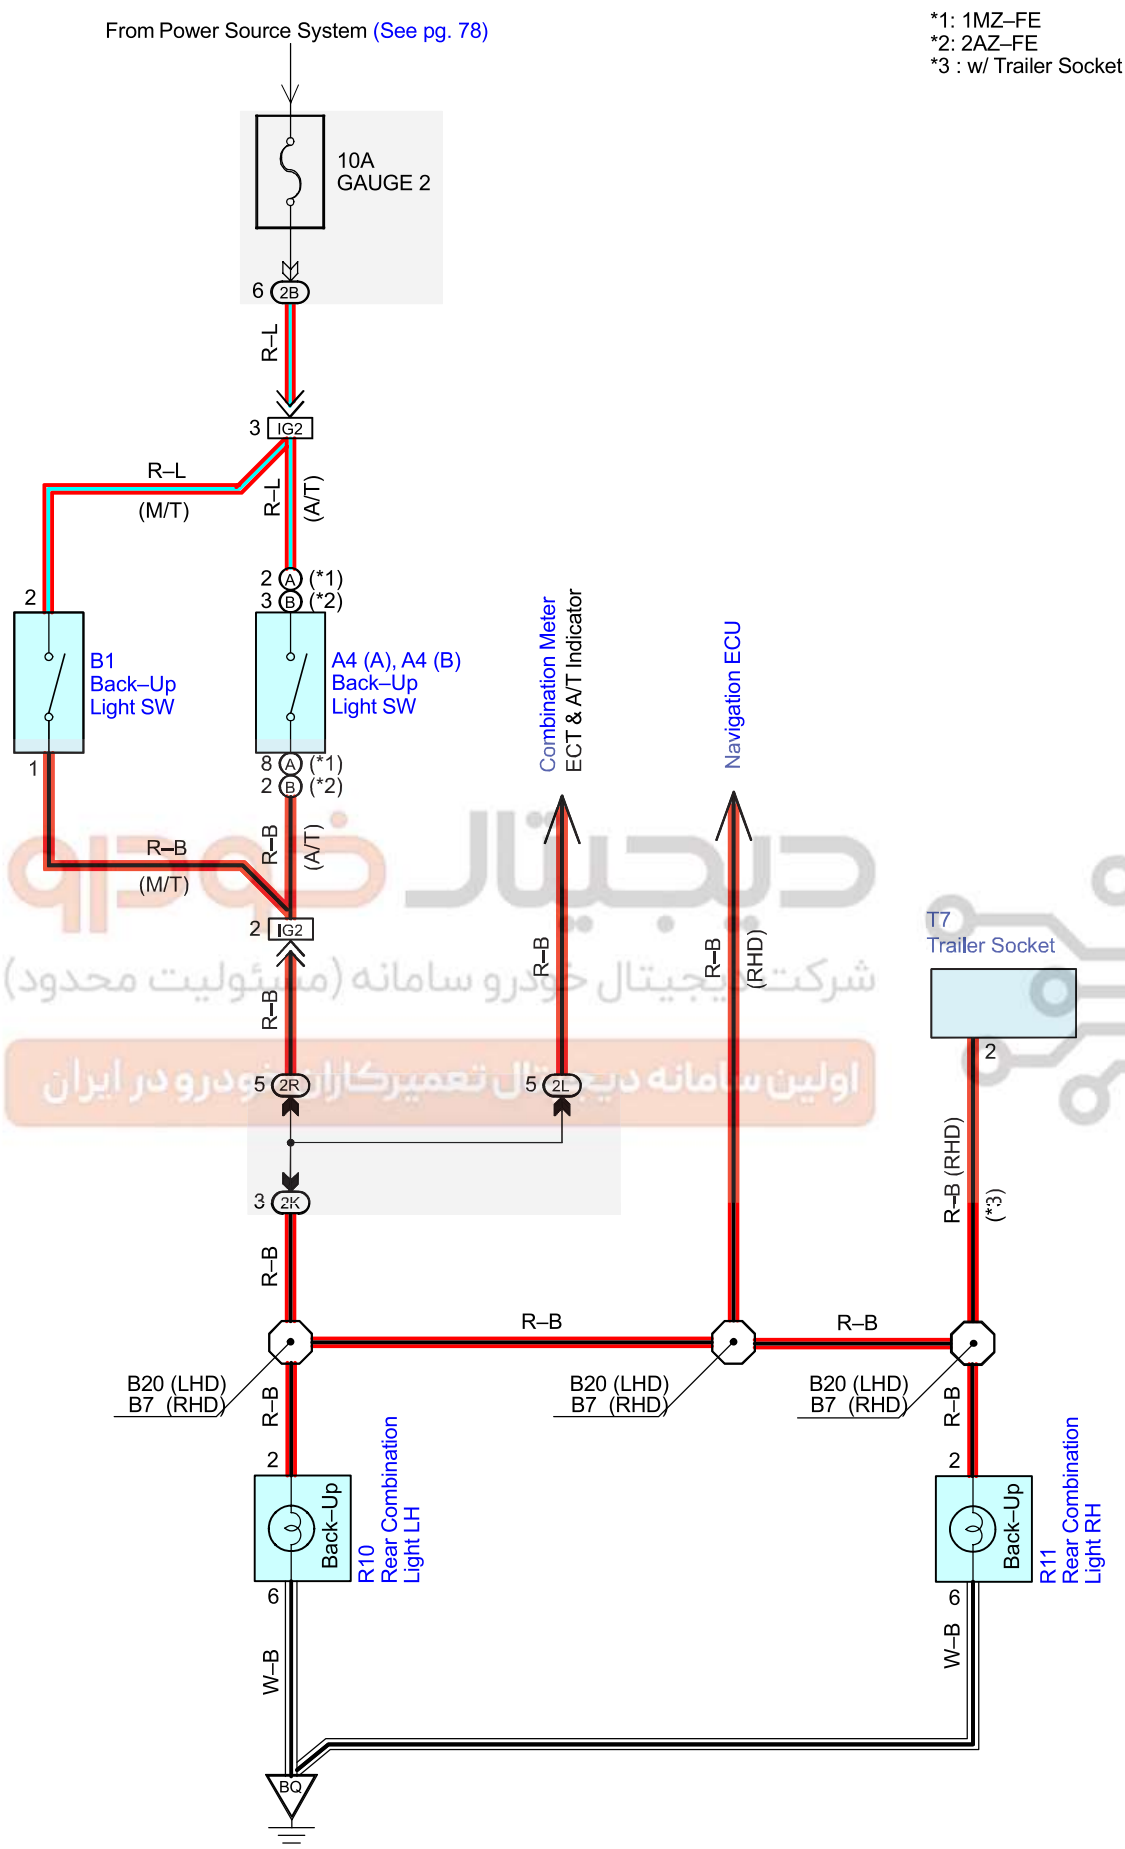

Service Hints**B1 Back-Up Light SW (M/T)**

1-2 : Closed with the shift lever at R position

A4 Back-Up Light SW (A/T)

3-2 : Closed with the shift lever at R position (2AZ-FE)

2-8 : Closed with the shift lever at R position (1MZ-FE)

 : **Parts Location**

Code		See Page	Code	See Page	Code	See Page
A4	A	32 (LHD)	B1	32 (LHD 1MZ-FE)	R10	39 (LHD)
		42 (RHD)		42 (RHD 1MZ-FE)		49 (RHD)
A4	B	34 (LHD)		34 (LHD 2AZ-FE)	R11	39 (LHD)
		44 (RHD)		44 (RHD 2AZ-FE)		49 (RHD)
					T7	49 (RHD)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	26	Instrument Panel Wire and Driver Side J/B
2K		Floor Wire and Driver Side J/B
2L		Instrument Panel Wire and Driver Side J/B
2R		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG2	58 (LHD)	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
	70 (RHD)	

 : **Ground Points**

Code	See Page	Ground Points Location
BQ	60 (LHD)	Lower Back Panel Center
	72 (RHD)	

 : **Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B7	72 (RHD)	Floor Wire	B20	60 (LHD)	Floor Wire