


Reverse Lamp (JL4G18-G-CVT)

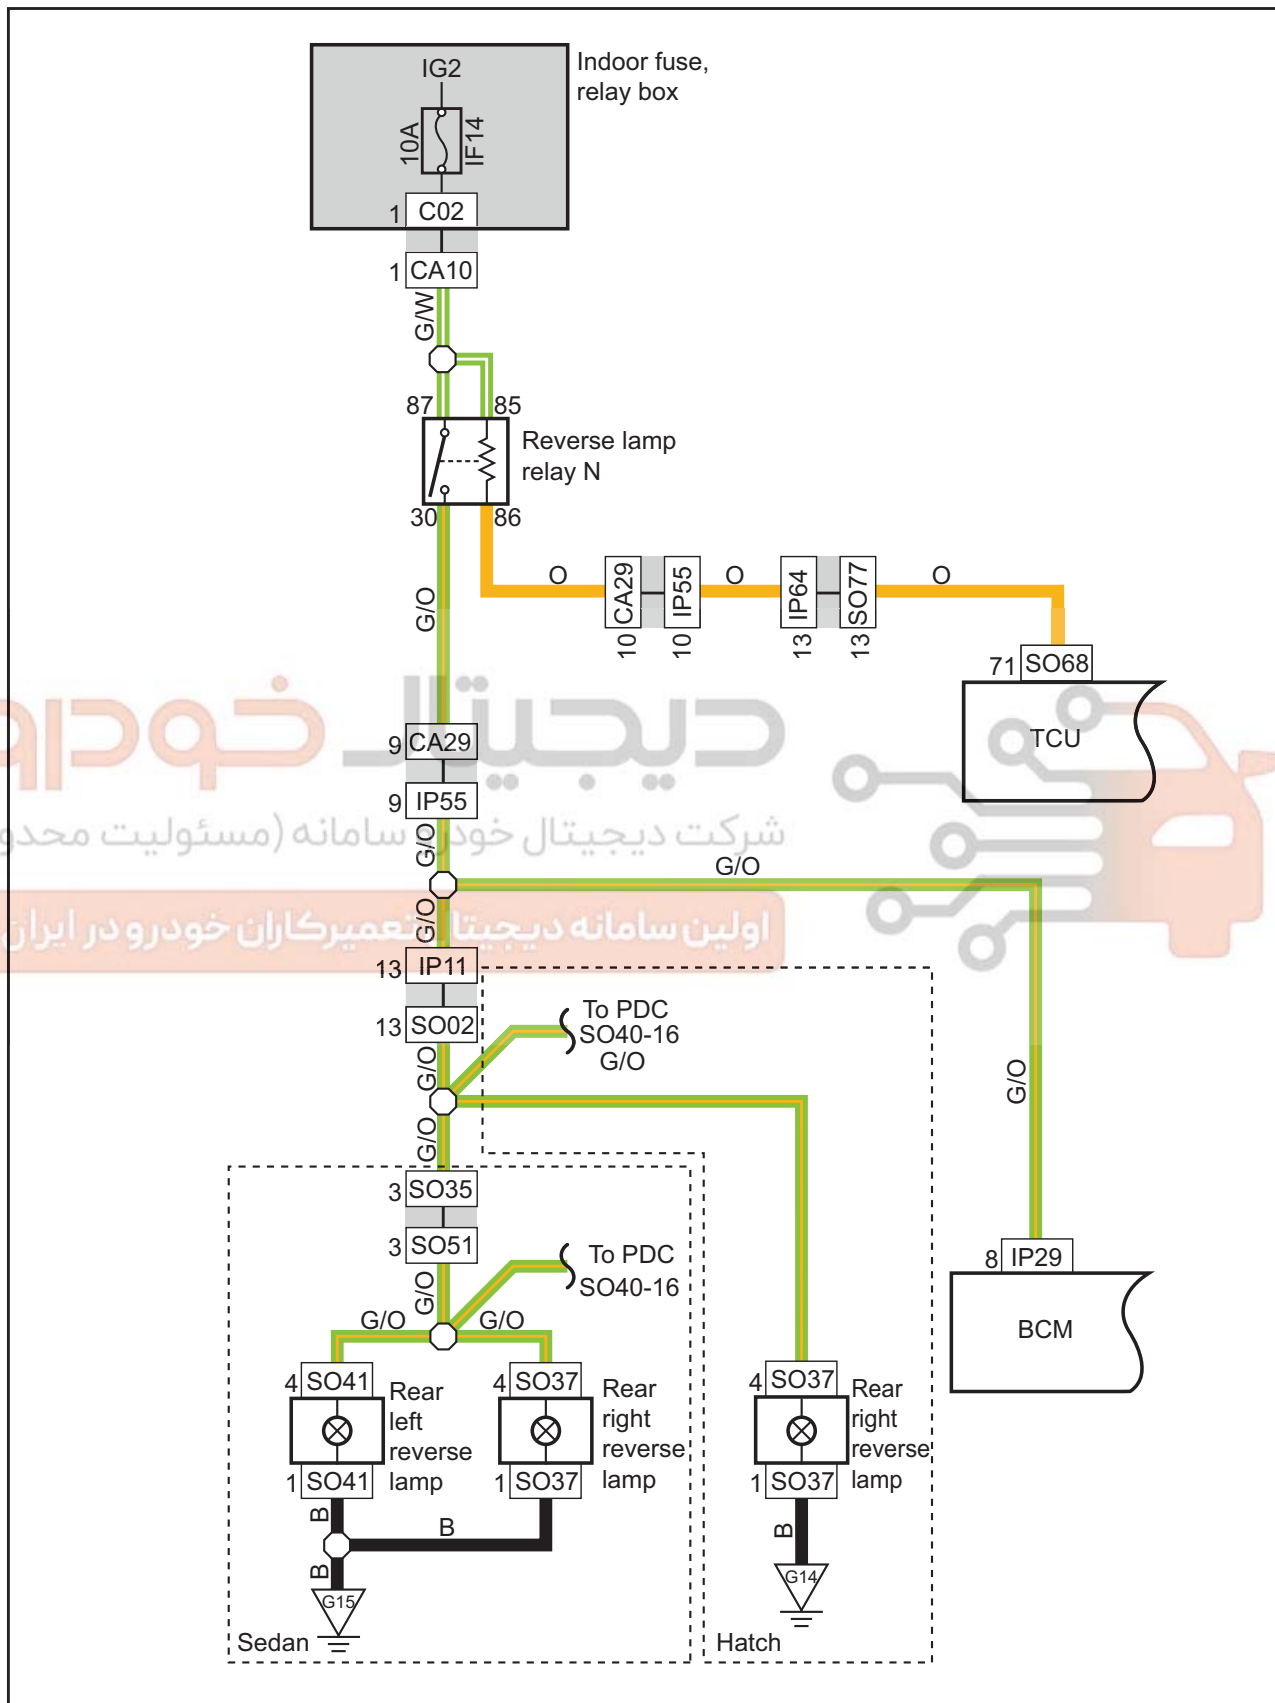

Harness connector	Name	Pages
C02	Rear Connector of Indoor Fuse Box	17
CA10	To harness connector 3 of engine compartment fuse & relay box	22
CA29	Cut off harness connector of solenoid valve	23
IP11	To harness connector of body harness	80
IP29	Harness connector of body control module 1	80
IP55	Air purifier switch harness connector	89
IP64	To harness connector of body (right) harness	89
SO02	To harness connector of instrument harness	97/106
SO35	To harness connector of luggage compartment harness	97/106
SO51	To harness connector of body harness	97/106
SO41	Harness connector of rear left combination tail lamp	97/106
SO37	Harness connector of rear right combination tail lamp	97/106
SO77	To harness connector of instrument panel harness	98/108
SO68	Automatic transmission controller harness connector	98/108
G14	Body harness grounding	126/127/128
G15	Body harness grounding	126/127/128

Connection point	Descriptions	Pages
Reverse lamp relayN-30	To reverse radar SO40-16	419/421