


Fuse and Relay Information

Fuse and Relay Information

Central F/R Box


1. Position of Central F/R Box

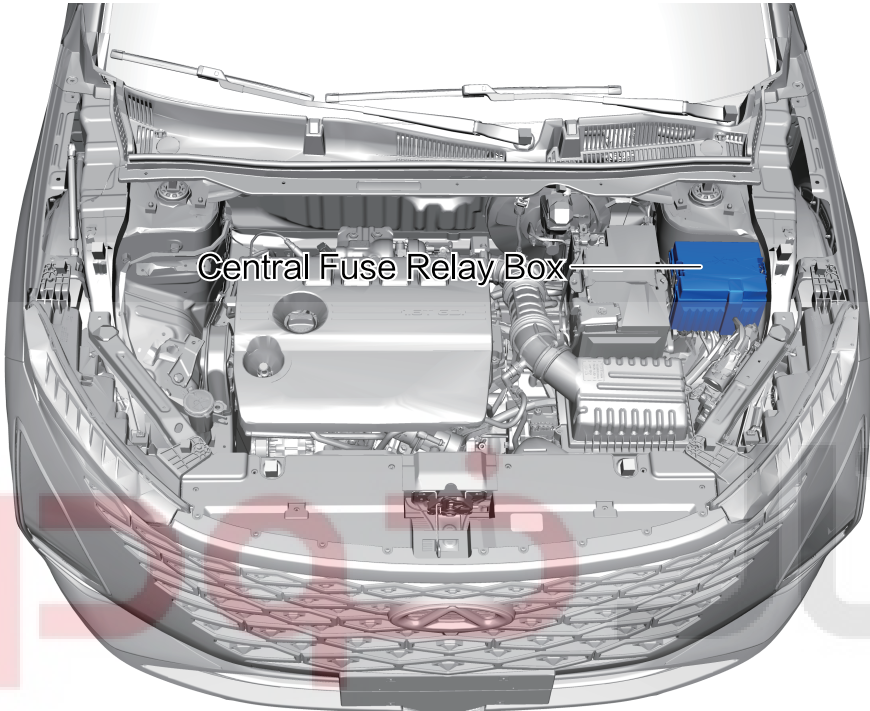

Central Fuse Relay Box

RFE0010

2. Central F/R Box Layout

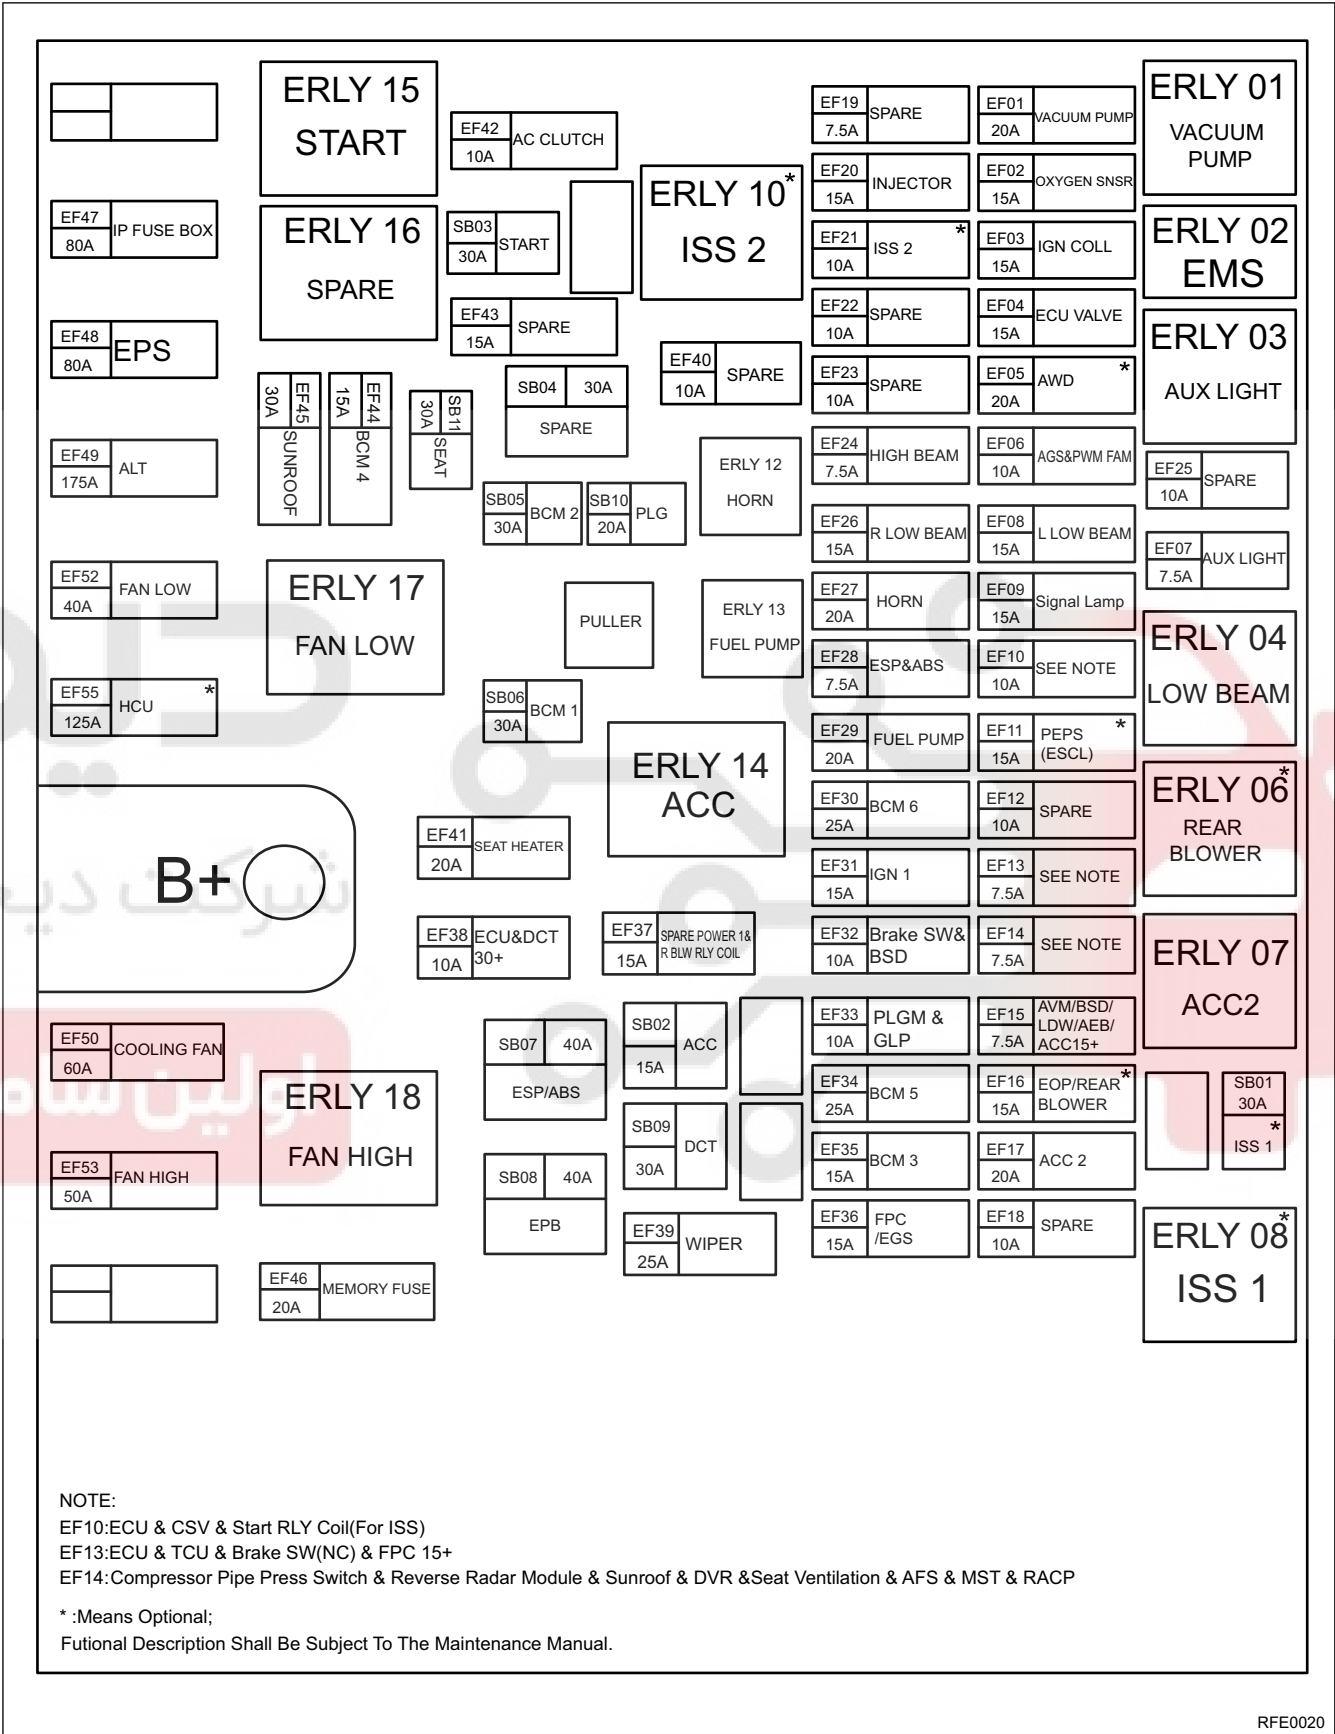

Fuse and Relay Information

3. Central F/R Box Fuse Description

Name	Load	Function	Name	Load	Function
SB01	30A	-	EF12	10A	-
SB02	15A	ACC	EF13	7.5A	Brake SW/Electronic Shift Ac-tuator/TCU/ECU
SB03	30A	Starter	EF14	7.5A	Sunroof/Reverse Radar Mod-ule/Front Dome Light/A/C Pressure SW
SB04	30A	-	EF15	7.5A	Front Microwave Radar/Multi-function Front View Camera FCM
SB05	30A	BCM 3	EF16	15A	-
SB06	30A	BCM 3	EF17	20A	Front Passenger Seat Heat-ing/Seat Heating RR
SB07	40A	ESP (with EPB)	EF18	10A	-
SB08	40A	ESP (with EPB)	EF19	7.5A	-
SB09	30A	-	EF20	15A	Injection Nozzle
SB10	20A	Power Back Door	EF21	10A	-
SB11	30A	Seat Adjustment	EF22	10A	-
EF01	20A	Vacuum Pump	EF23	10A	-
EF02	15A	Oxygen Sensor, Electronic Thermostat, Electronic Water Pump	EF24	7.5A	High Beam Light
EF03	15A	IGN Coil	EF25	10A	-
EF04	15A	Canister Solenoid Valve/VCT-Intake/VCT-Exhaust/Engine Crankshaft Ventilation Heater	EF26	15A	Low Beam Light RH
EF05	20A	-	EF27	20A	Horn
EF06	10A	-	EF28	7.5A	ESP (with EPB)
EF07	7.5A	-	EF29	20A	Fuel Pump
EF08	15A	Low Beam Light LH	EF30	25A	BCM 3
EF09	15A	-	EF31	15A	IGN 1
EF10	10A	ECU/Cooling Fan Relay	EF32	10A	Brake SW/Blind Spot Monitoring
EF11	15A	-	EF33	10A	Power Back Door/Ground Light

Central F/R Box Fuse Description (continued)


Name	Load	Function	Name	Load	Function
EF34	25A	BCM 4	EF45	30A	Sunroof
EF35	15A	BCM 3	EF46	20A	Sea Transportation Fuse
EF36	15A	Electric Shift Actuator (CVT25)	EF47	80A	IP Fuse Box
EF37	15A	-	EF48	80A	EPS
EF38	10A	ECU	EF49	175A	Alternator
EF39	25A	Wiper	EF50	60A	-
EF40	10A	-	EF52	50A	Front Windshield Heating
EF41	20A	Driver Seat Heating/Seat Heating RL	EF53	50A	Front Windshield Heating
EF42	10A	A/C Compressor Clutch SW	EF54	40A	Low Speed Cooling Fan
EF43	15A	-	EF55	50A	High Speed Cooling Fan
EF44	15A	BCM 5			

Fuse and Relay Information


4. Central F/R Box Inner Circuit




RFE0060

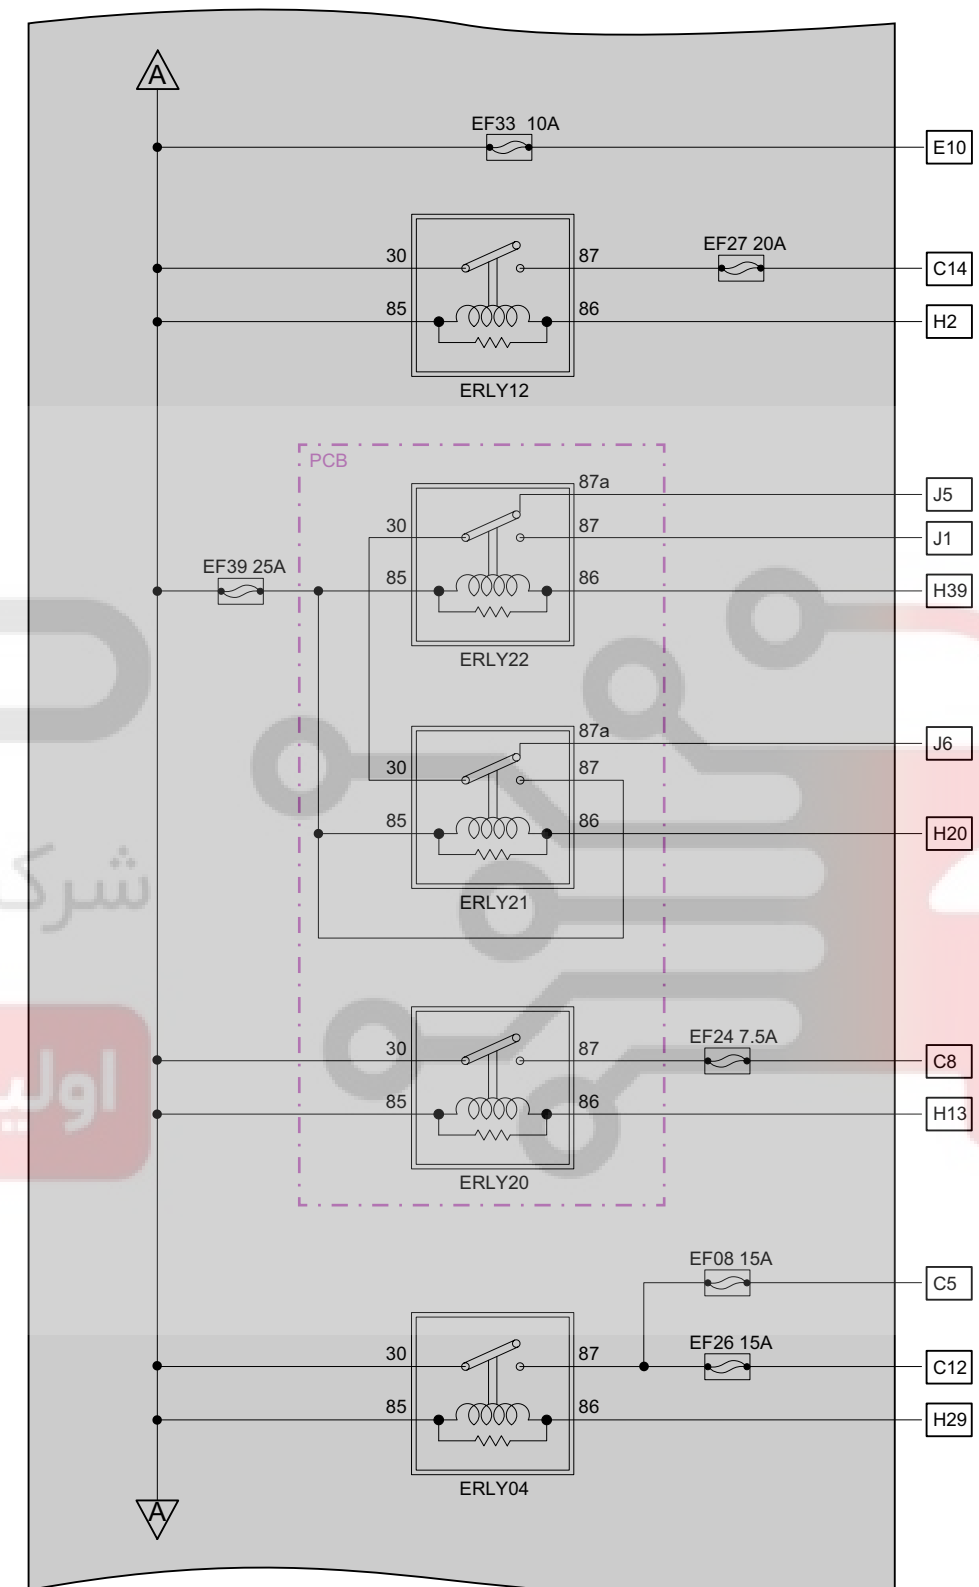

RFE0070

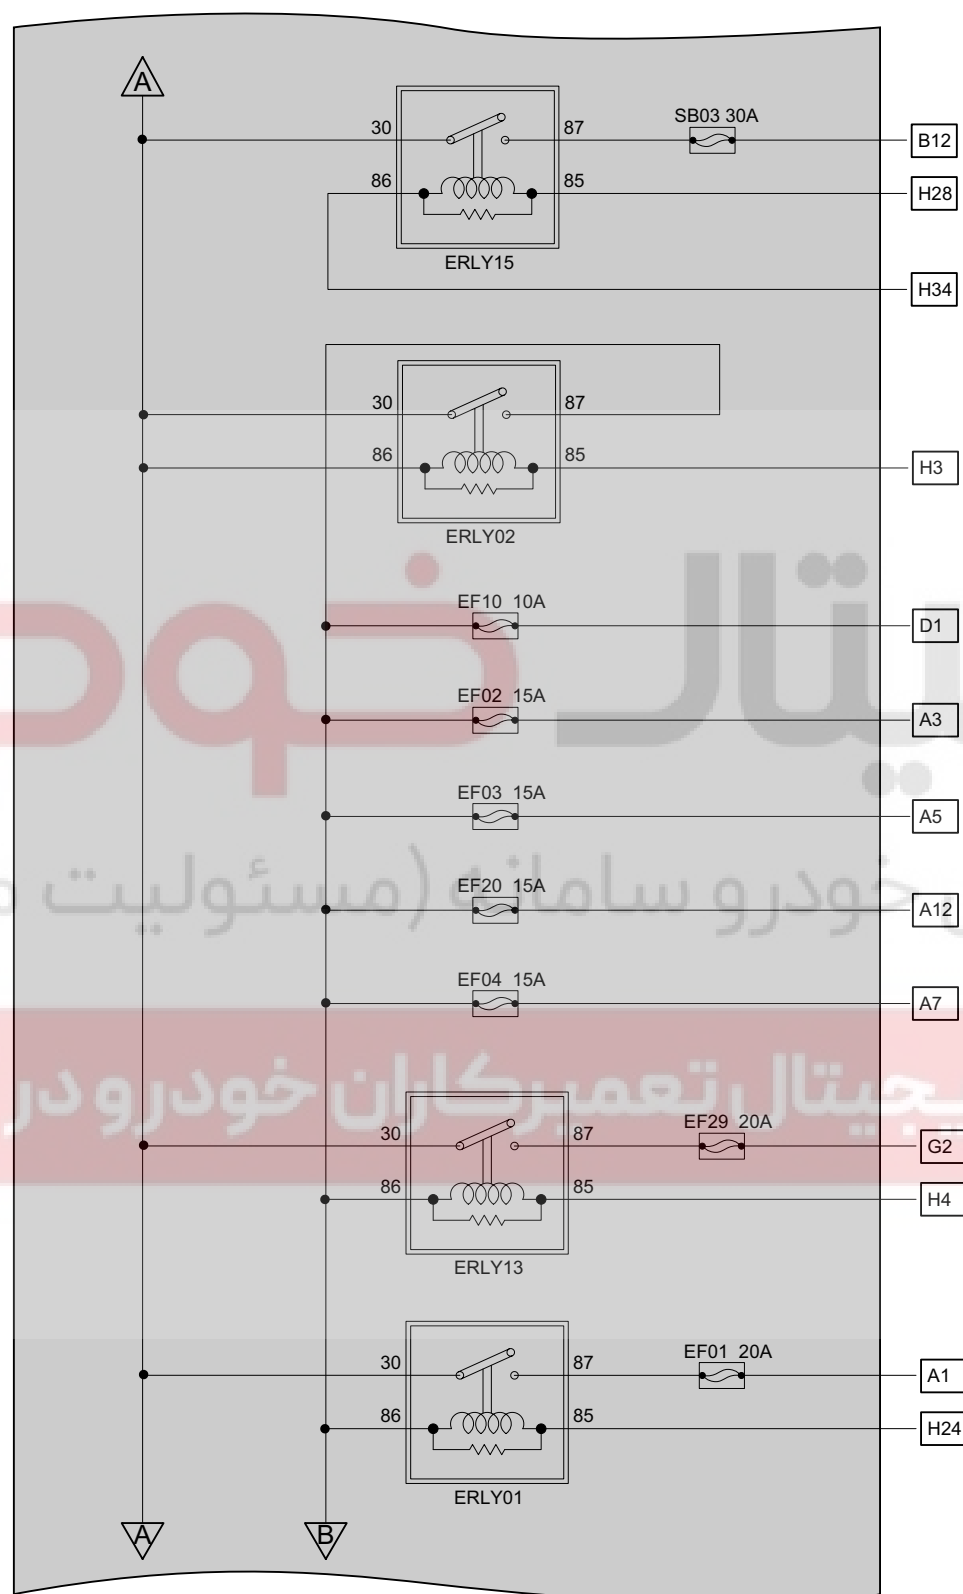

RFE0080

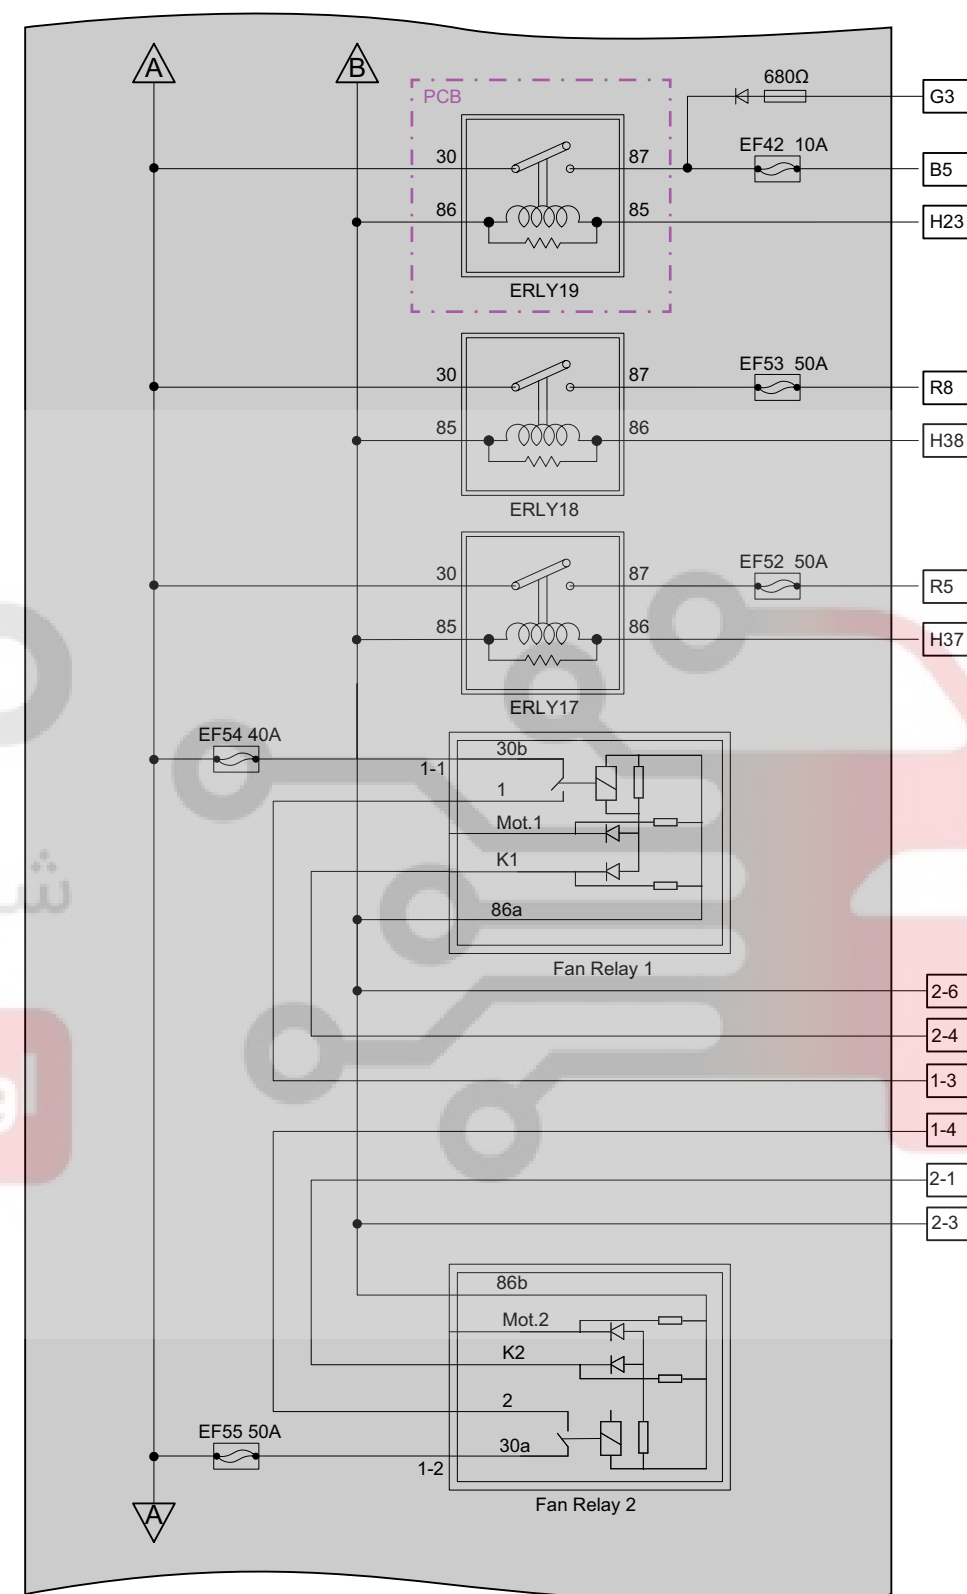

RFE0090