


Reversing Lamp

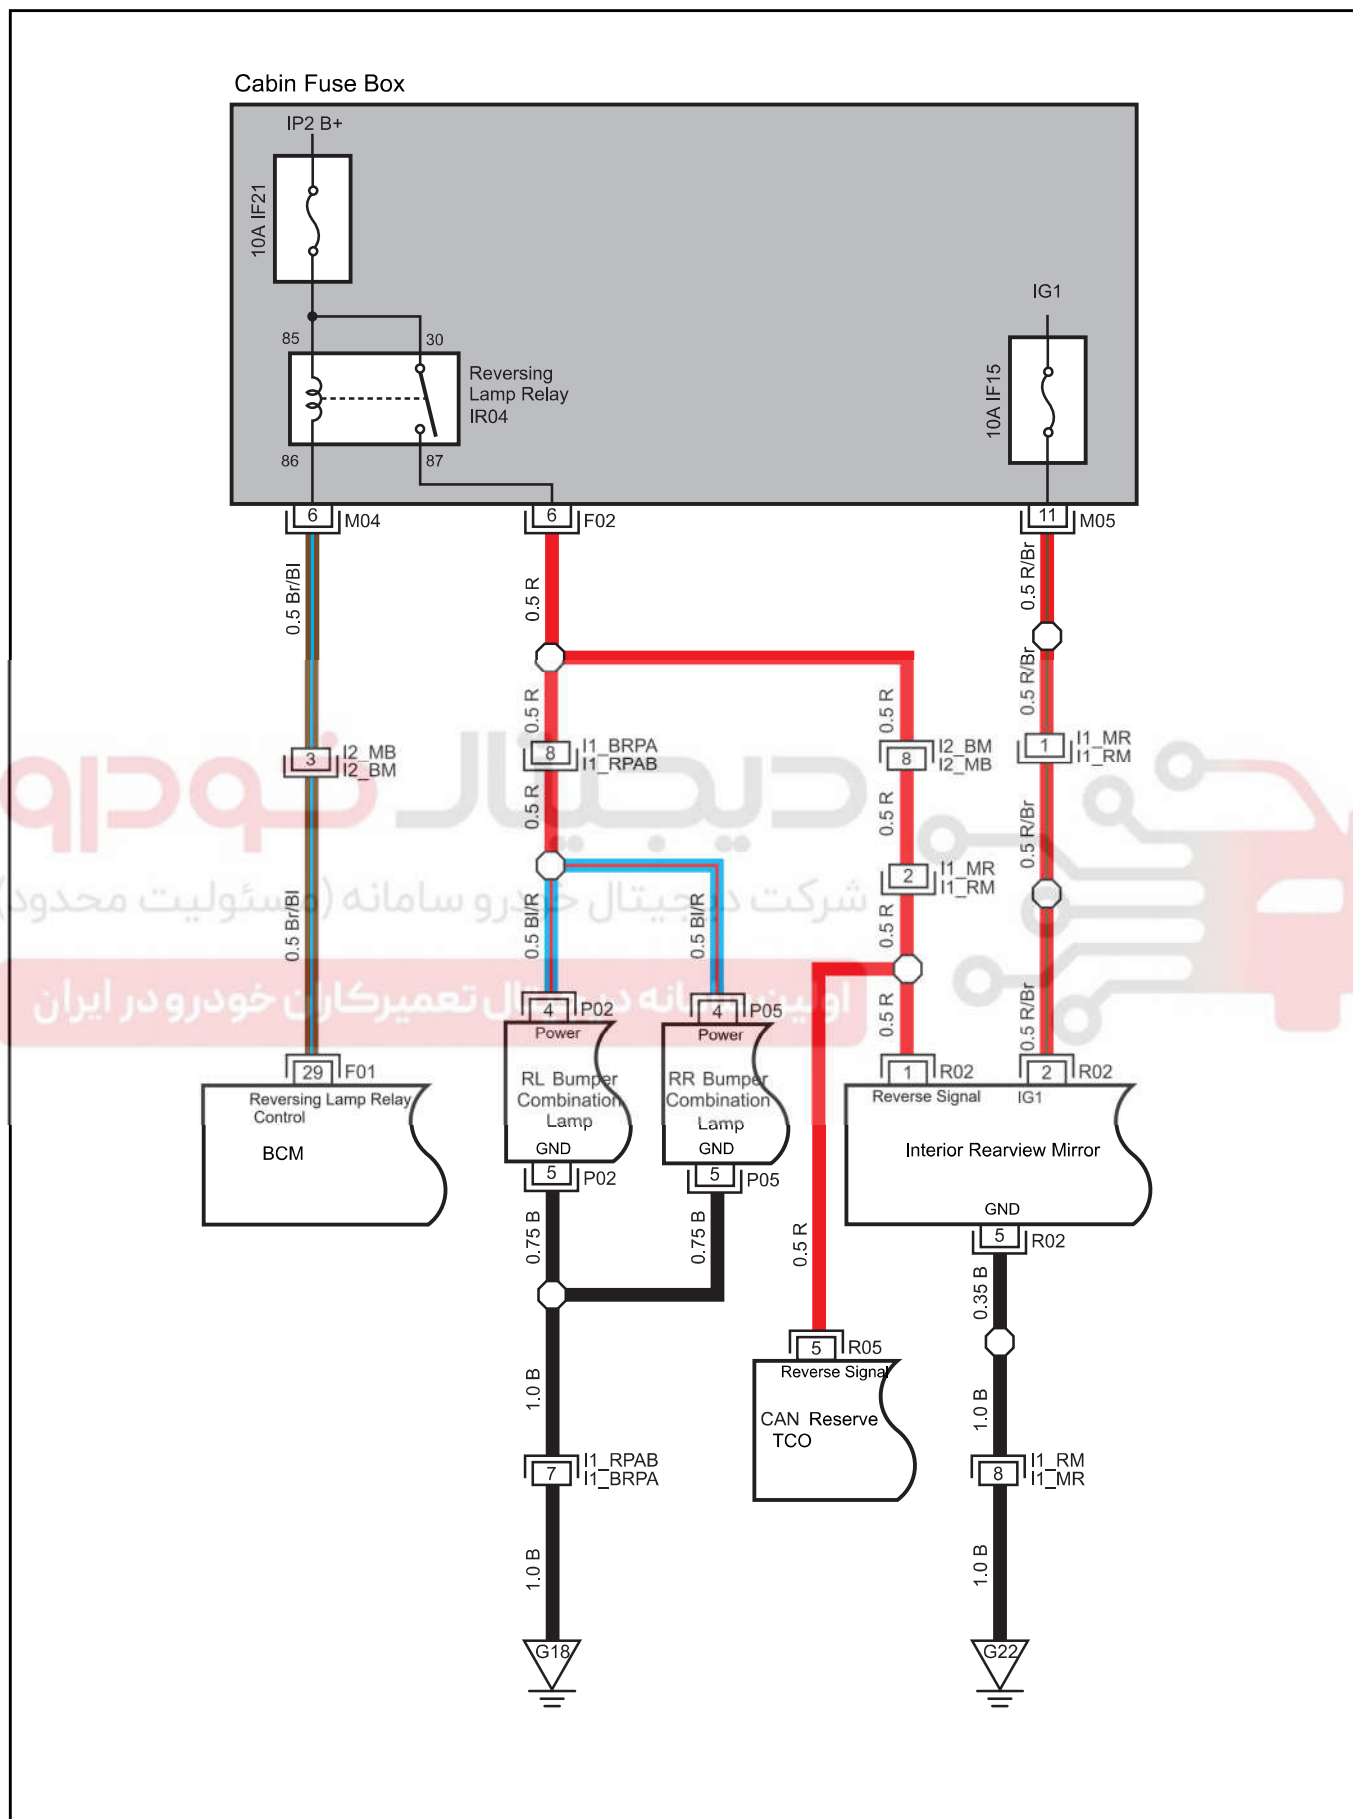

Connector	Name	Page
F01	BCM C2	25
F02	Cabin Fuse Box G	25
M04	Cabin Fuse Box K	20
M05	Cabin Fuse Box M	20
P02	RL Bumper Combination Lamp	36
P05	RR Bumper Combination Lamp	36
R02	Interior Rearview Mirror	23
R05	CAN Reserve TCO	23
G18	Body W.H. GND 7(terminal 1)	42
G22	Main W.H. GND 3(terminal 1)	41
I1_BRPA	Body W.H. Connector 1 Connecting Reversing Radar W.H.	25
I1_MR	Main W.H. Connector 1 Connecting Roof W.H.	20
I1_RM	Roof W.H. Connector 1 Connecting Main W.H.	23
I1_RPAB	Reversing Radar W.H.Connector 1 Connecting Body W.H.	36
I2_BM	Body W.H. Connector 2 Connecting Main W.H.	25
I2_MB	Main W.H. Connector 2 Connecting Body W.H.	21


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




M04 Cabin Fuse Box K

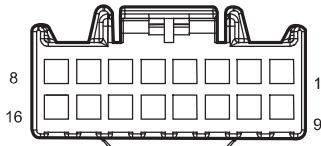


M05 Cabin Fuse Box M

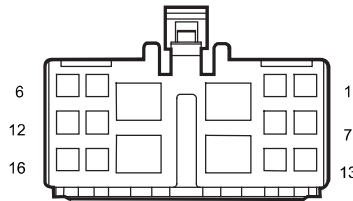


I2_MB Main W.H. Connector 2
Connecting Body W.H.

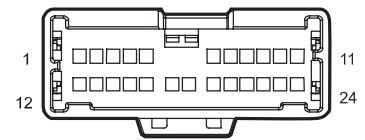

 
I2_BM Body W.H. Connector 2
Connecting Main W.H.




I1_BRPA Body W.H. Connector 1
Connecting Reversing Radar W.H.

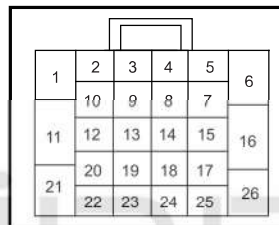


I1_RPAB Reversing Radar W.H. Connector 1
Connecting Body W.H.

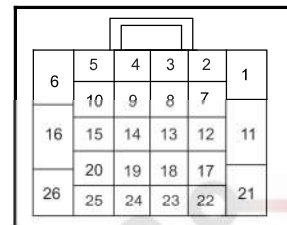


I1_MR Main W.H. Connector 1
Connecting Roof W.H.

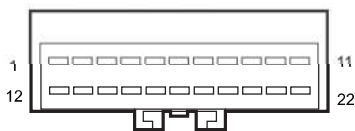


I1_RM Roof W.H. Connector 1
Connecting Main W.H.

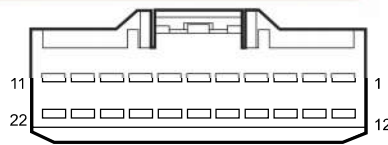


F01 BCM C2

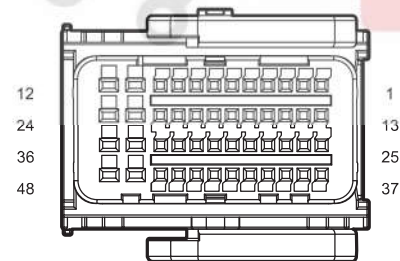


F02 Cabin Fuse Box G

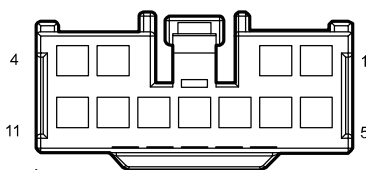


P02 RL Bumper Combination Lamp

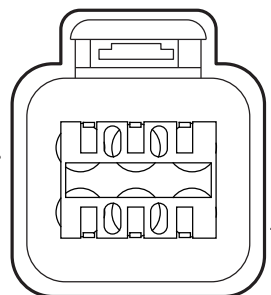


P05 RR Bumper Combination Lamp

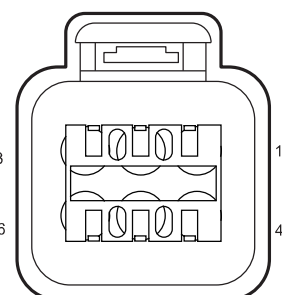


R02 Interior Rearview Mirror

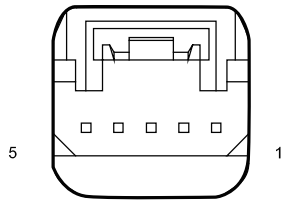


R05CAN Reserve TCO

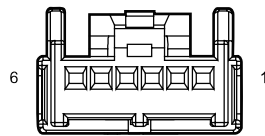

G18 Body W.H. GND 7 (terminal1)

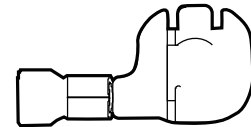

G22 Main W.H. GND 3 (terminal 1)

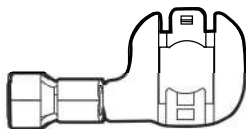

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

