


Starting System (JL4G18G-CVT)

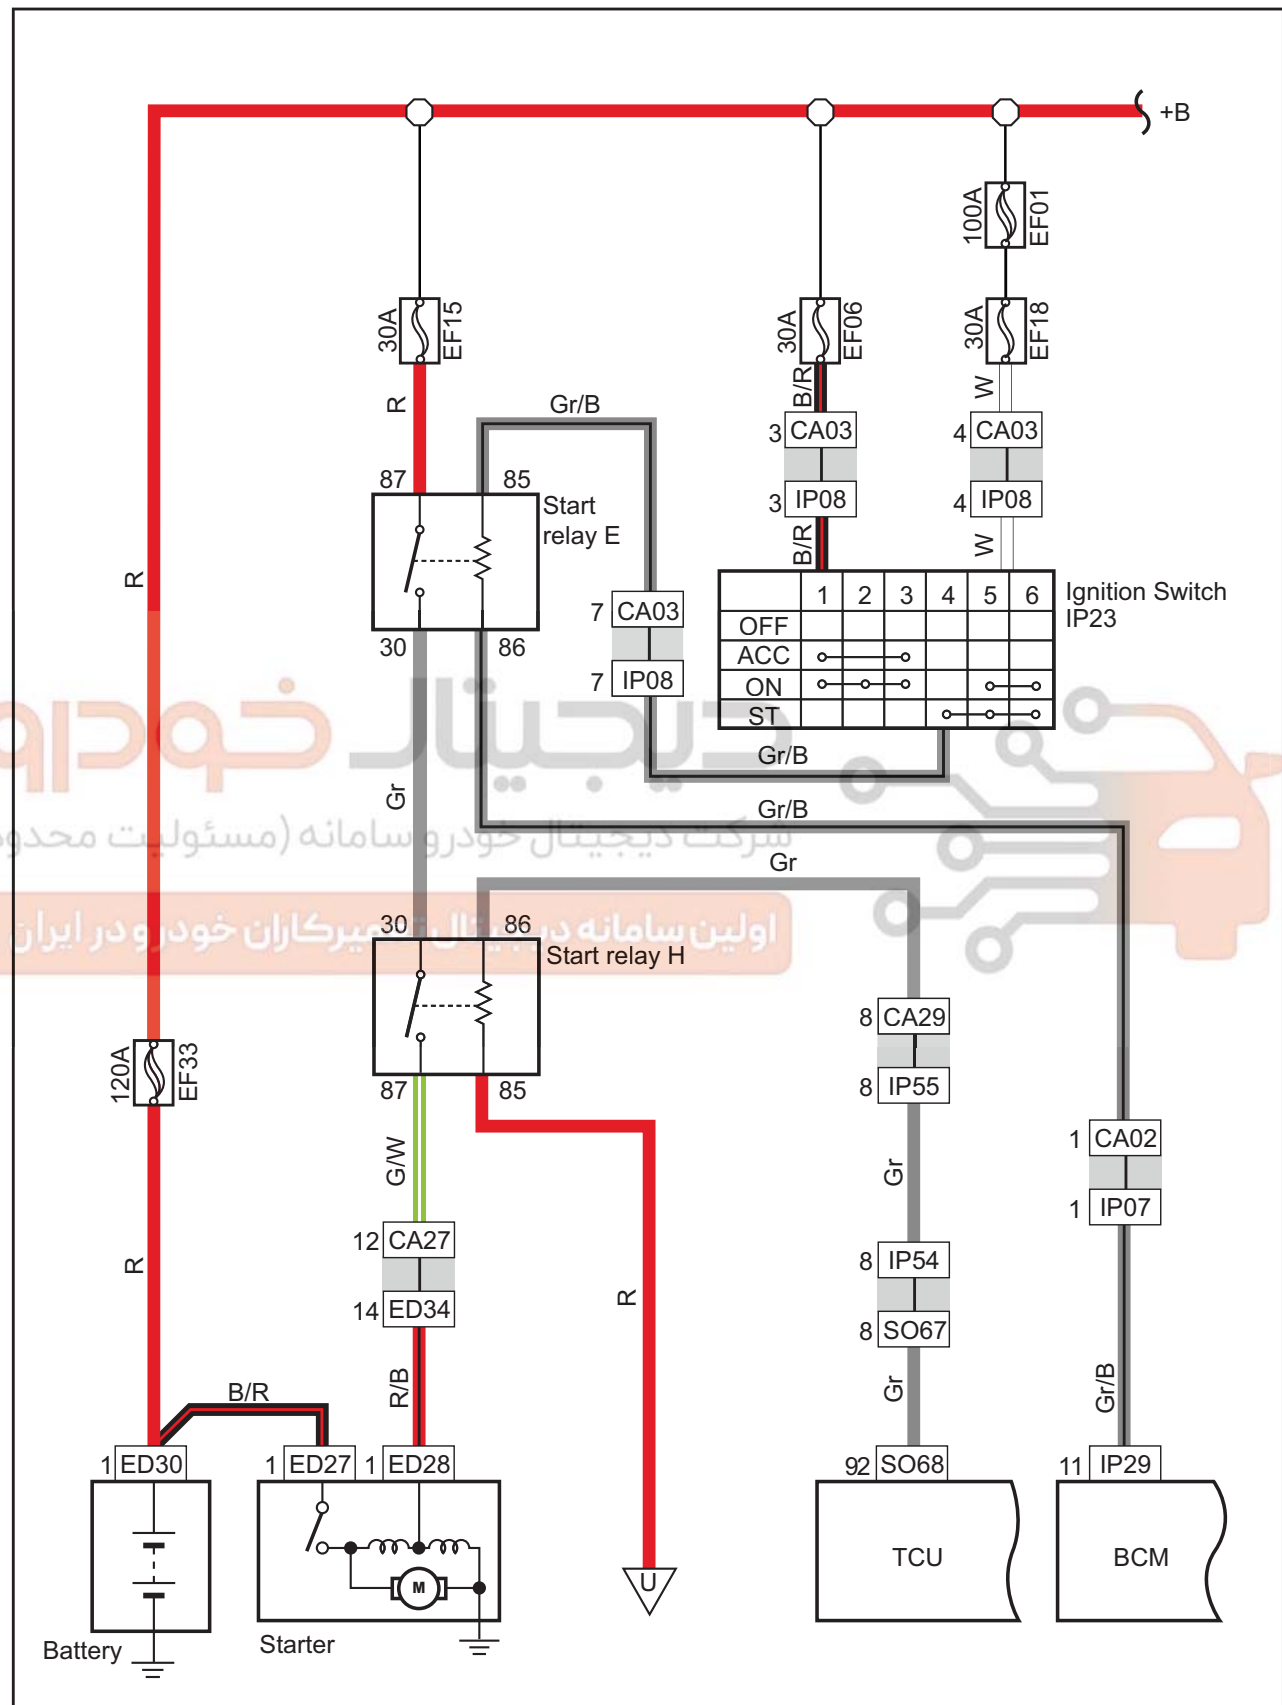

Harness connector	Name	Pages
CA02	To harness connector of instrument harness2	22
CA03	To harness connector of instrument harness	22
CA27	To harness connector of engine harness	23
CA29	Cut off harness connector of solenoid valve	22
IP07	To harness connector of engine compartment harness	80
IP08	To harness connector of engine compartment harness	80
IP29	Harness connector of body control module1	80
IP55	Air purifier switch harness connector	89
IP64	To body (right) harness connector	89
SO77	To harness connector of instrument panel harness	98/108
SO68	Automatic transmission controller harness connector	98/108
ED27	Harness connector of starter	43
ED28	Harness connector of starter solenoid switch	43
ED30	Harness connector of battery (2)	43

Connection point	Descriptions	Pages
U	Instrument power supply	350

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران