


# Air Conditioning

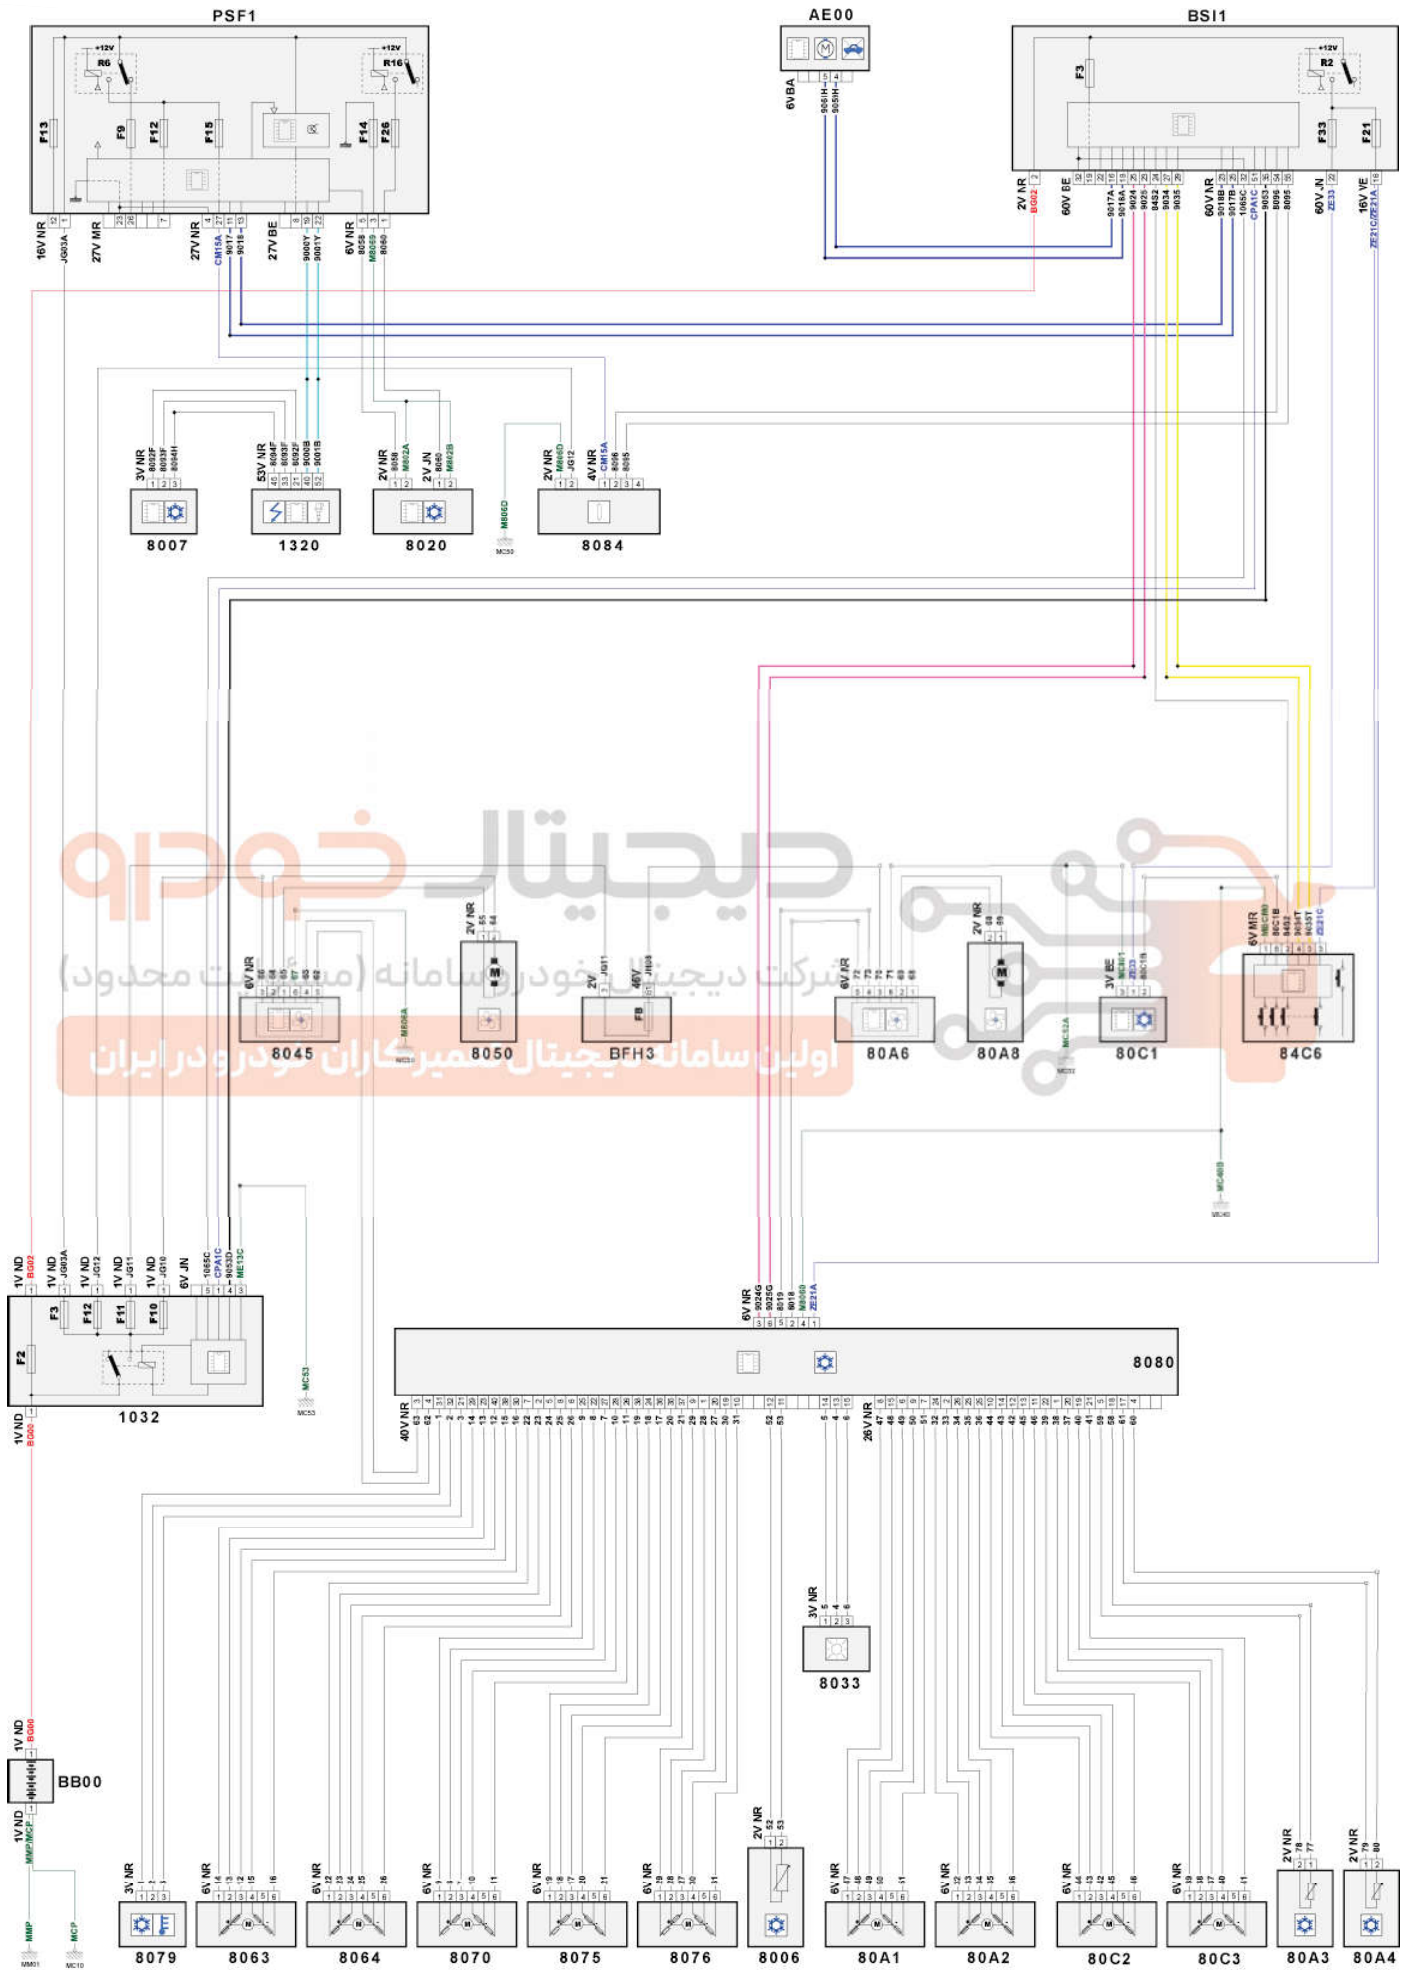

دیجیتال خدمت  
 شرکت دیجیتال خودر سامانه (محدود)  
 اولین سامان دیجیتال تعمیرکاران خودر در ایران

## Air Conditioning

item code	description	information
1032	null	electrical supplies protection and management unit
1320	null	engine ECU /
8006	null	evaporator temperature sensor
8007	null	pressure switch/refrigerant pressure sensor
8020	null	air conditioning compressor
8033	null	sunlight sensor
8045	null	air blower control module
8050	null	air blower motor
8063	null	right-hand mixing flap reduction motor /
8064	null	left-hand mixer flap reduction motor
8070	null	air inlet flap reduction motor
8075	null	RH distribution flap reduction motor
8076	null	LH distribution flap reduction motor
8079	null	air quality sensor
8080	null	air conditioning ECU /
8084	null	additional air conditioning air blower resistor
80A1	null	rear right mixing flap reduction geared motor
80A2	null	rear left mixing flap reduction geared motor
80A3	null	rear left passenger compartment air temperature sensor
80A4	null	rear right passenger compartment air temperature sensor
80A6	null	rear LH additional blower control module
80A8	null	rear LH additional blower
80C1	null	rear air conditioning control panel
80C2	null	rear right distribution flap reduction motor
80C3	null	rear left distribution flap reduction motor
84C6	null	multifunction control panel
AE00	null	electric steering lock
BB00	null	ancillaries battery
BFH3	null	cabin relay fusebox 1
BSI1	null	built-in systems interface
E809	null	crimp one information (or equipotential 809) wire
E900A	null	crimp one information (or equipotential 276A) wire
E901A	null	crimp one information (or equipotential 901A) wire
E917	null	crimp one information (or equipotential 917) wire
E917A	null	crimp one information (or equipotential 917A) wire
E918	null	crimp one information (or equipotential 918) wire
E918A	null	crimp one information (or equipotential 918A) wire
E924	null	crimp one information (or equipotential 924) wire
E925	null	crimp one information (or equipotential 925) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
E953	null	crimp one information (or equipotential 953) wire
EM40A	null	crimp earth (earth point number 40A)
EM40B	null	crimp earth (earth point number 40B)
EM52A	null	crimp earth (earth point number 52A)
EM53	null	crimp earth (earth point number 53)
EM80	null	crimp earth (earth point number 80)
MC10	null	body earth point number 10
MC30A	null	body earth point number 30A
MC40B	null	body earth point number 40
MC50	null	body earth point number 50
MC52A	null	body earth point number 52A
MC53B	null	body earth point number 53B
MM01	null	engine earth point number 01
PSF1	null	engine compartment connection board-fuse box