



## Interior Light (LHD)

## Service Hints

\*1 : w/Ignition Key Cylinder Light

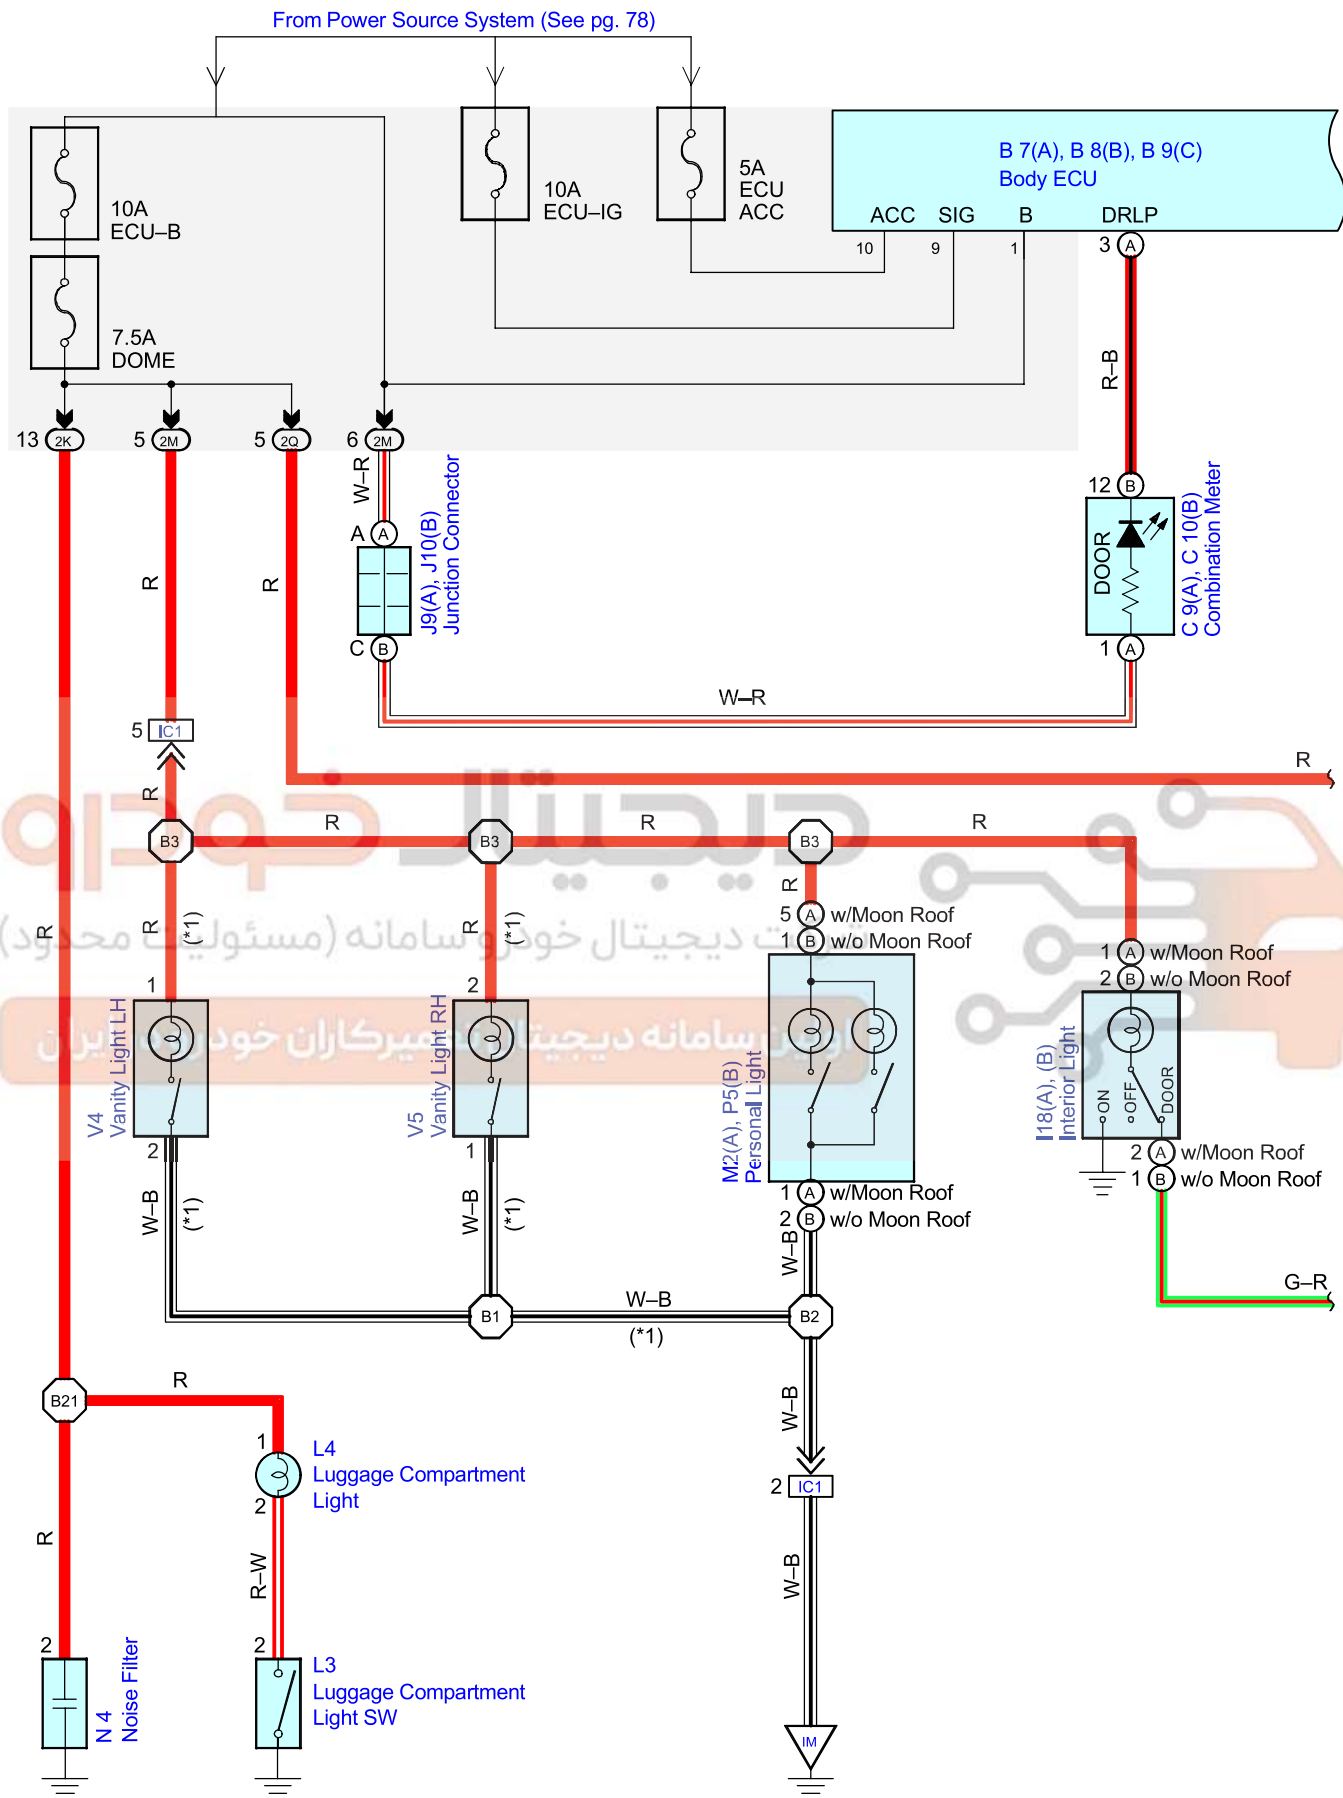

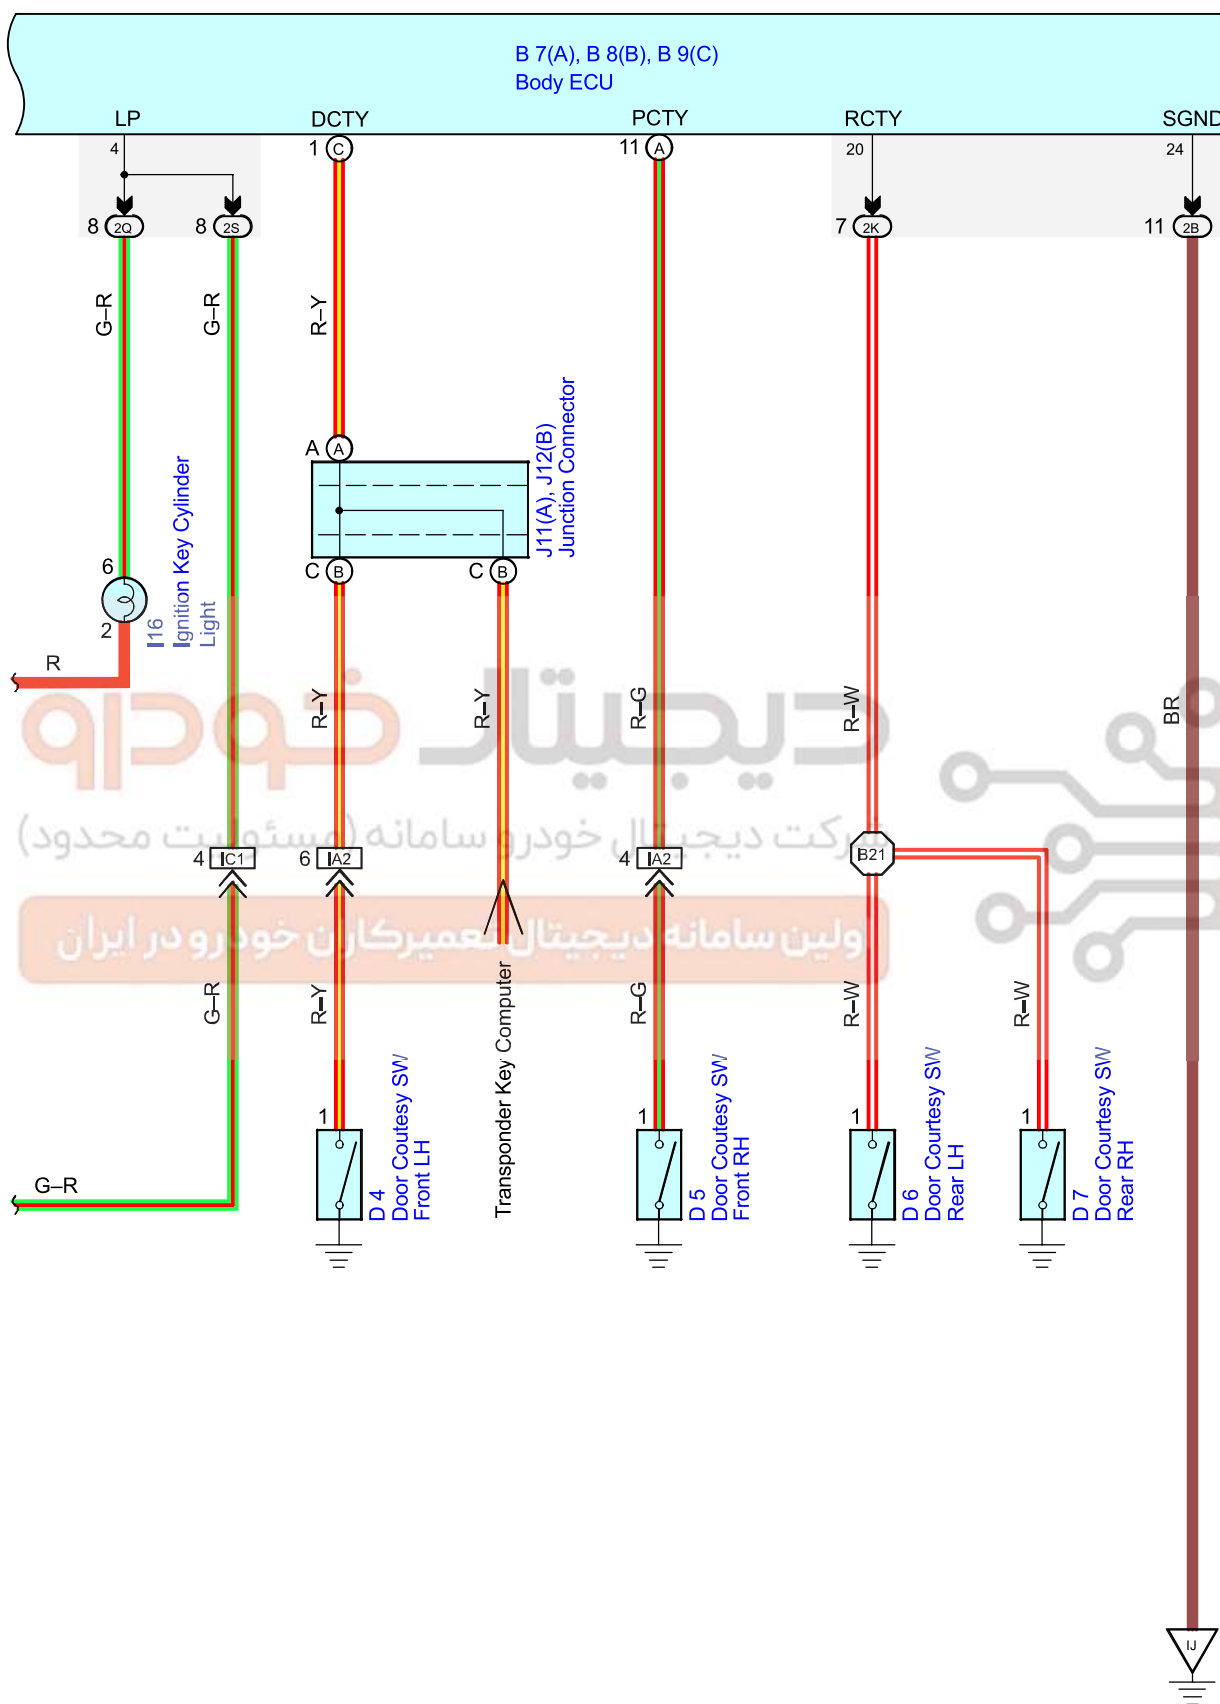

## Interior Light (LHD)

### Service Hints

#### Body ECU

- 9-Ground : Approx. 12 volts with ignition SW at ON or ST position  
 12, 24-Ground : Always continuity  
 1-Ground : Always approx. 12 volts

#### D6, D7, D8, D9 Door Courtesy SW Front LH, RH, Rear LH, RH

- 1-Ground : Closed with each of the doors

### ○ : Parts Location

| Code |   | See Page | Code |   | See Page | Code |   | See Page |
|------|---|----------|------|---|----------|------|---|----------|
| B7   | A | 36 (LHD) | D7   |   | 38 (LHD) | L4   |   | 38 (LHD) |
| B8   | B | 36 (LHD) | I16  |   | 37 (LHD) | M2   | A | 38 (LHD) |
| B9   | C | 36 (LHD) | I18  |   | 38 (LHD) | N4   |   | 39 (LHD) |
| C9   | A | 36 (LHD) | J9   | A | 37 (LHD) | P5   | B | 39 (LHD) |
| C10  | B | 36 (LHD) | J10  | B | 37 (LHD) | V4   |   | 39 (LHD) |
| D4   |   | 38 (LHD) | J11  | A | 37 (LHD) | V5   |   | 39 (LHD) |
| D5   |   | 38 (LHD) | J12  | B | 37 (LHD) |      |   |          |
| D6   |   | 38 (LHD) | L3   |   | 38 (LHD) |      |   |          |

### ○ : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)           |
|------|----------|----------------------------------------------------------------|
| 2B   | 26       | Instrument Panel Wire and Driver Side J/B                      |
| 2K   | 26       | Floor Wire and Driver Side J/B                                 |
| 2M   |          |                                                                |
| 2Q   | 26       | Instrument Panel Wire and Driver Side J/B (Lower Finish Panel) |
| 2S   |          |                                                                |

### □ : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)        |
|------|----------|-------------------------------------------------------------------|
| IA2  | 55 (LHD) | Instrument Panel Wire and Floor Wire (Right Kick Panel)           |
| IC1  | 55 (LHD) | Instrument Panel Wire and Roof Wire (Inside of Front Left Pillar) |

### ▽ : Ground Points

| Code | See Page | Ground Points Location            |
|------|----------|-----------------------------------|
| IJ   | 55 (LHD) | Instrument Panel Brace LH         |
| IM   | 55 (LHD) | Instrument Panel Reinforcement RH |



## : Splice Points

| Code | See Page                 | Wire Harness with Splice Points | Code | See Page                 | Wire Harness with Splice Points |
|------|--------------------------|---------------------------------|------|--------------------------|---------------------------------|
| B1   | <a href="#">60 (LHD)</a> | Roof Wire                       | B3   | <a href="#">60 (LHD)</a> | Roof Wire                       |
| B2   | <a href="#">60 (LHD)</a> | Roof Wire                       | B21  | <a href="#">60 (LHD)</a> | Floor Wire                      |

# دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




### Interior Light (RHD)


### Service Hints

\*1 : w/Ignition Key Cylinder Light

\*3 : w/Personal Light

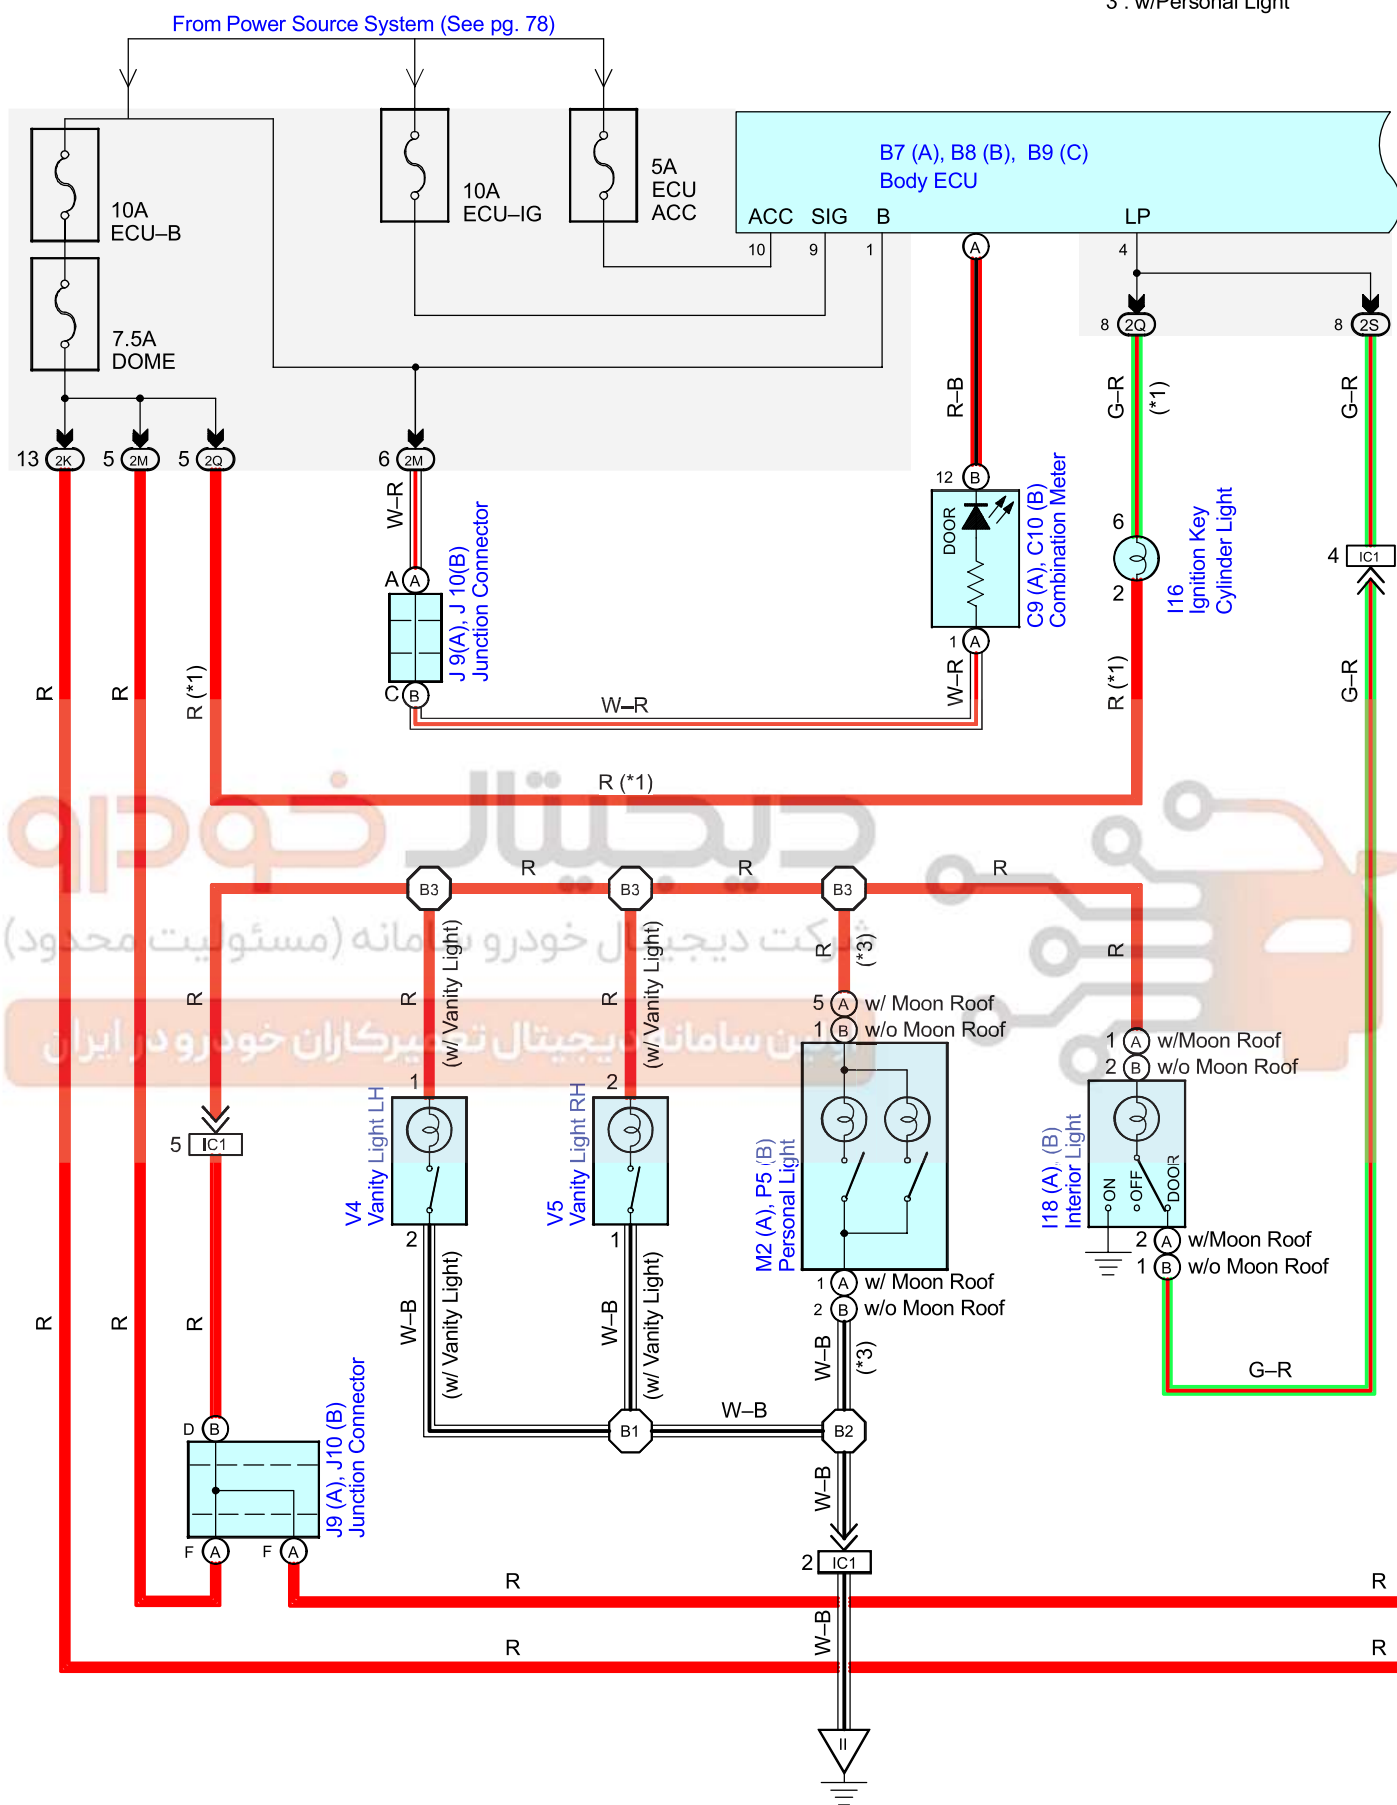

\*4 : w/Luggage Compartment Door Opener

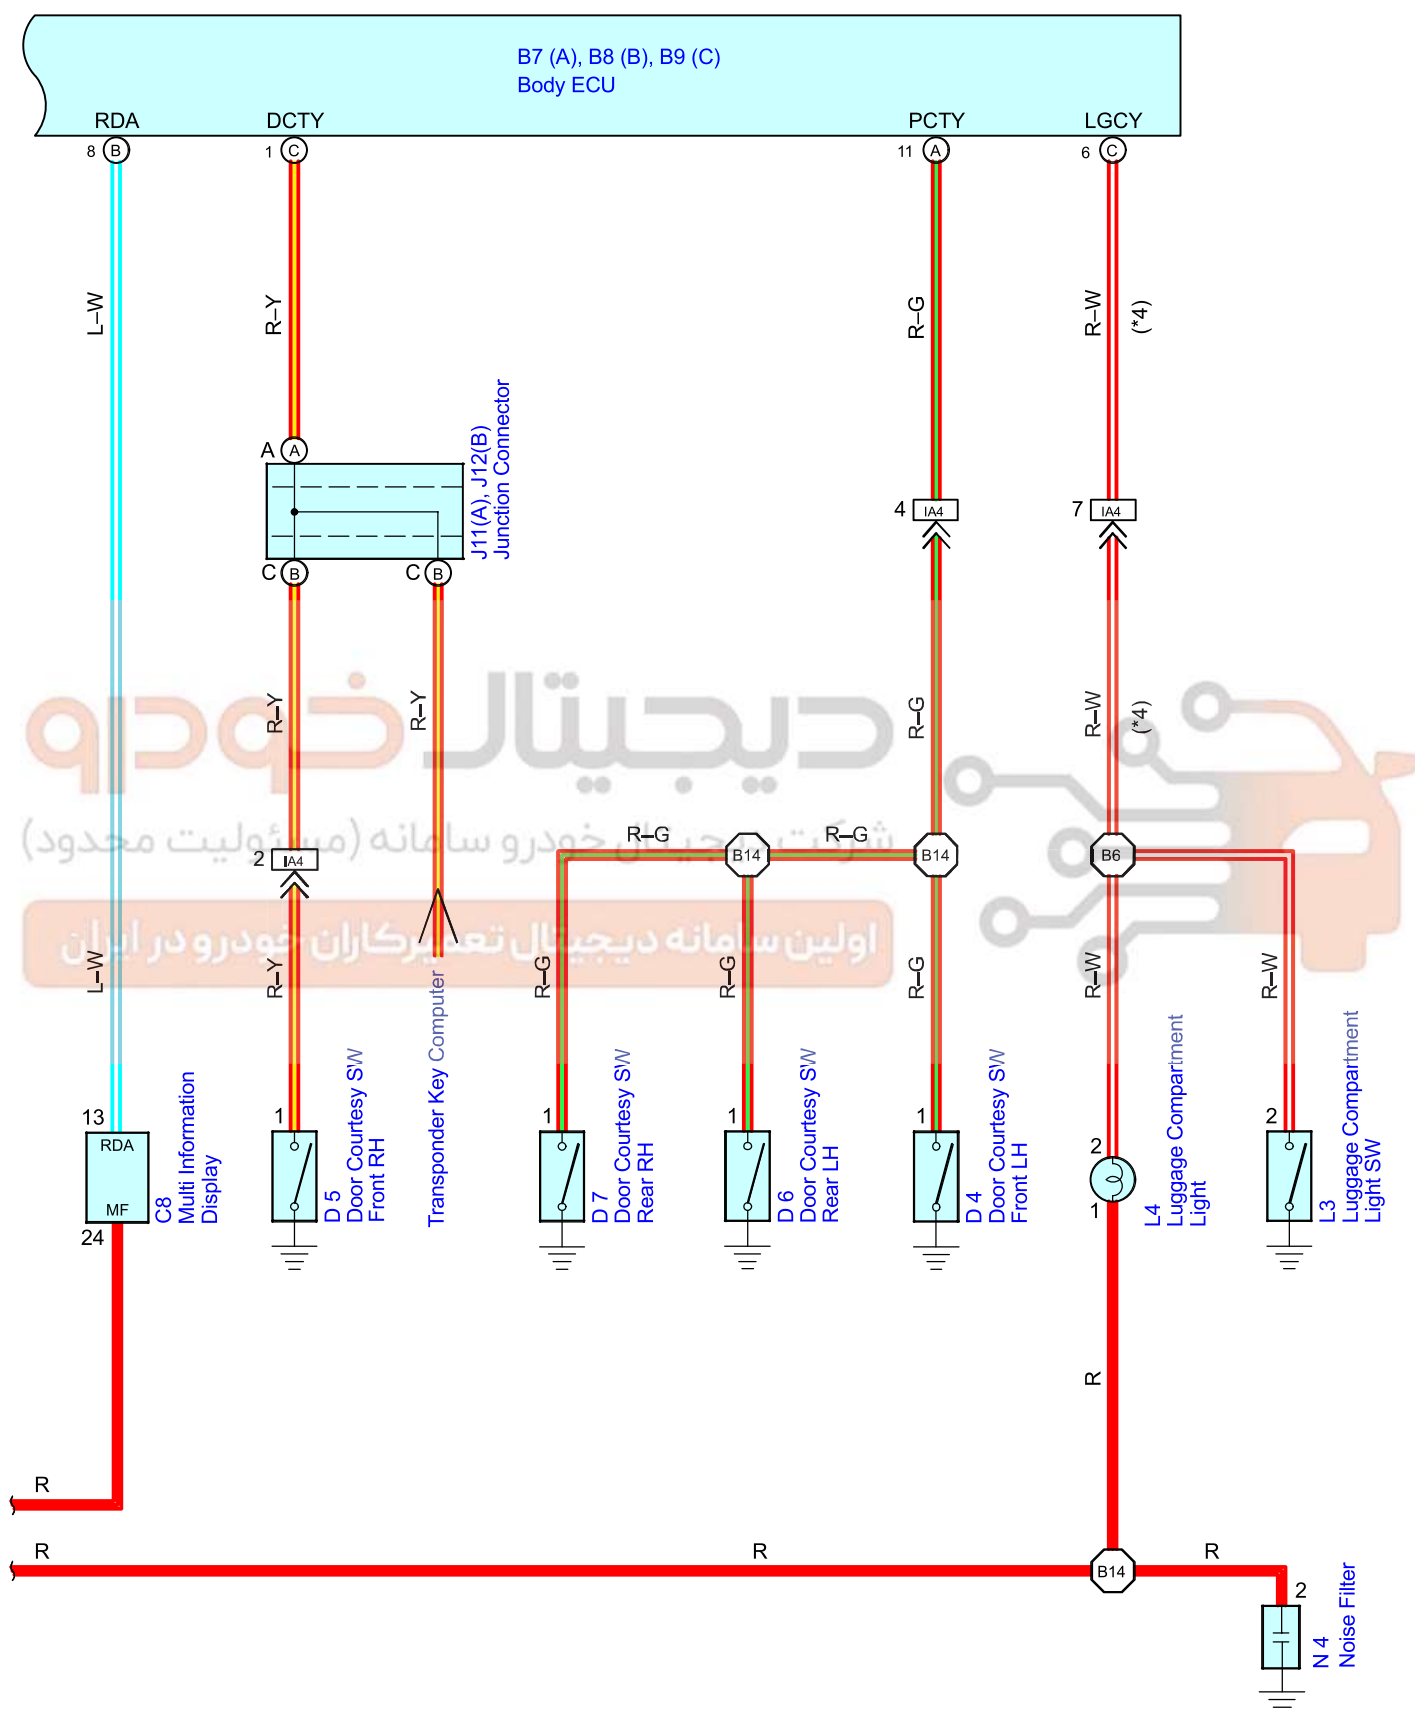

## Interior Light (RHD)

### Service Hints

#### Body ECU

- 9–Ground : Approx. 12 volts with ignition SW at ON or ST position  
 12, 24–Ground : Always continuity  
 1–Ground : Always approx. 12 volts

#### D6, D7, D8, D9 Door Courtesy SW Front LH, RH, Rear LH, RH

- 1–Ground : Closed with each of the door

### ○ : Parts Location

| Code |   | See Page | Code |   | See Page | Code |   | See Page |
|------|---|----------|------|---|----------|------|---|----------|
| B7   | A | 46 (RHD) | D6   |   | 48 (RHD) | J12  | B | 47 (RHD) |
| B8   | B | 46 (RHD) | D7   |   | 48 (RHD) | L3   |   | 48 (RHD) |
| B9   | C | 46 (RHD) | I16  |   | 48 (RHD) | L4   |   | 48 (RHD) |
| C8   |   | 46 (RHD) | I18  | A | 48 (RHD) | M2   | A | 48 (RHD) |
| C9   | A | 46 (RHD) |      | B |          | N4   |   | 49 (RHD) |
| C10  | B | 46 (RHD) | J9   | A | 47 (RHD) | P5   | B | 49 (RHD) |
| D4   |   | 48 (RHD) | J10  | B | 47 (RHD) | V4   |   | 49 (RHD) |
| D5   |   | 48 (RHD) | J11  | A | 47 (RHD) | V5   |   | 49 (RHD) |

### ○ : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)           |
|------|----------|----------------------------------------------------------------|
| 2K   | 26       | Floor Wire and Driver Side J/B                                 |
| 2M   |          |                                                                |
| 2Q   | 26       | Instrument Panel Wire and Driver Side J/B (Lower Finish Panel) |
| 2S   |          |                                                                |

### □ : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)         |
|------|----------|--------------------------------------------------------------------|
| IA4  | 67 (RHD) | Instrument Panel Wire and Floor Wire (Right Kick Panel)            |
| IC1  | 67 (RHD) | Instrument Panel Wire and Roof Wire (Inside of Front Right Pillar) |

### ▽ : Ground Points

| Code | See Page | Ground Points Location            |
|------|----------|-----------------------------------|
| II   | 67 (RHD) | Instrument Panel Reinforcement LH |

### ○ : Splice Points

| Code | See Page | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|----------|---------------------------------|------|----------|---------------------------------|
| B1   | 72 (RHD) | Roof Wire                       | B6   | 72 (RHD) | Floor Wire                      |
| B2   | 72 (RHD) | Roof Wire                       | B14  | 72 (RHD) | Floor Wire                      |
| B3   | 72 (RHD) | Roof Wire                       |      |          |                                 |