


S.G.N.

## 1461-01 STARTING / CHARGING

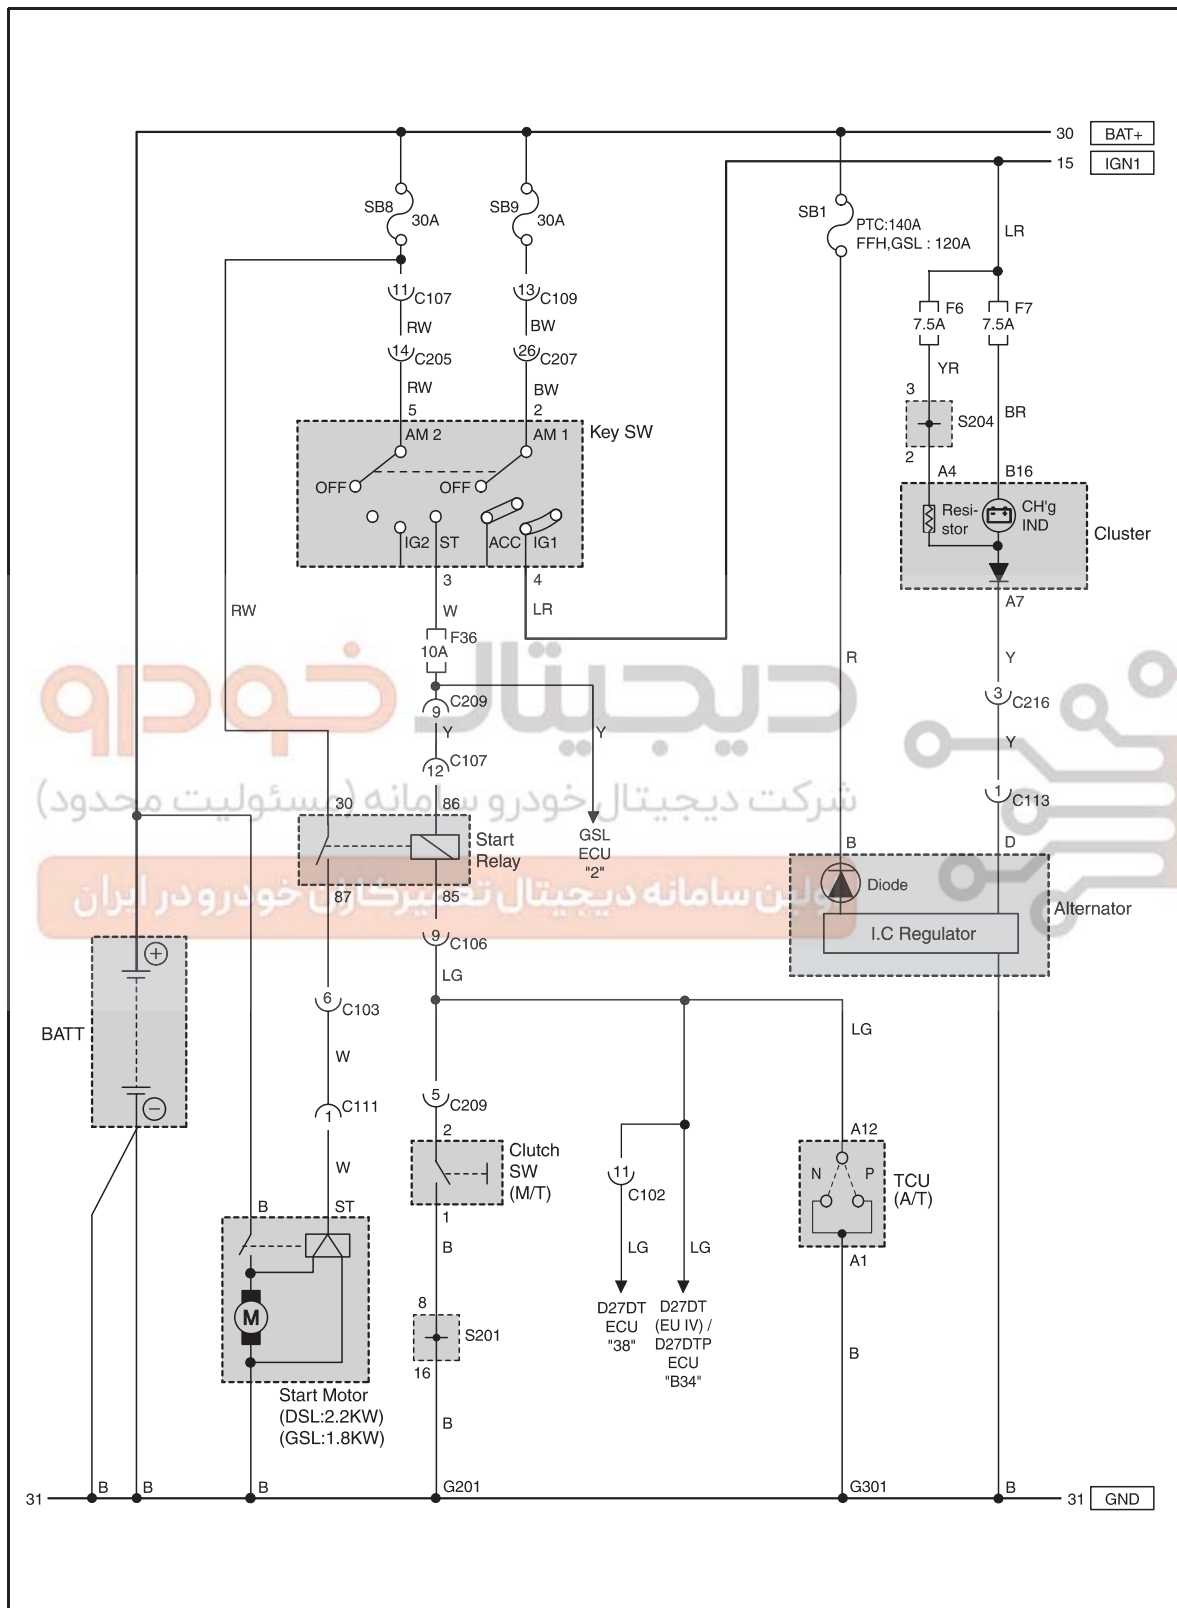

CIRCUIT


REXTON 2010.01

|                    |  |
|--------------------|--|
| Modification basis |  |
| Application basis  |  |
| Affected VIN       |  |

## (1) CONNECTOR INFORMATION

| Connector Number<br>(Pin Number, Color) | Connecting Wiring<br>Harness          | Connector Position                           | Remark   |
|-----------------------------------------|---------------------------------------|----------------------------------------------|----------|
| C102 (20Pin, White)                     | W/H Floor - Eng Room Fuse & Relay Box | Eng Room Fuse & Relay Box                    |          |
| C103 (6Pin, Colorless)                  | W/H Floor - Eng Room Fuse & Relay Box | Eng Room Fuse & Relay Box                    |          |
| C106 (18Pin, White)                     | W/H Floor - Eng Room Fuse & Relay Box | Eng Room Fuse & Relay Box                    |          |
| C107 (14Pin, White)                     | W/H Eng - Eng Room Fuse & Relay Box   | Eng Room Fuse & Relay Box                    |          |
| C109 (16Pin, White)                     | W/H Eng - Eng Room Fuse & Relay Box   | Eng Room Fuse & Relay Box                    |          |
| C111 (1Pin, Gray)                       | W/H Floor - Starter Motor             | Under the Preheating Time Relay              | Solenoid |
| C113 (2Pin, Black)                      | W/H Eng - W/H Alternator              | Under the Coolant Reserve Tank               |          |
| C205 (16Pin, White)                     | W/H Main - W/H Floor                  | Driver Cowl Side C/Holder                    | C/Holder |
| C207 (39Pin, Gray)                      | W/H Main - W/H Floor                  | Driver Cowl Side C/Holder                    | C/Holder |
| C209 (26Pin, Black)                     | W/H Main - W/H Floor                  | Driver Cowl Side C/Holder                    | C/Holder |
| C216 (26Pin, White)                     | W/H Main - W/H Eng                    | Passenger Cowl Side C/Holder                 | C/Holder |
| G201                                    | W/H Main                              | Under the Driver Cowl Side PNL               |          |
| G301                                    | W/H Floor                             | Under the Driver Seat                        |          |
| S201 (20Pin)                            | W/H Main                              | Upper the I/P Relay Box (Inside Protector)   |          |
| S204 (20Pin)                            | W/H Main                              | Backside A/V Head Unit (Inside LH Protector) |          |

## (2) CONNECTOR IDENTIFICATION SYMBOL &amp; PIN NUMBER POSITION

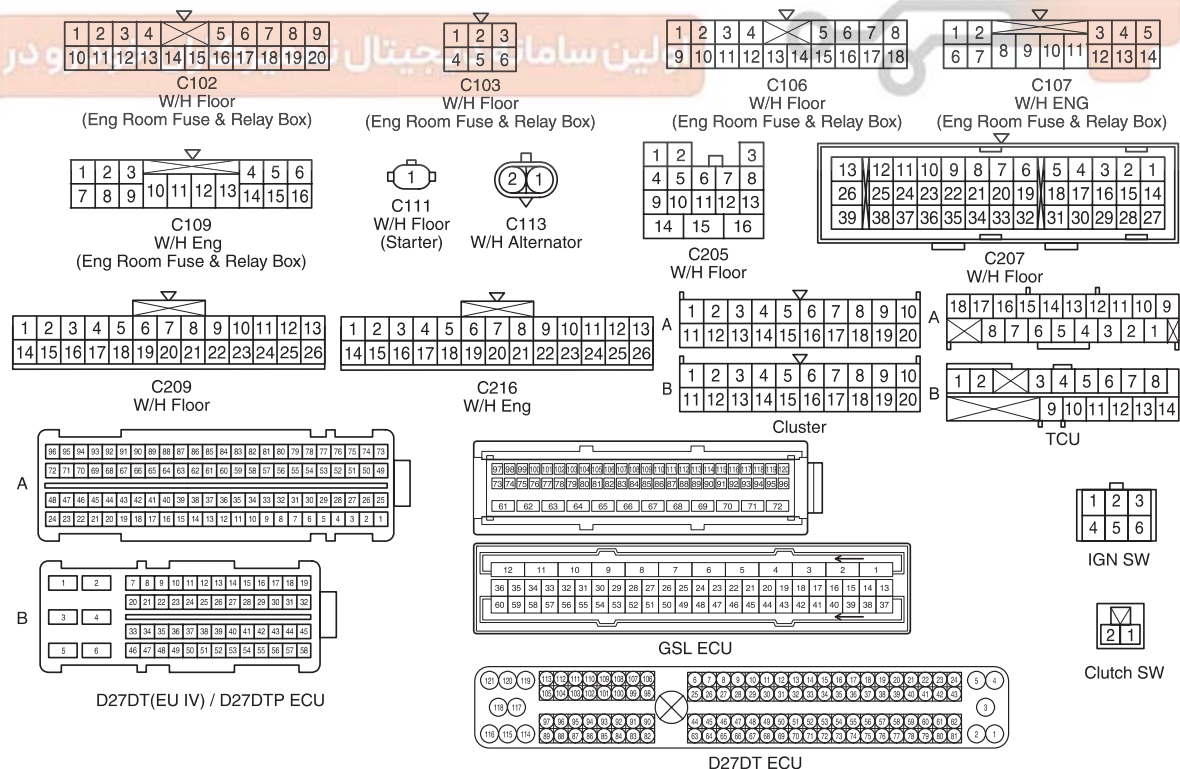

|                    |  |
|--------------------|--|
| Modification basis |  |
| Application basis  |  |
| Affected VIN       |  |