


8. ABS/ABD/ASR


1) WARNING LAMP, ASR OFF SWITCH, INDICATOR

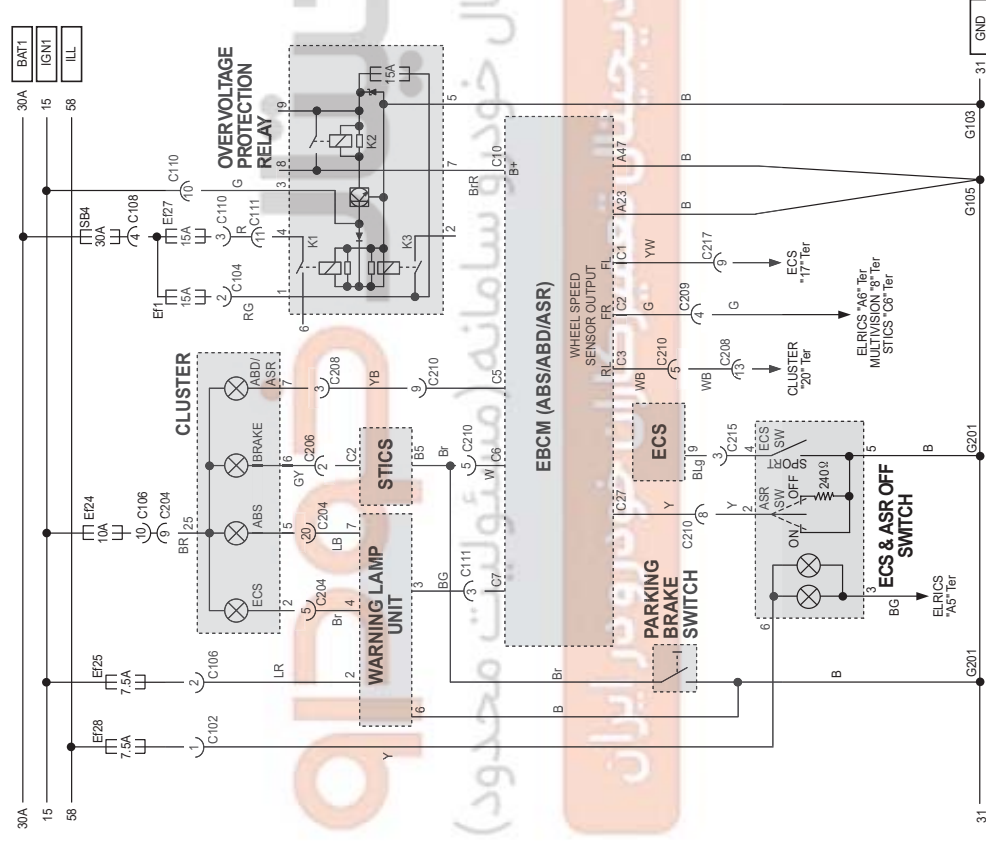

a. CONNECTOR INFORMATION

CONNECTOR NUMBER	WIRING HARNESS	GROUND POSITION
G103	Engine Room	Behind Right Head Lamp
G105	Engine Room	Front ECM Engine Room
G201	Main	Above Driver Seat Leg Room

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

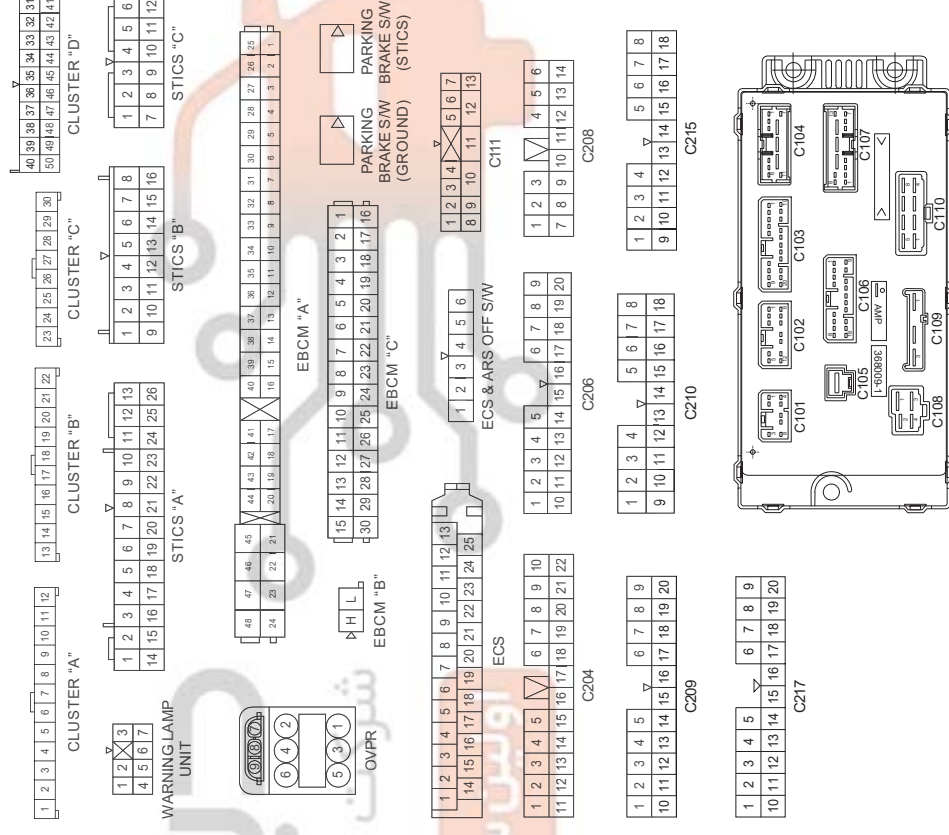


C. POSITION OF CONNECTORS AND GROUNDS




EBCM




OVR

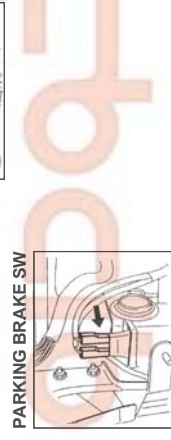

PARKING BRAKE SW

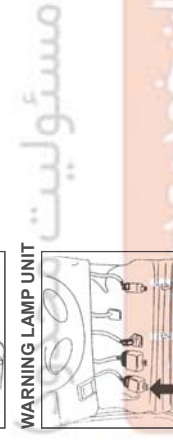

WARNING LAMP UNIT

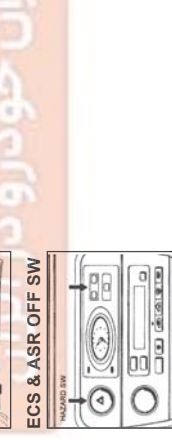


ECS & ASR OFF SW




STICS


• W/H ENGINE ROOM

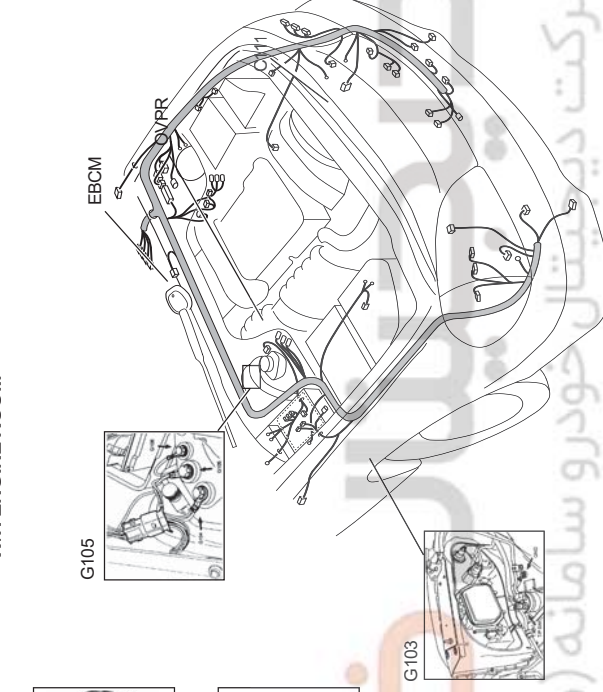


• W/H MAIN : FRONT

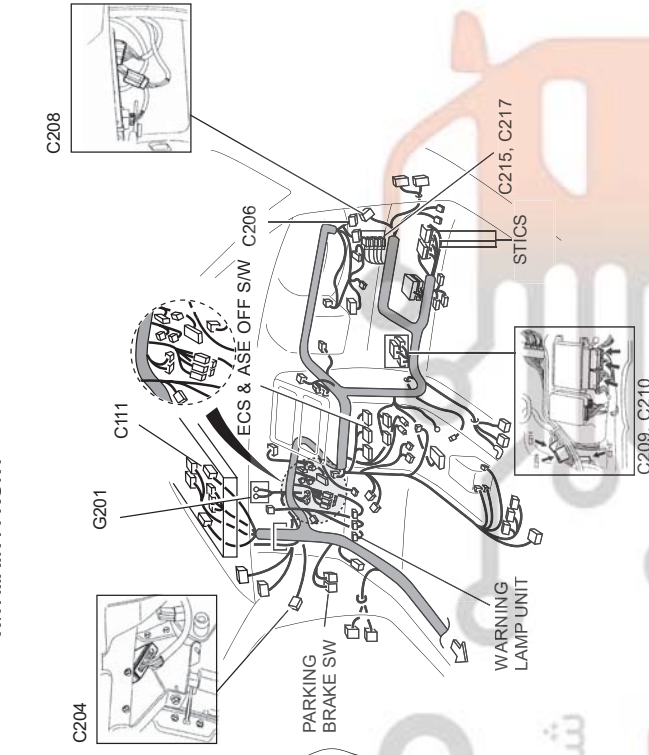

• W/H INSTRUMENT PANEL

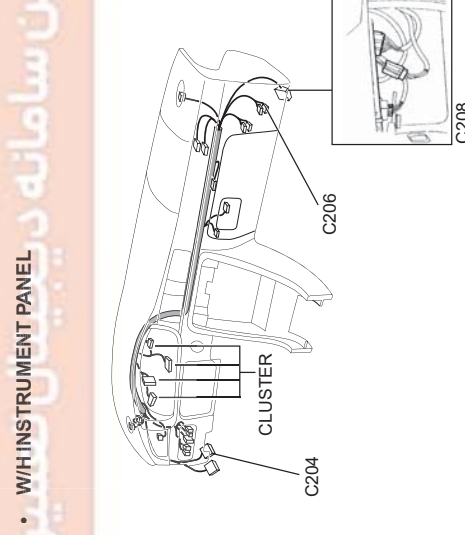

• W/H FLOOR : CO-DRIVER SEAT


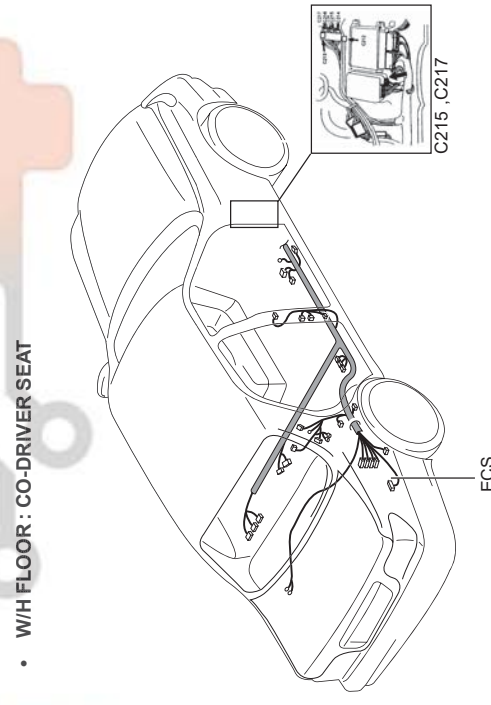


2) WHEEL SPEED SENSOR, HYDRAULIC MODULATOR, STOP SWITCH, MOTOR RELAY

a. CONNECTOR INFORMATION

CONNECTOR NUMBER	WIRING HARNESS	GROUND POSITION
G201	Main	Above Driver Seat Leg Room

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

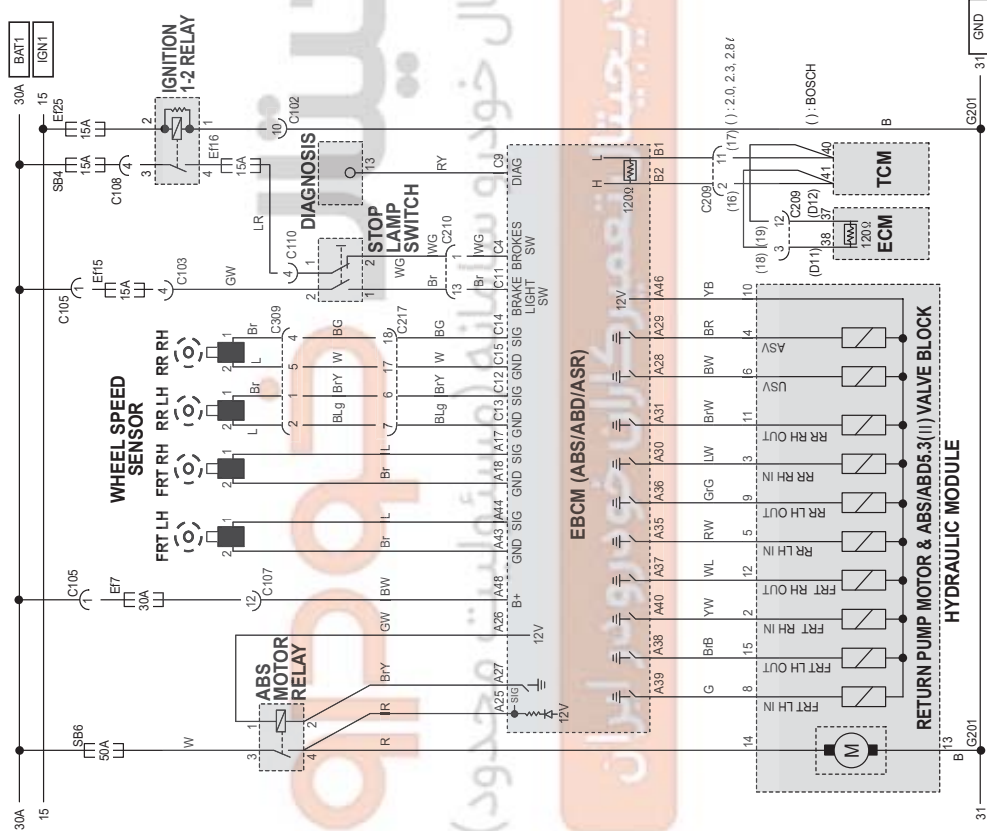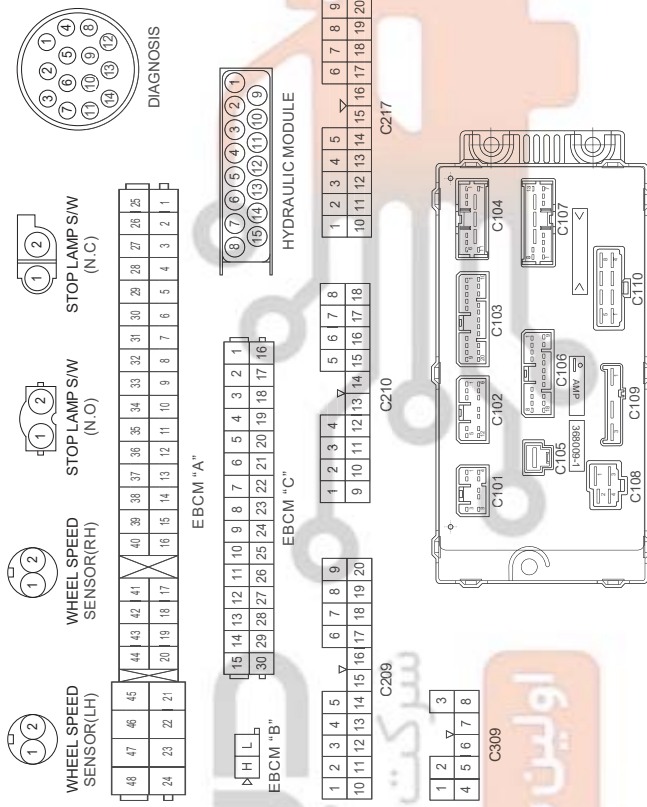



C. POSITION OF CONNECTORS AND GROUNDS

• W/H ENGINE ROOM




• W/H MAIN : FRONT

• W/H FLOOR : CO-DRIVER SEAT

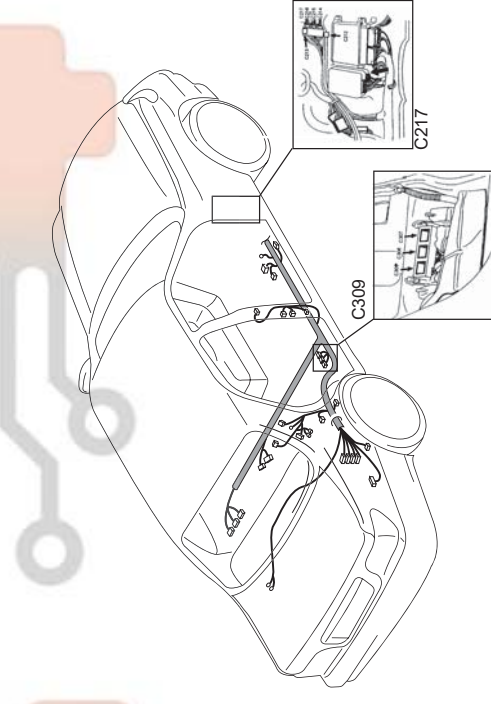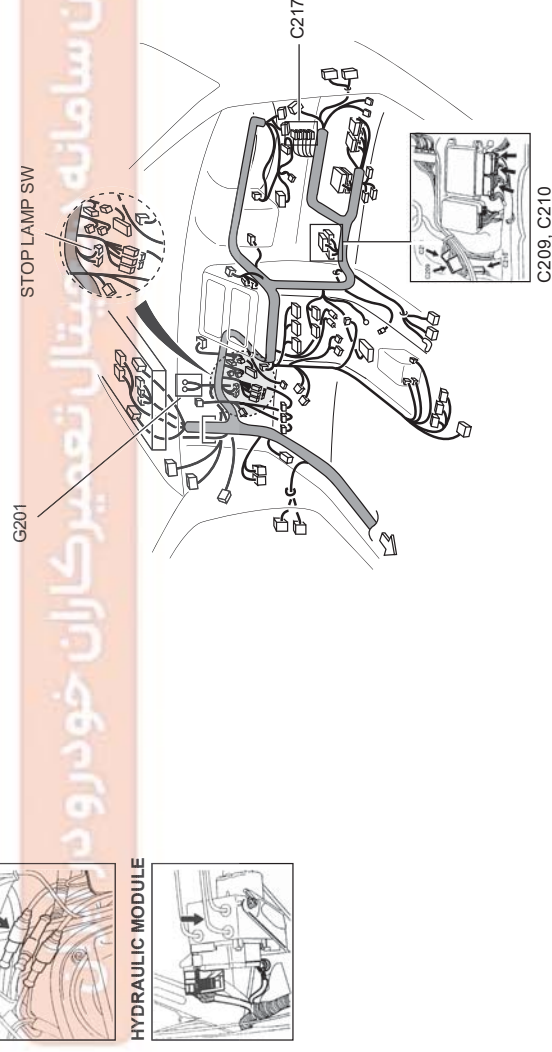

9. ABS/ABD


1) WARNING LAMP, INDICATOR

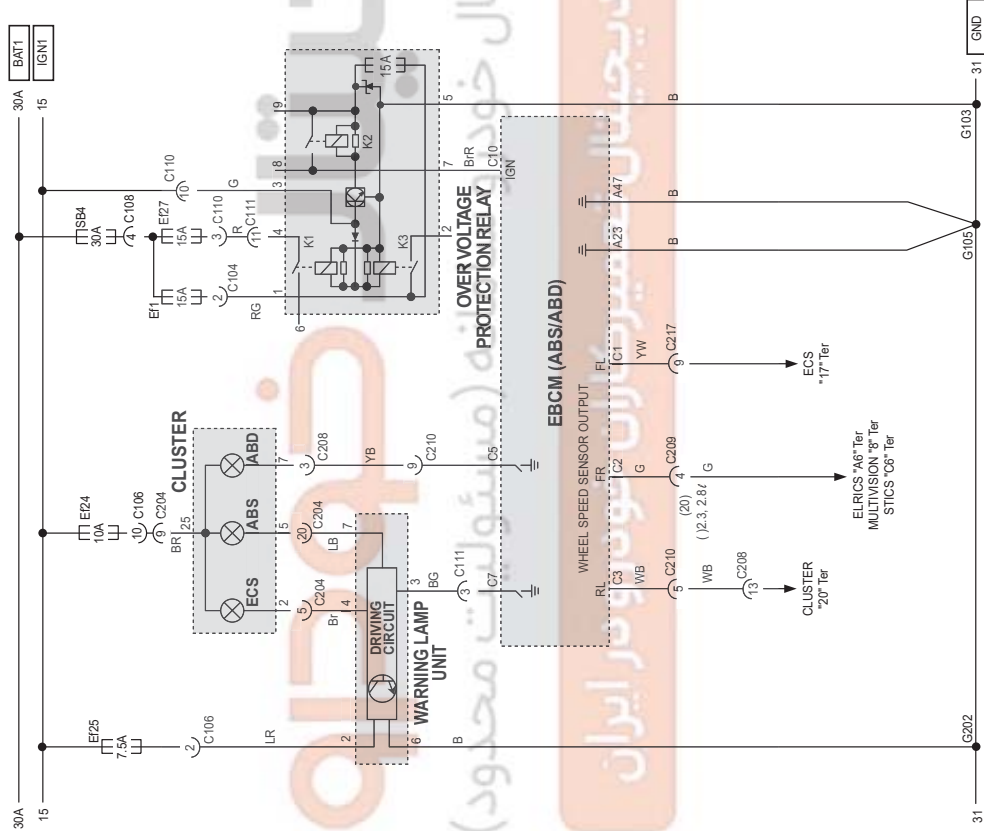

a. CONNECTOR INFORMATION


CONNECTOR NUMBER	WIRING HARNESS	GROUND POSITION
G103	Engine Room	Behind Right Head Lamp
G105	Engine Room	Front ECM Engine Room
G202	Main	Below Center Console Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

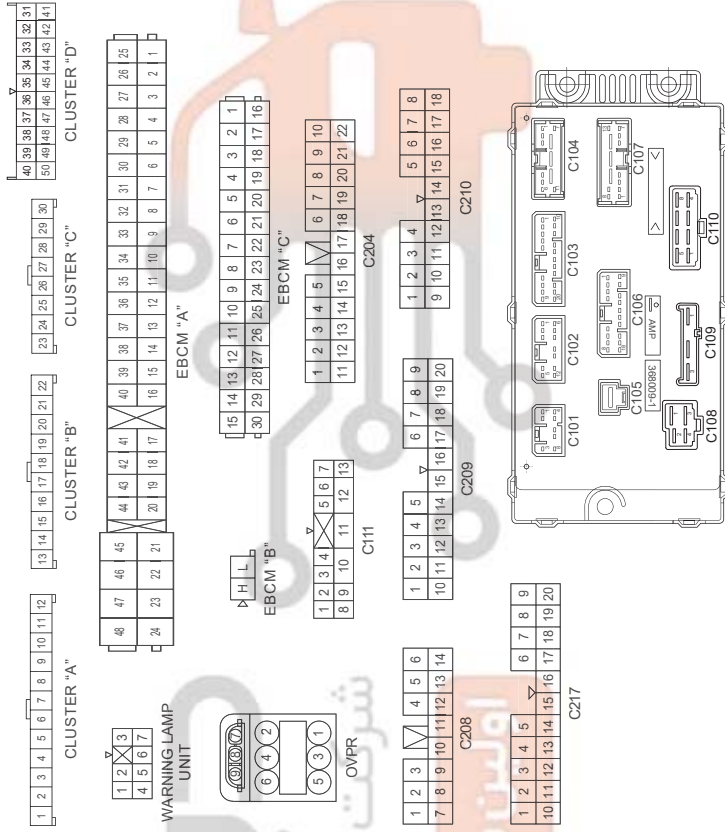


C. POSITION OF CONNECTORS AND GROUNDS

• W/H ENGINE ROOM

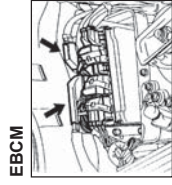


EBCM

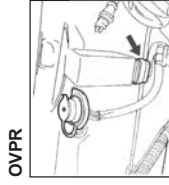


OVRP




WARNING LAMP UNIT

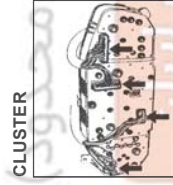


CLUSTER

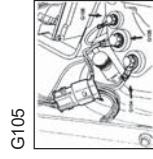

G105

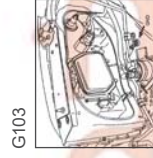


G103

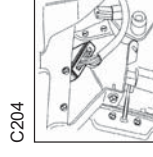

C204




C111

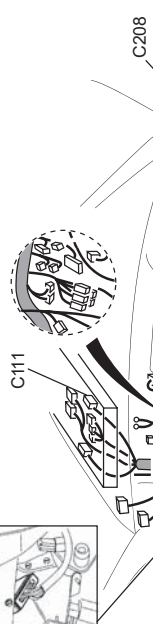

C208

C217

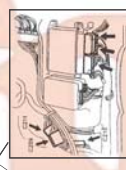


C209, C210



G202

• W/H FLOOR : CO-DRIVER SEAT

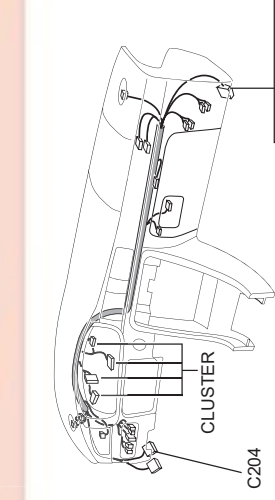


C204

CLUSTER



C208

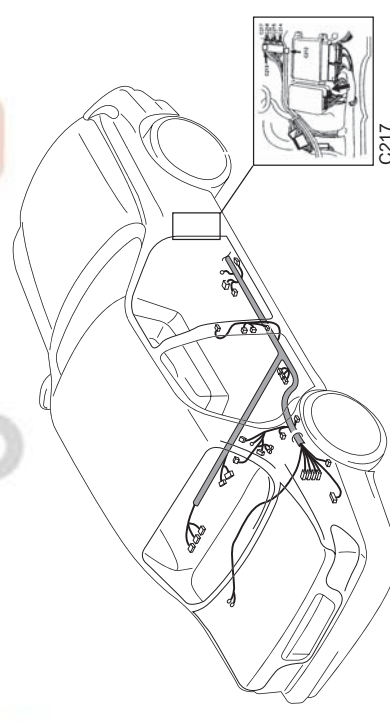


C217


2) WHEEL SPEED SENSOR, HYDRAULIC MODULATOR, STOP SWITCH, MOTOR RELAY, DIAGNOSIS

a. CONNECTOR INFORMATION

CONNECTOR NUMBER	WIRING HARNESS	GROUND POSITION
G201	Main	Above Driver Seat Leg Room

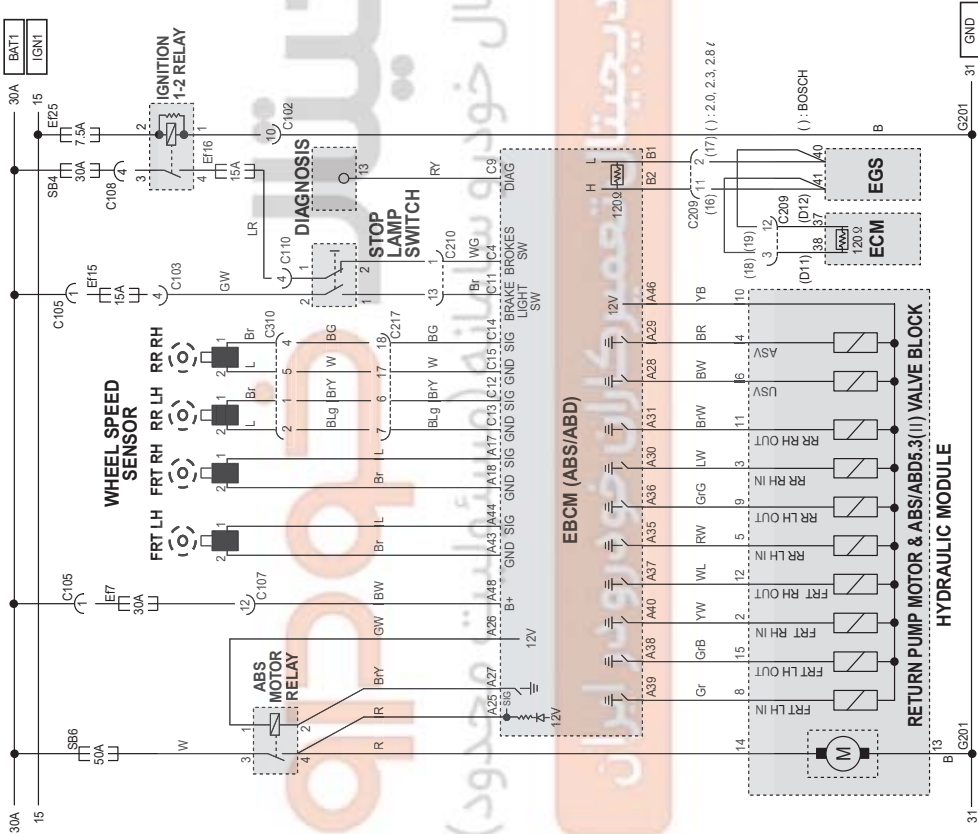


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION


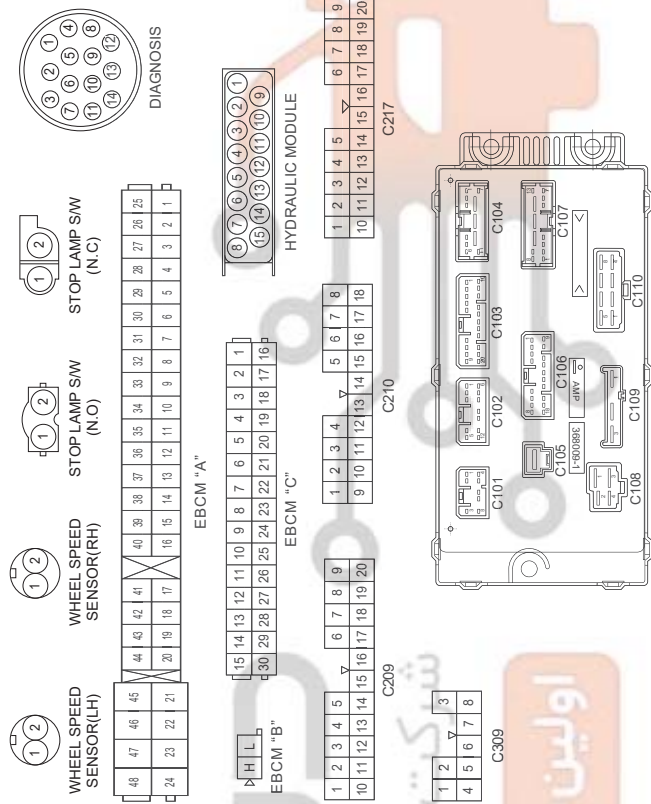



C. POSITION OF CONNECTORS AND GROUNDS

• W/ENGINE ROOM

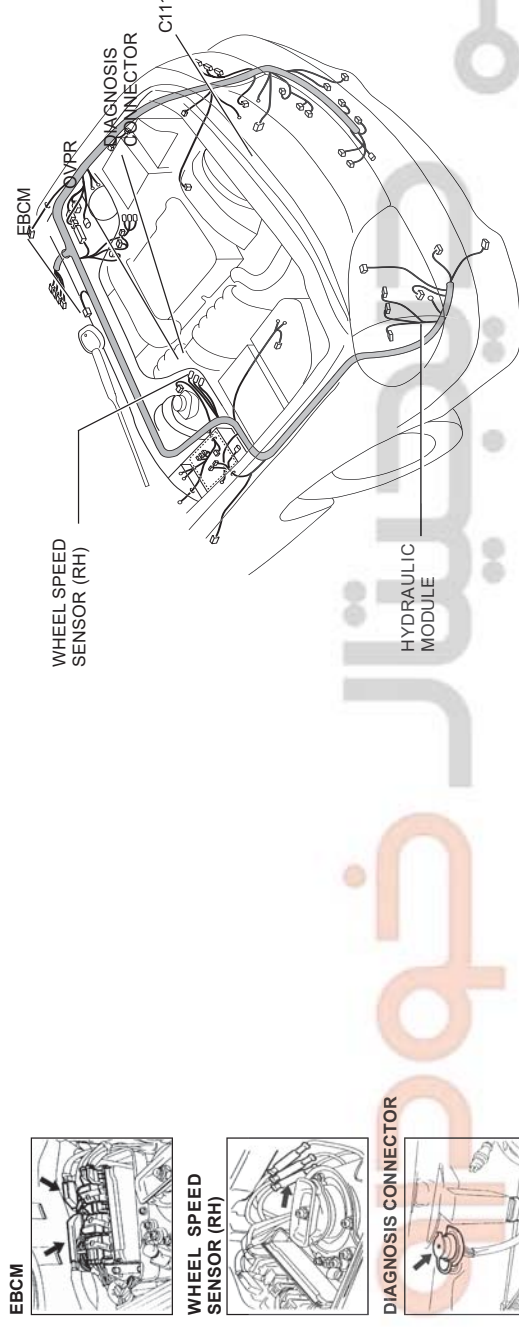


• W/H FLOOR : CO-DRIVER SEAT

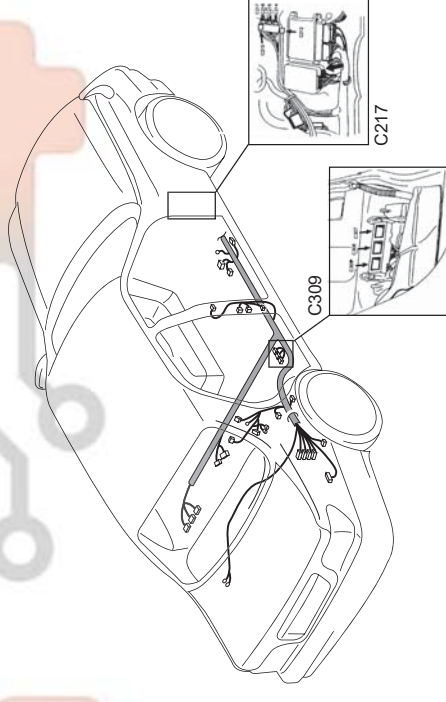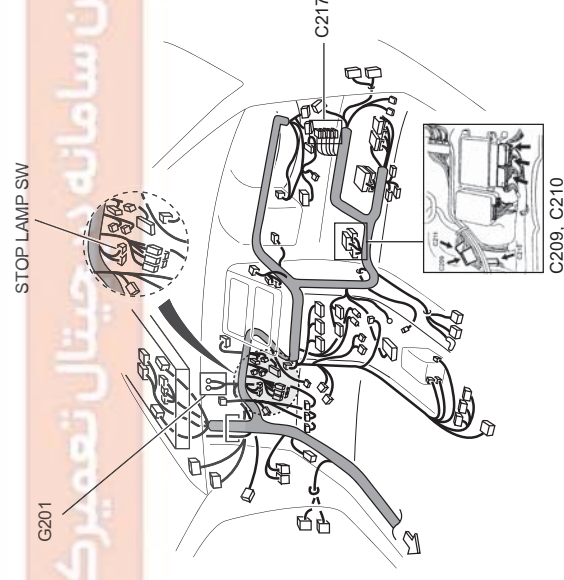

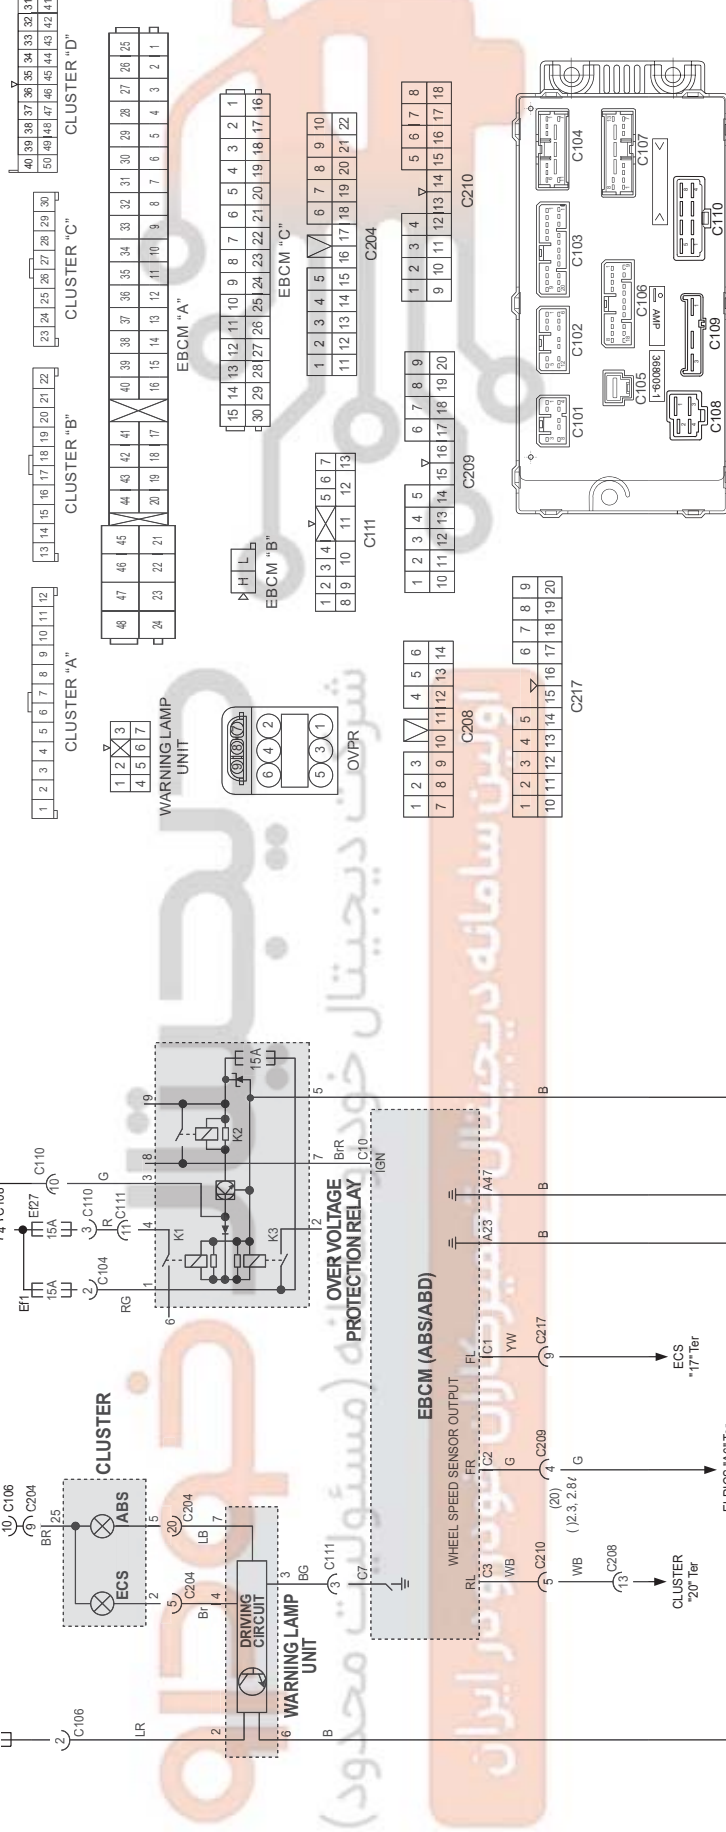


C. POSITION OF CONNECTORS AND GROUNDS


• W/H ENGINE ROOM

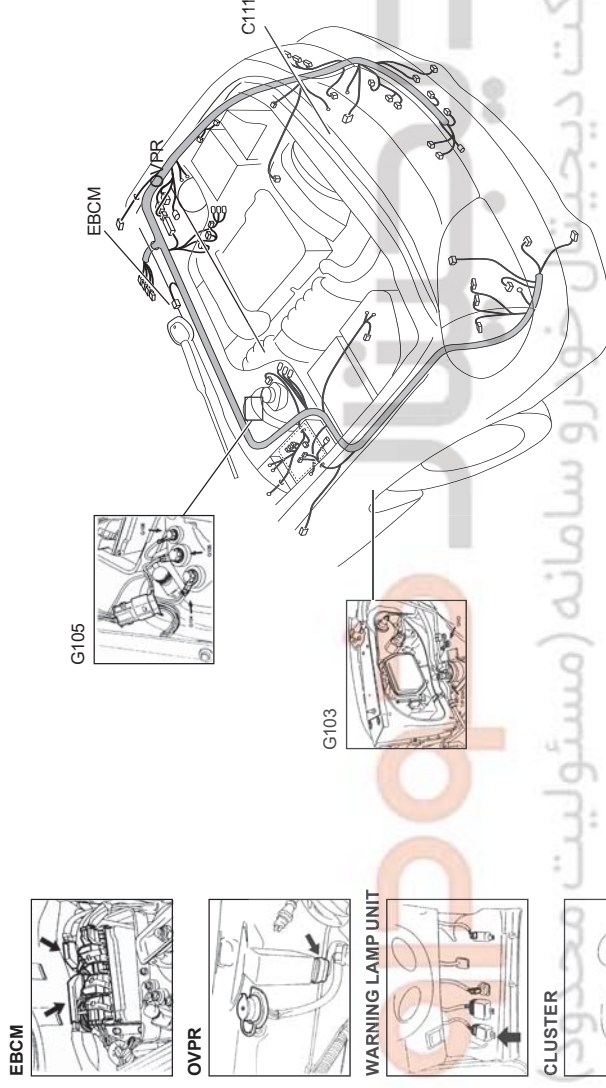


• W/H MAIN : FRONT

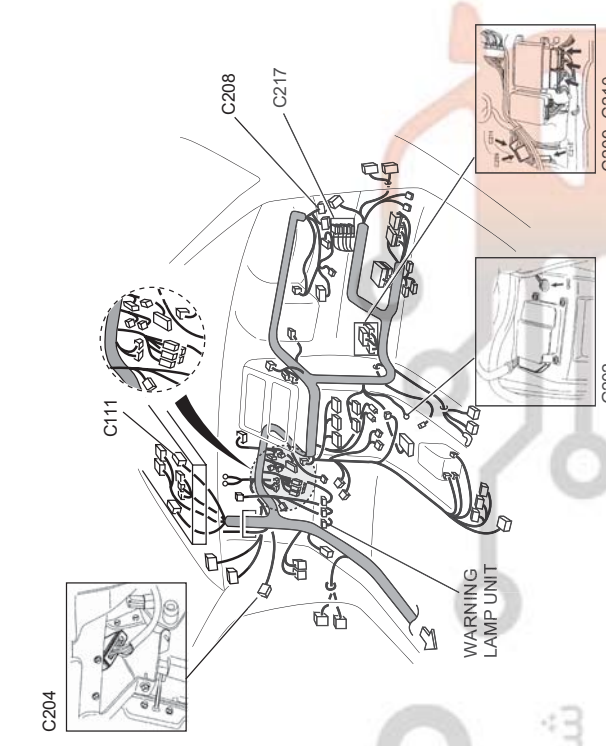

• W/H INSTRUMENT PANEL

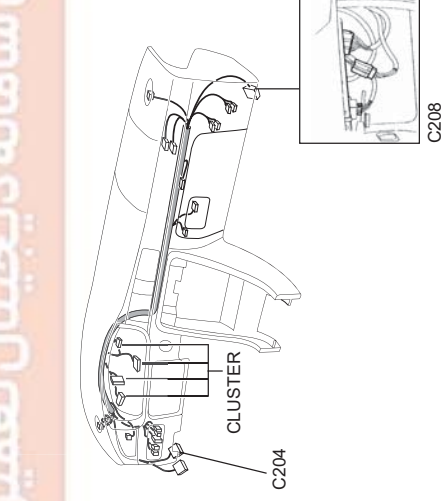

• W/H FLOOR : CO-DRIVER SEAT

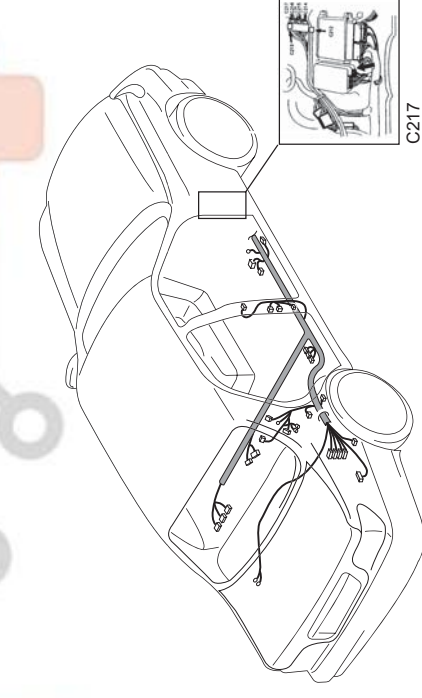

CONNECTOR NUMBER	WIRING HARNESS	GROUND POSITION
G201	Main	Above Driver Seat Leg Room

WHEEL SPEED SENSOR (LH)

48 47 46 45

24 23 22 21

WHEEL SPEED SENSOR (RH)

44 43 42 41

20 19 18 17

STOP LAMP SW (L)

1 2

STOP LAMP SW (R)

1 2

DIAGNOSIS

1 2 3 4 5 6 7 8 9 10 11 12 13 14

EBCM "A"

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1

EBCM "B"

30 29 28 27 26 25 24 23 22 21 20 19 18 17 16

EBCM "C"

15 14 13 12 11 10 9 8 7 6 5 4 3 2 1

HYDRAULIC MODULE

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20

C209

1 2 3 4 5 6 7 8

C210

1 2 3 4 5 6 7 8

C217

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20

C101

1 2 3 4 5 6 7 8 9

C102

1 2 3 4 5 6 7 8

C103

1 2 3 4 5 6 7 8

C104

1 2 3 4 5 6 7 8

C105

1 2 3 4 5 6 7 8

C106

1 2 3 4 5 6 7 8

C107

1 2 3 4 5 6 7 8

C108

1 2 3 4 5 6 7 8

C109

1 2 3 4 5 6 7 8

C110

1 2 3 4 5 6 7 8

C111

1 2 3 4 5 6 7 8

C112

1 2 3 4 5 6 7 8

C113

1 2 3 4 5 6 7 8

C114

1 2 3 4 5 6 7 8

C115

1 2 3 4 5 6 7 8

C116

1 2 3 4 5 6 7 8

C117

1 2 3 4 5 6 7 8

C118

1 2 3 4 5 6 7 8

C119

1 2 3 4 5 6 7 8

C120

1 2 3 4 5 6 7 8

C121

1 2 3 4 5 6 7 8

C122

1 2 3 4 5 6 7 8

C123

1 2 3 4 5 6 7 8

C124

1 2 3 4 5 6 7 8

C125

1 2 3 4 5 6 7 8

C126

1 2 3 4 5 6 7 8

C127

1 2 3 4 5 6 7 8

C128

1 2 3 4 5 6 7 8

C129

1 2 3 4 5 6 7 8

C130

1 2 3 4 5 6 7 8

C131

1 2 3 4 5 6 7 8

C132

1 2 3 4 5 6 7 8

C133

1 2 3 4 5 6 7 8

C134

1 2 3 4 5 6 7 8

C135

1 2 3 4 5 6 7 8

C136

1 2 3 4 5 6 7 8

C137

1 2 3 4 5 6 7 8

C138

1 2 3 4 5 6 7 8

C139

1 2 3 4 5 6 7 8

C140

1 2 3 4 5 6 7 8

C141

1 2 3 4 5 6 7 8

C142

1 2 3 4 5 6 7 8

C143

1 2 3 4 5 6 7 8

C144

1 2 3 4 5 6 7 8

C145

1 2 3 4 5 6 7 8

C146

1 2 3 4 5 6 7 8

C147

1 2 3 4 5 6 7 8

C148

1 2 3 4 5 6 7 8

C149

1 2 3 4 5 6 7 8

C150

1 2 3 4 5 6 7 8

C151

1 2 3 4 5 6 7 8

C152

1 2 3 4 5 6 7 8

C153

1 2 3 4 5 6 7 8

C154

1 2 3 4 5 6 7 8

C155

1 2 3 4 5 6 7 8

C156

1 2 3 4 5 6 7 8

C157

1 2 3 4 5 6 7 8

C158

1 2 3 4 5 6 7 8

C159

1 2 3 4 5 6 7 8

C160

1 2 3 4 5 6 7 8

C161

1 2 3 4 5 6 7 8

C162

1 2 3 4 5 6 7 8

C163

1 2 3 4 5 6 7 8

C164

1 2 3 4 5 6 7 8

C165

1 2 3 4 5 6 7 8

C166

1 2 3 4 5 6 7 8

C167

1 2 3 4 5 6 7 8

C168

1 2 3 4 5 6 7 8

C169

1 2 3 4 5 6 7 8

C170

1 2 3 4 5 6 7 8

C171

1 2 3 4 5 6 7 8

C172

1 2 3 4 5 6 7 8

C173

1 2 3 4 5 6 7 8

C174

1 2 3 4 5 6 7 8

C175

1 2 3 4 5 6 7 8

C176

1 2 3 4 5 6 7 8

C177

1 2 3 4 5 6 7 8

C178

1 2 3 4 5 6 7 8

C179

1 2 3 4 5 6 7 8

C180

1 2 3 4 5 6 7 8

C181

1 2 3 4 5 6 7 8

C182

1 2 3 4 5 6 7 8

C183

1 2 3 4 5 6 7 8

C184

1 2 3 4 5 6 7 8

C185

1 2 3 4 5 6 7 8

C186

1 2 3 4 5 6 7 8

C187

1 2 3 4 5 6 7 8

C188

1 2 3 4 5 6 7 8

C189

1 2 3 4 5 6 7 8

C190

1 2 3 4 5 6 7 8

C191

1 2 3 4 5 6 7 8

C192

1 2 3 4 5 6 7 8

C193

1 2 3 4 5 6 7 8

C194

1 2 3 4 5 6 7 8

C195

1 2 3 4 5 6 7 8

C196

1 2 3 4 5 6 7 8

C197

1 2 3 4 5 6 7 8

C198

1 2 3 4 5 6 7 8

C199


1 2 3 4 5 6 7 8

C200


1 2 3 4 5 6 7 8

C. POSITION OF CONNECTORS AND GROUNDS


EBCM

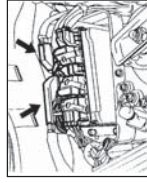

WHEEL SPEED
SENSOR (RH)

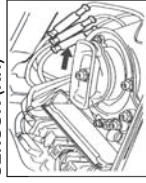


DIAGNOSIS CONNECTOR

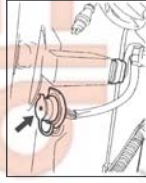


WHEEL SPEED
SENSOR (LH)



HYDRAULIC MODULE

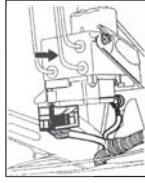

• WH ENGINE ROOM

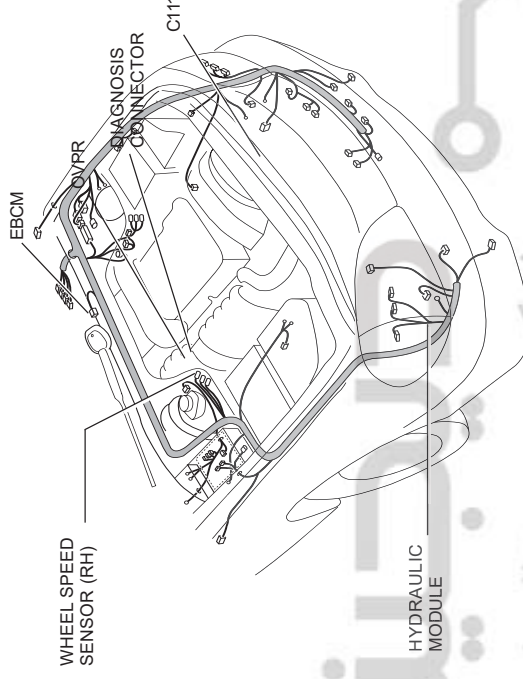

• WH FLOOR : CO-DRIVER SEAT

• WH MAIN : FRONT

STOP LAMP SW

G201

