


Turn Signal and Hazard Warning Light

Service Hints

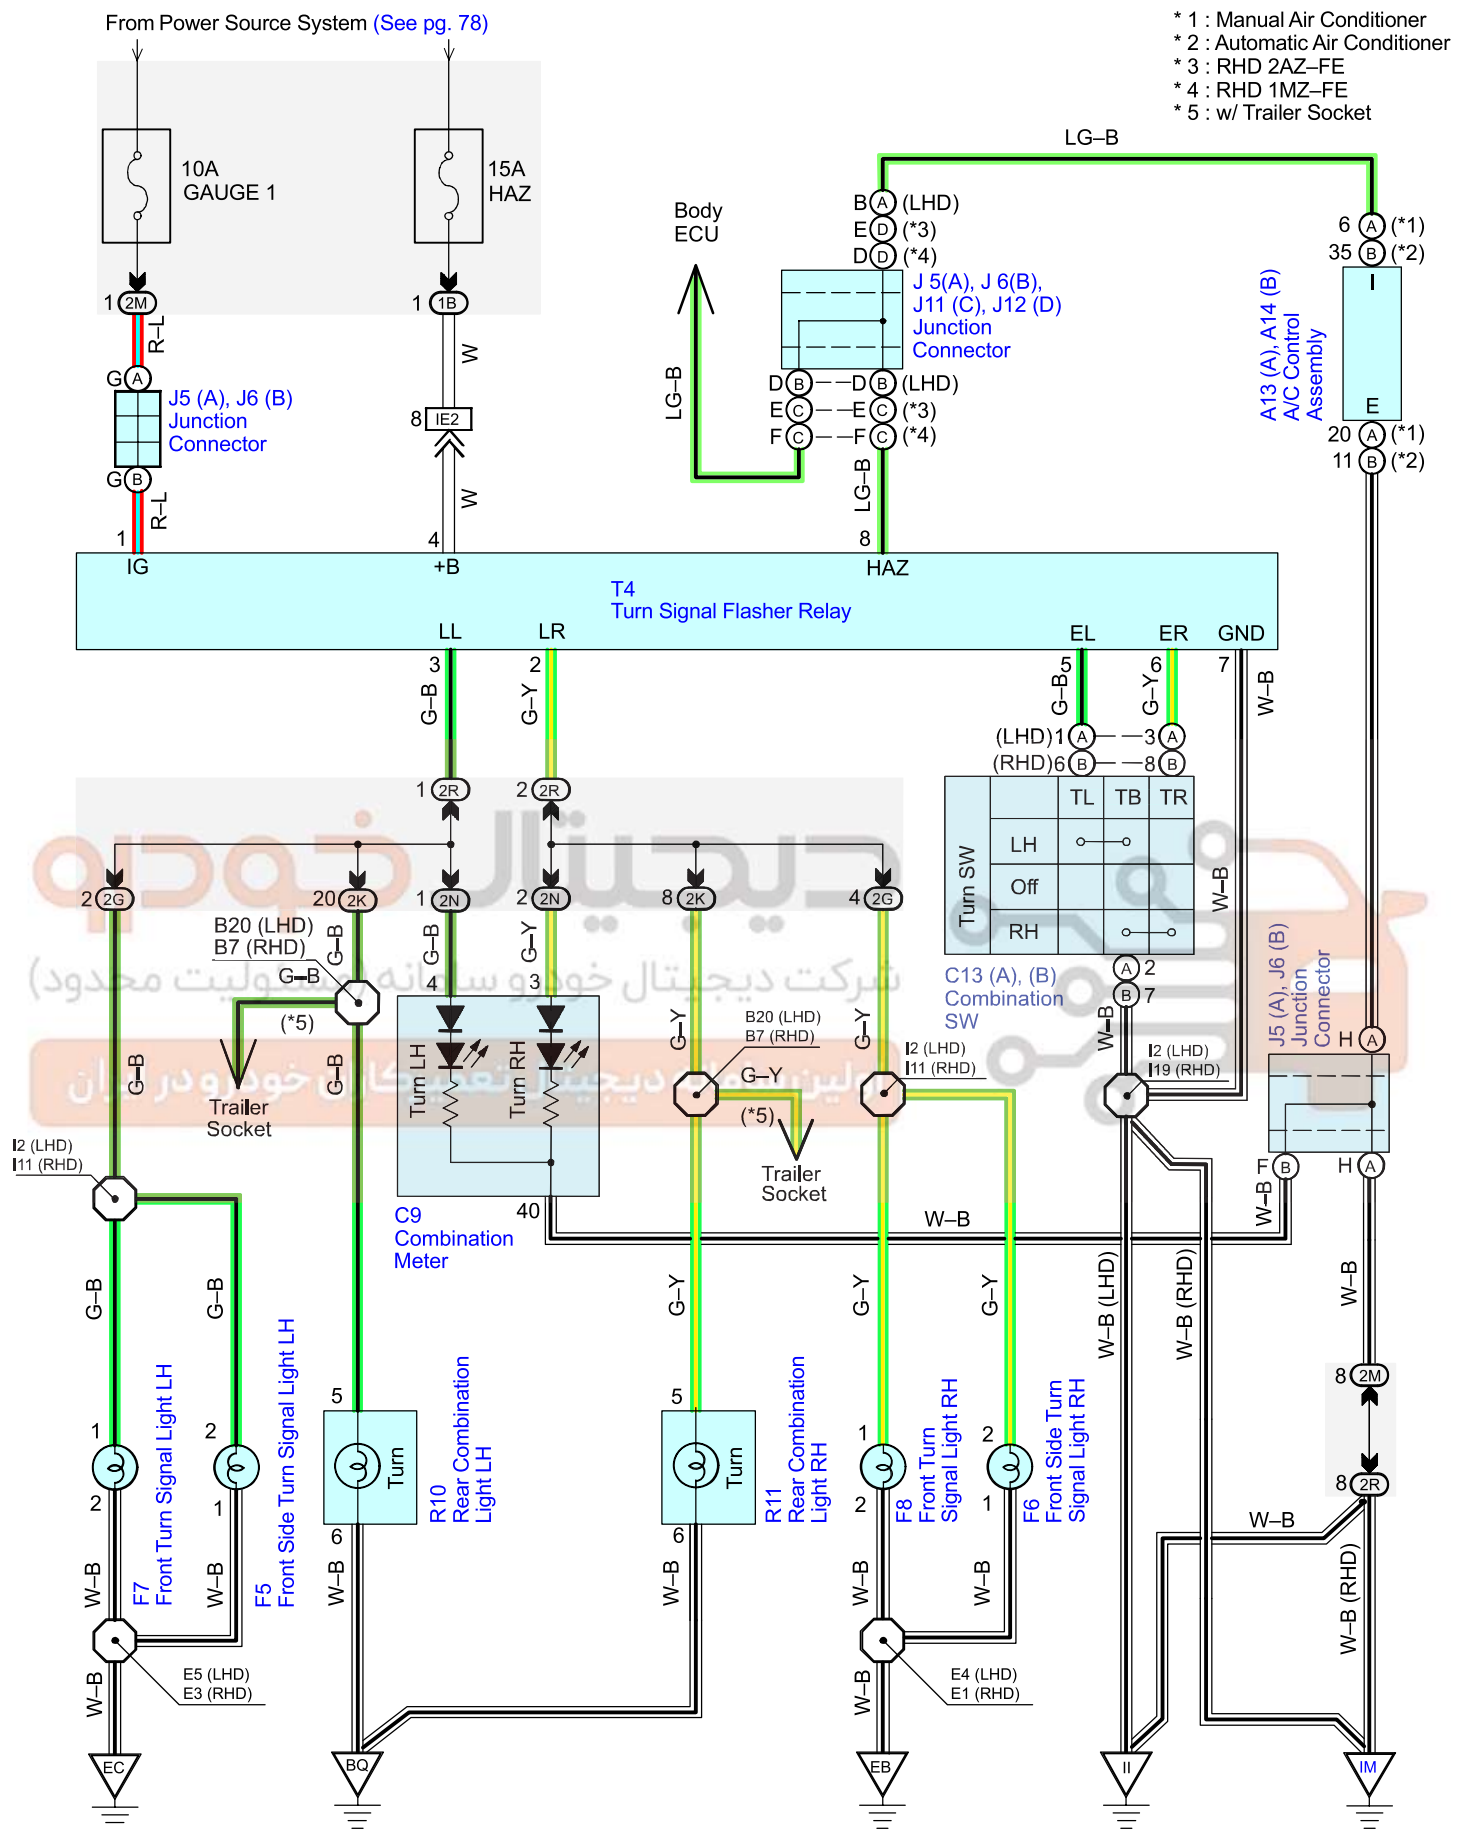

Service Hints**T4 Turn Signal Flasher Relay**

1-Ground : Approx. 12 volts with ignition SW at ON or ST position

4-Ground : Always approx. 12 volts

7-Ground : Always continuity

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A13	A	36 (LHD)	F5		32 (LHD 1MZ-FE)	J11	C	37 (LHD)
		46 (RHD)	F6		34 (LHD 2AZ-FE)			47 (RHD)
A14	B	36 (LHD)	F7		42 (RHD 1MZ-FE)	J12	D	37 (LHD)
		46 (RHD)	F8		44 (RHD 2AZ-FE)			47 (RHD)
C9		36 (LHD)	J5	A	37 (LHD)	R10		39 (LHD)
		46 (RHD)			47 (RHD)			49 (RHD)
C13	A	36 (LHD)	J6	B	37 (LHD)	R11		39 (LHD)
		46 (RHD)			47 (RHD)			49 (RHD)
C13	B	36 (LHD)				T4		37 (LHD)
		46 (RHD)						47 (RHD)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room Main Wire and Engine Room J/B
2G	26	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2K	26	Floor Wire and Driver Side J/B (Lower Finish Panel)
2M	26	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2N		
2R		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE2	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
	67 (RHD)	Engine Room Main Wire and Instrument Panel Wire (Left Side of Steering Column Tube)

▽ : Ground Points

Code	See Page	Ground Points Location
EB	52 (LHD 1MZ-FE)	Right Fender
	64 (RHD 1MZ-FE)	
	54 (LHD 2AZ-FE)	
	66 (RHD 2AZ-FE)	
EC	52 (LHD 1MZ-FE)	Left Fender
	64 (RHD 1MZ-FE)	
	54 (LHD 2AZ-FE)	
	66 (RHD 2AZ-FE)	
BQ	60 (LHD)	Lower Back Panel Center
	72 (RHD)	
II	55 (LHD)	Instrument Panel Reinforcement LH
	67 (RHD)	
IM	55 (LHD)	Instrument Panel Reinforcement RH
	67 (RHD)	

Turn Signal and Hazard Warning Light



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B7	72 (RHD)	Floor Wire	E4	52 (LHD 1MZ-FE)	Engine Room Main Wire
B20	60 (LHD)			54 (LHD 2AZ-FE)	
E1	64 (RHD 1MZ-FE)	Engine Room Main Wire	E5	52 (LHD 1MZ-FE)	Engine Room Main Wire
	66 (RHD 2AZ-FE)			54 (LHD 2AZ-FE)	
E3	64 (RHD 1MZ-FE)	Engine Room Main Wire	I2	58 (LHD)	Instrument Panel Wire
	66 (RHD 2AZ-FE)		I11	58 (LHD)	Instrument Panel Wire
			I19	70 (RHD)	Instrument Panel Wire

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

