





راهنمای جعبه فیوز داخل اتاق لیفان ۸۲۰

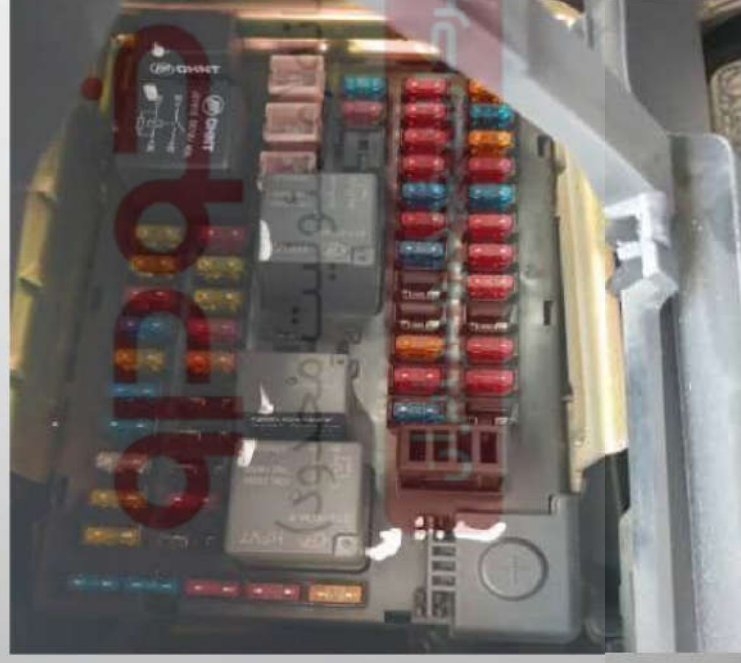

IP Fuse and Relay Box

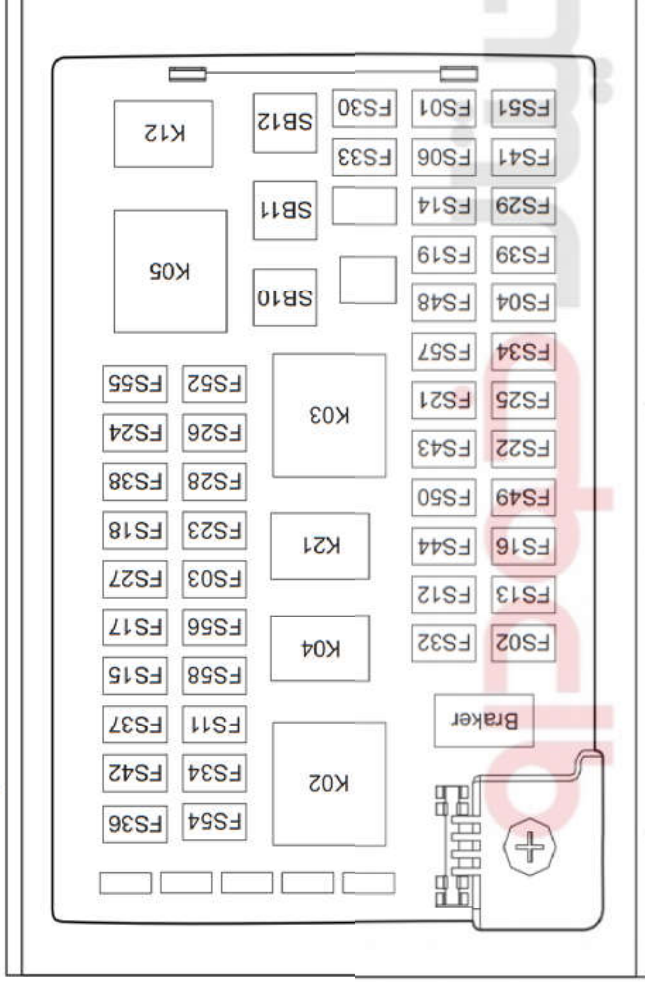

Fuse

Code	Application	Rated Current (A)	Description
FS01	Alternator Fuse	10A	
FS02	Spare Fuse	10A	
FS03	PEPS/RKE Fuse	5A	
FS04	ESCL Fuse	15A	
FS06	ECU IG1 Fuse	10A	
FS11	Spare Fuse	5A	
FS12	A/C Fuse	10A	
FS13	Dome Lamp Fuse	10A	
FS14	Sunroof IG1 Fuse	10A	
FS15	Sunroof Motor Fuse	15A	
FS16	FBCM Fuse	10A	
FS17	Turn/Width Lamp Fuse	15A	
FS18	FBCM(Wiper/Washer) Fuse	20A	
FS19	FBCM IG1 Fuse	10A	
FS21	RBCM Rear Lamp Fuse 1	15A	
FS22	RBCM	10A	
FS23	RBCM Rear Lamp Fuse 2	10A	
FS24	LF Door Lamp/LF Door Lock Fuse	20A	
FS25	Door Controller Fuse	10A	
FS26	RF Door Lamp/Door Lock Fuse	20A	
FS27	LR Door Lamp/Door Lock Fuse	20A	
FS28	RR Door Lamp/Door Lock Fuse	20A	
FS29	ABS IG1 Fuse	5A	
FS30	SRS IG1 Fuse	15A	
FS31	CD/Multi-Function Discreen Fuse	10A	
FS32	CD/Multi-Function Discreen Fuse	15A	
FS33	Instrument Cluster/Multi-Function Discreen Fuse	10A	
FS34	Instrument Cluster Fuse	10A	
FS36	Cigarette Lamper Fuse	20A	
FS37	Power Fuse	25A	
FS38	Power Rearview Mirror Fuse	10A	
FS39	EPS IG1 Fuse	10A	
FS41	TCU IG1 Fuse	15A	
FS42	Seat Regulate Fuse	30A	
FS43	Seat Heating Fuse	20A	
FS44	Sunroof ECU Fuse	5A	
FS48	Reverse Lamp Fuse	15A	
FS49	Spare Fuse	15A	
FS50	Spare Fuse	15A	
FS51	A/C panel Fuse	5A	
FS52	Trunk Switch Fuse	10A	
FS54	Spare Fuse	20A	
FS55	EPB Fuse	30A	
FS56	Spare Fuse	10A	



Relay

Code	Application	Description
K02	ACC Relay	
K03	IG1 Relay	
K04	IG2 Relay	
K05	Blower Relay	
K12	Rear Defroster Relay	
K21	Spare Relay	

Fuse

Code	Application	Rated Current (A)	Description
FS57	PEPS/RKE Fuse	10A	
FS58	Spare Fuse	10A	
SB10	Blower Fuse	30A	
SB11	Rear Defroster Fuse	30A	
SB12	Spare Fuse	30A	

I/P Fuse and Relay Box Back View

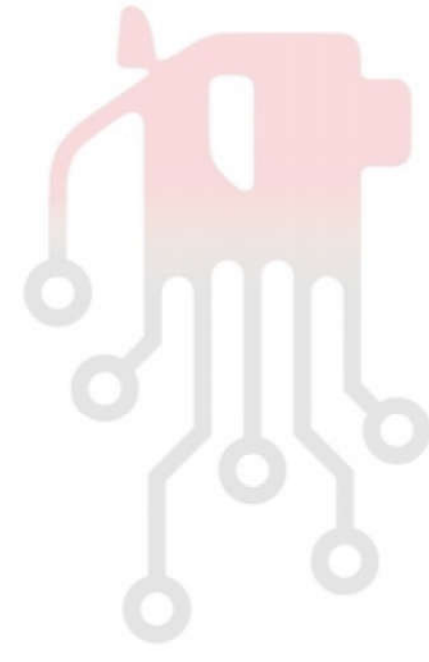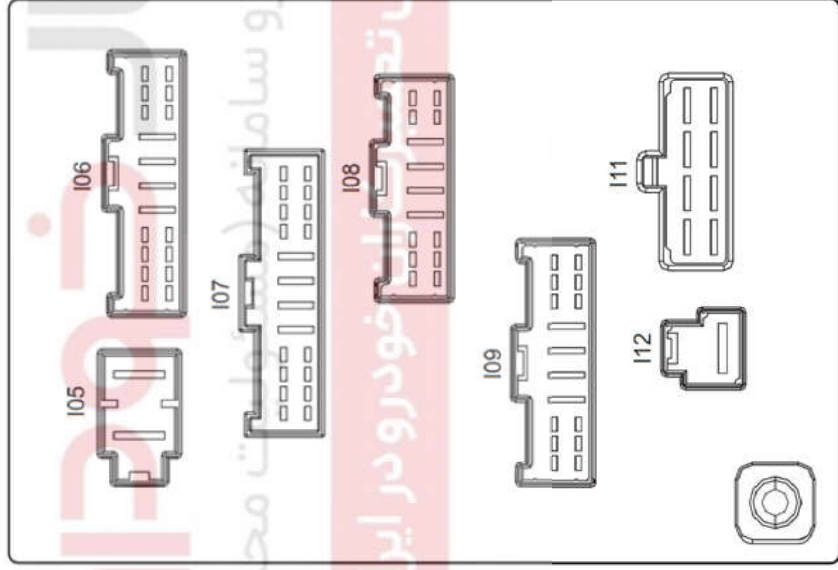


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه های محدود

اولین سامانه دیجیتال خودرو در ایران


جعبه فیوز باتری لیفان ۸۲۰

Battery Power Breaker Box

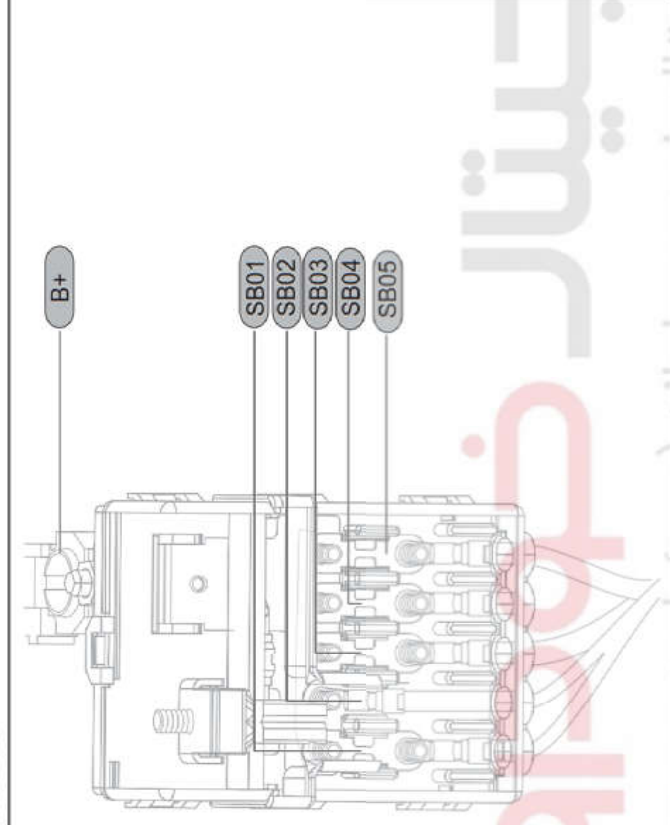

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

دیجیتال خودرو

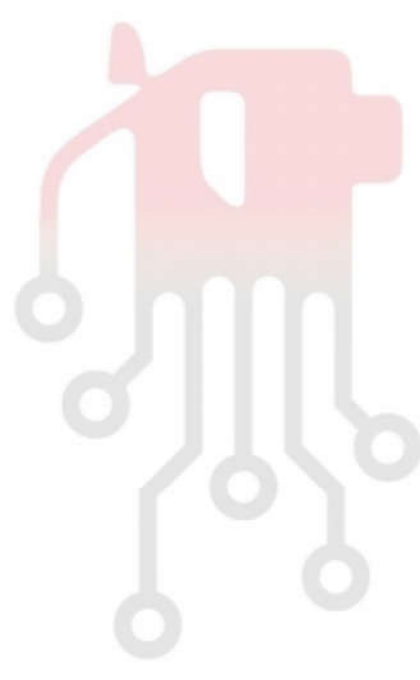

Use

Code	Application	Rated Current (A)	Description
SB01	ABS/ESP Pump Fuse	40A	
SB02	ABS/ESP Valve Fuse	--	
SB03	EPS Motor Fuse	60A	
SB04	Engine Compartment Fuse and Relay Fuse	80A	
SB05	IP Fuse and Relay	80A	

اولین سامانه دیجیتال خودرو