


1. STARTING & CHARGING SYSTEM

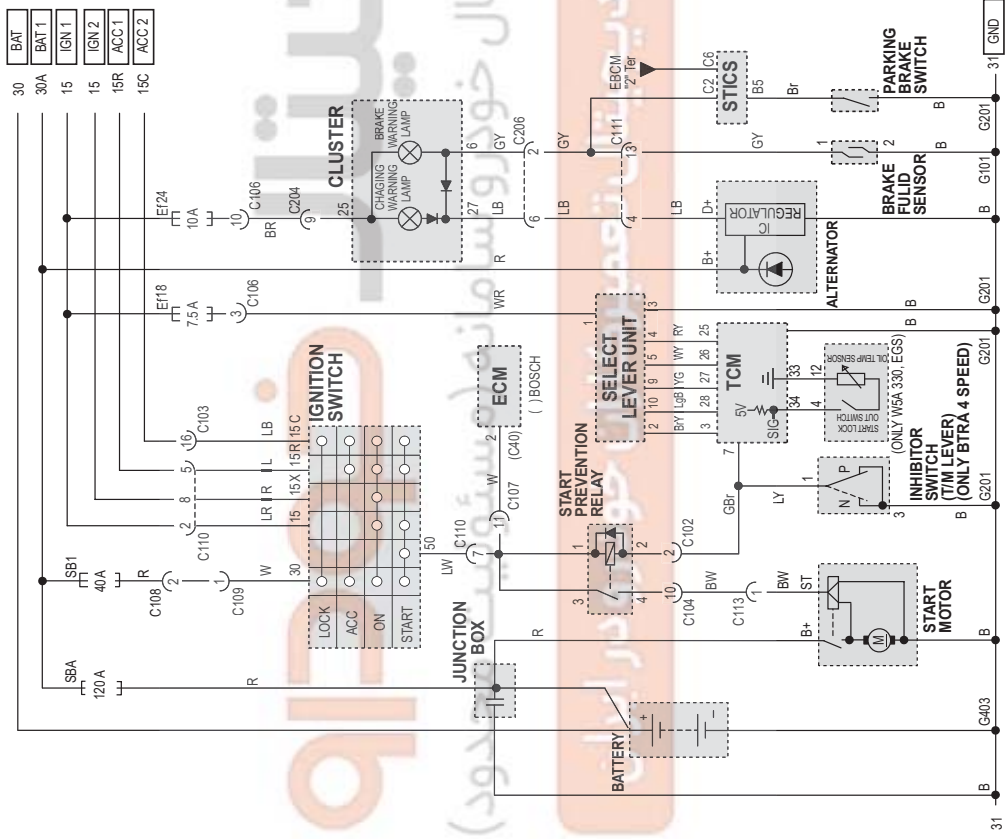

a. CONNECTOR INFORMATION

CONNECTOR NUMBER	WIRING HARNESS	GROUND POSITION
G101	Engine Room	Behind Left Head Lamp
G201	Main	Above Driver Seat Leg Room
G403	Battery Cable	Right Side Battery of Trunk

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

