



- * 1 : LHD w/Multi Display
- * 2 : LHD w/o Multi Display
- * 3 : w/o TOYOTA Navigation System
- * 4 : w/ TOYOTA Navigation System
- * 5 : Except Automatic Air Conditioner
- * 6 : Automatic Air Conditioner

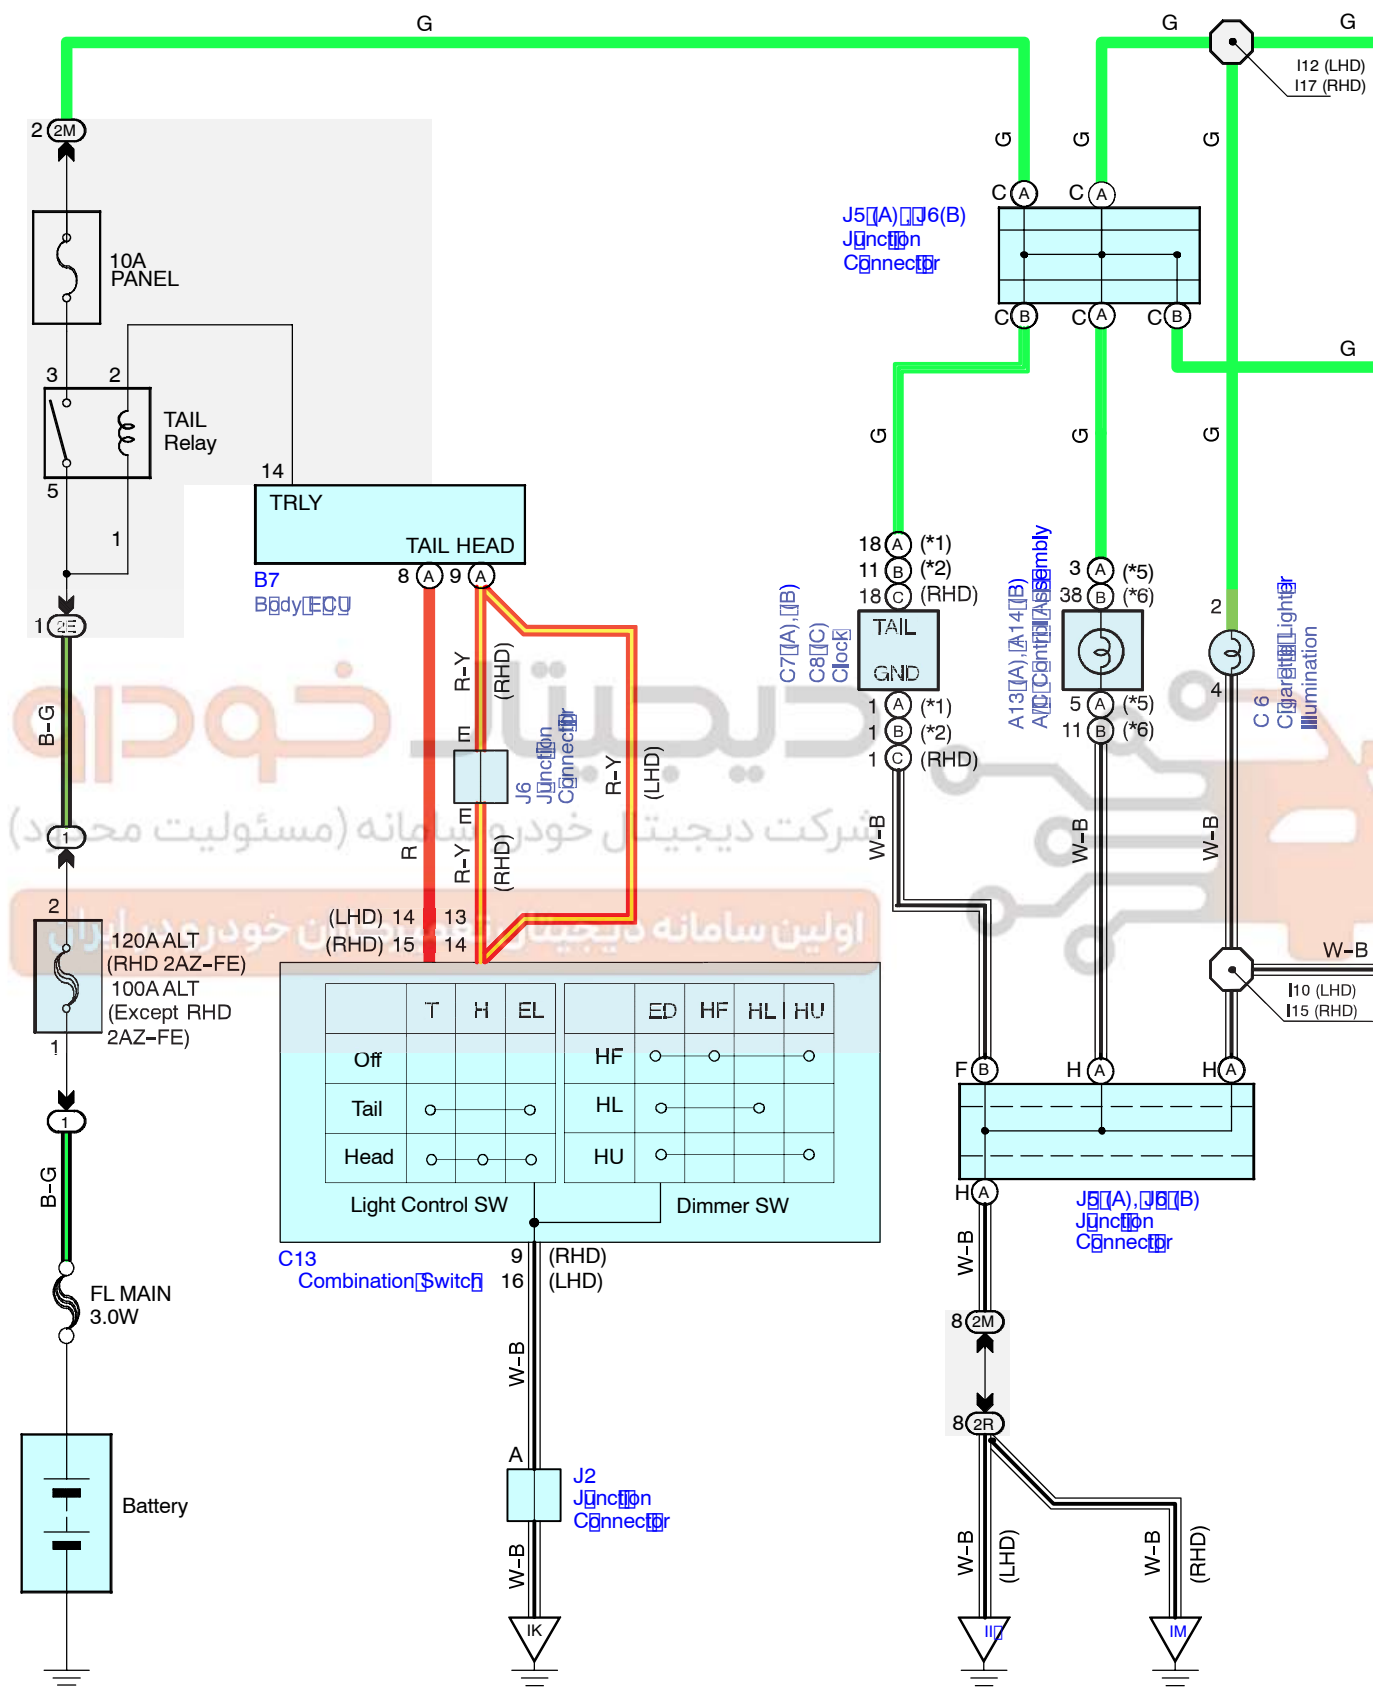

* 3 : w/o TOYOTA Navigation System

* 4 : w/ TOYOTA Navigation System

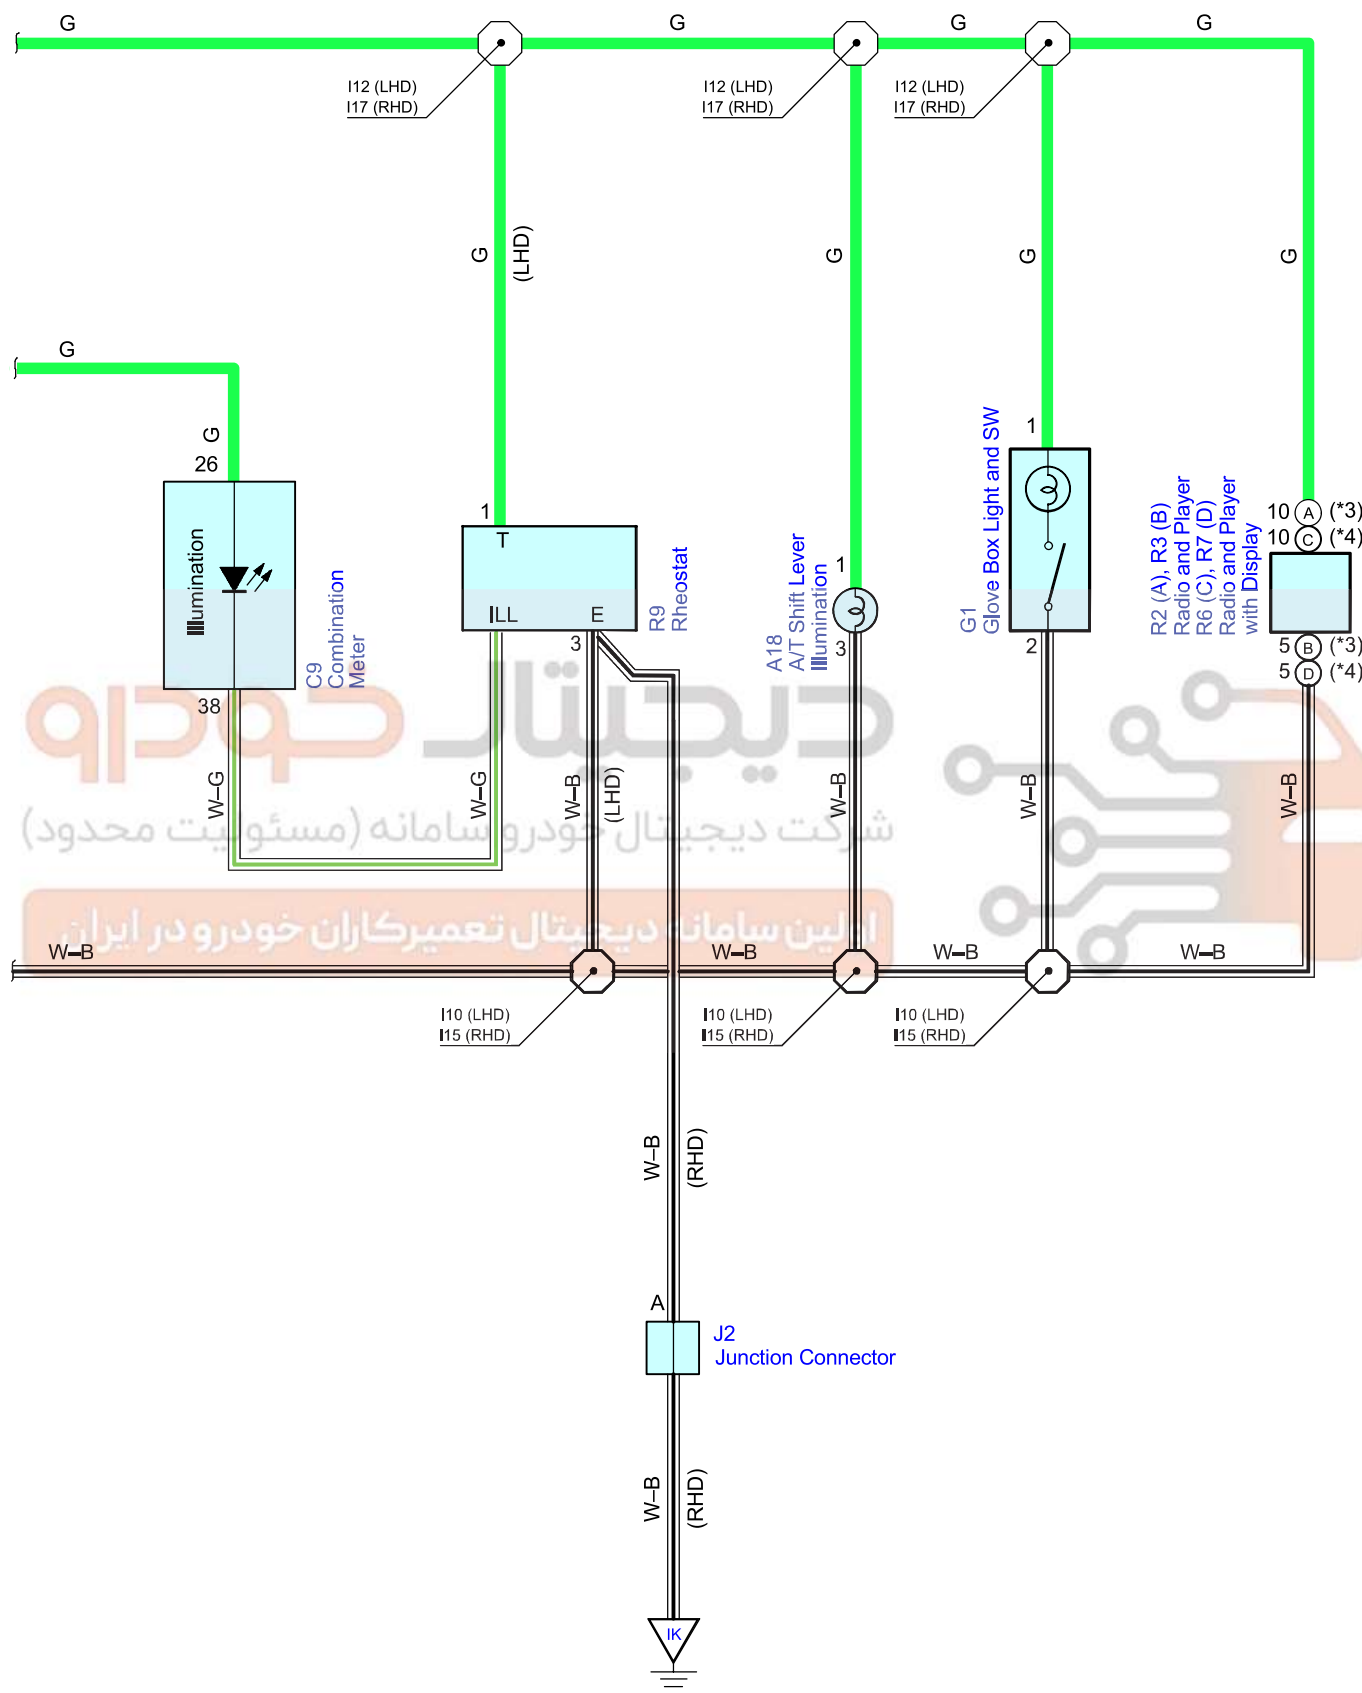

Illumination

Service Hints

TAIL Relay

5-3 : Closed with the light control SW at TAIL or HEAD position

C13 Combination SW

14-16 (LHD) and 15-9 (RHD) : Closed with the light control SW at TAIL or HEAD position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A13	A	36 (LHD)	C9	36 (LHD)	R2
		46 (RHD)		46 (RHD)	A
A14	B	36 (LHD)	C13	36 (LHD)	R3
		46 (RHD)		46 (RHD)	B
A18		36 (LHD)	G1	37 (LHD)	R6
		46 (RHD)		47 (RHD)	R7
B7		36 (LHD)	J2	37 (LHD)	R9
		46 (RHD)		47 (RHD)	
C6		36 (LHD)	J5	A	37 (LHD)
		46 (RHD)			47 (RHD)
C7	A	36 (LHD)	J6	B	37 (LHD)
	B	36 (LHD)			47 (RHD)
C8	C	46 (RHD)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2E	26	Engine Room Main Wire and Driver Side J/B
2M		
2R	26	Instrument Panel Wire and Driver Side J/B

▽ : Ground Points

Code	See Page	Ground Points Location
II	55 (LHD)	Instrument Panel Reinforcement LH
IK	55 (LHD)	
	67 (RHD)	Instrument Panel Brace LH
IM	67 (RHD)	Instrument Panel Reinforcement RH

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I10	58 (LHD)		I15	70 (RHD)	
I12	58 (LHD)	Instrument Panel Wire	I17	70 (RHD)	Instrument Panel Wire