



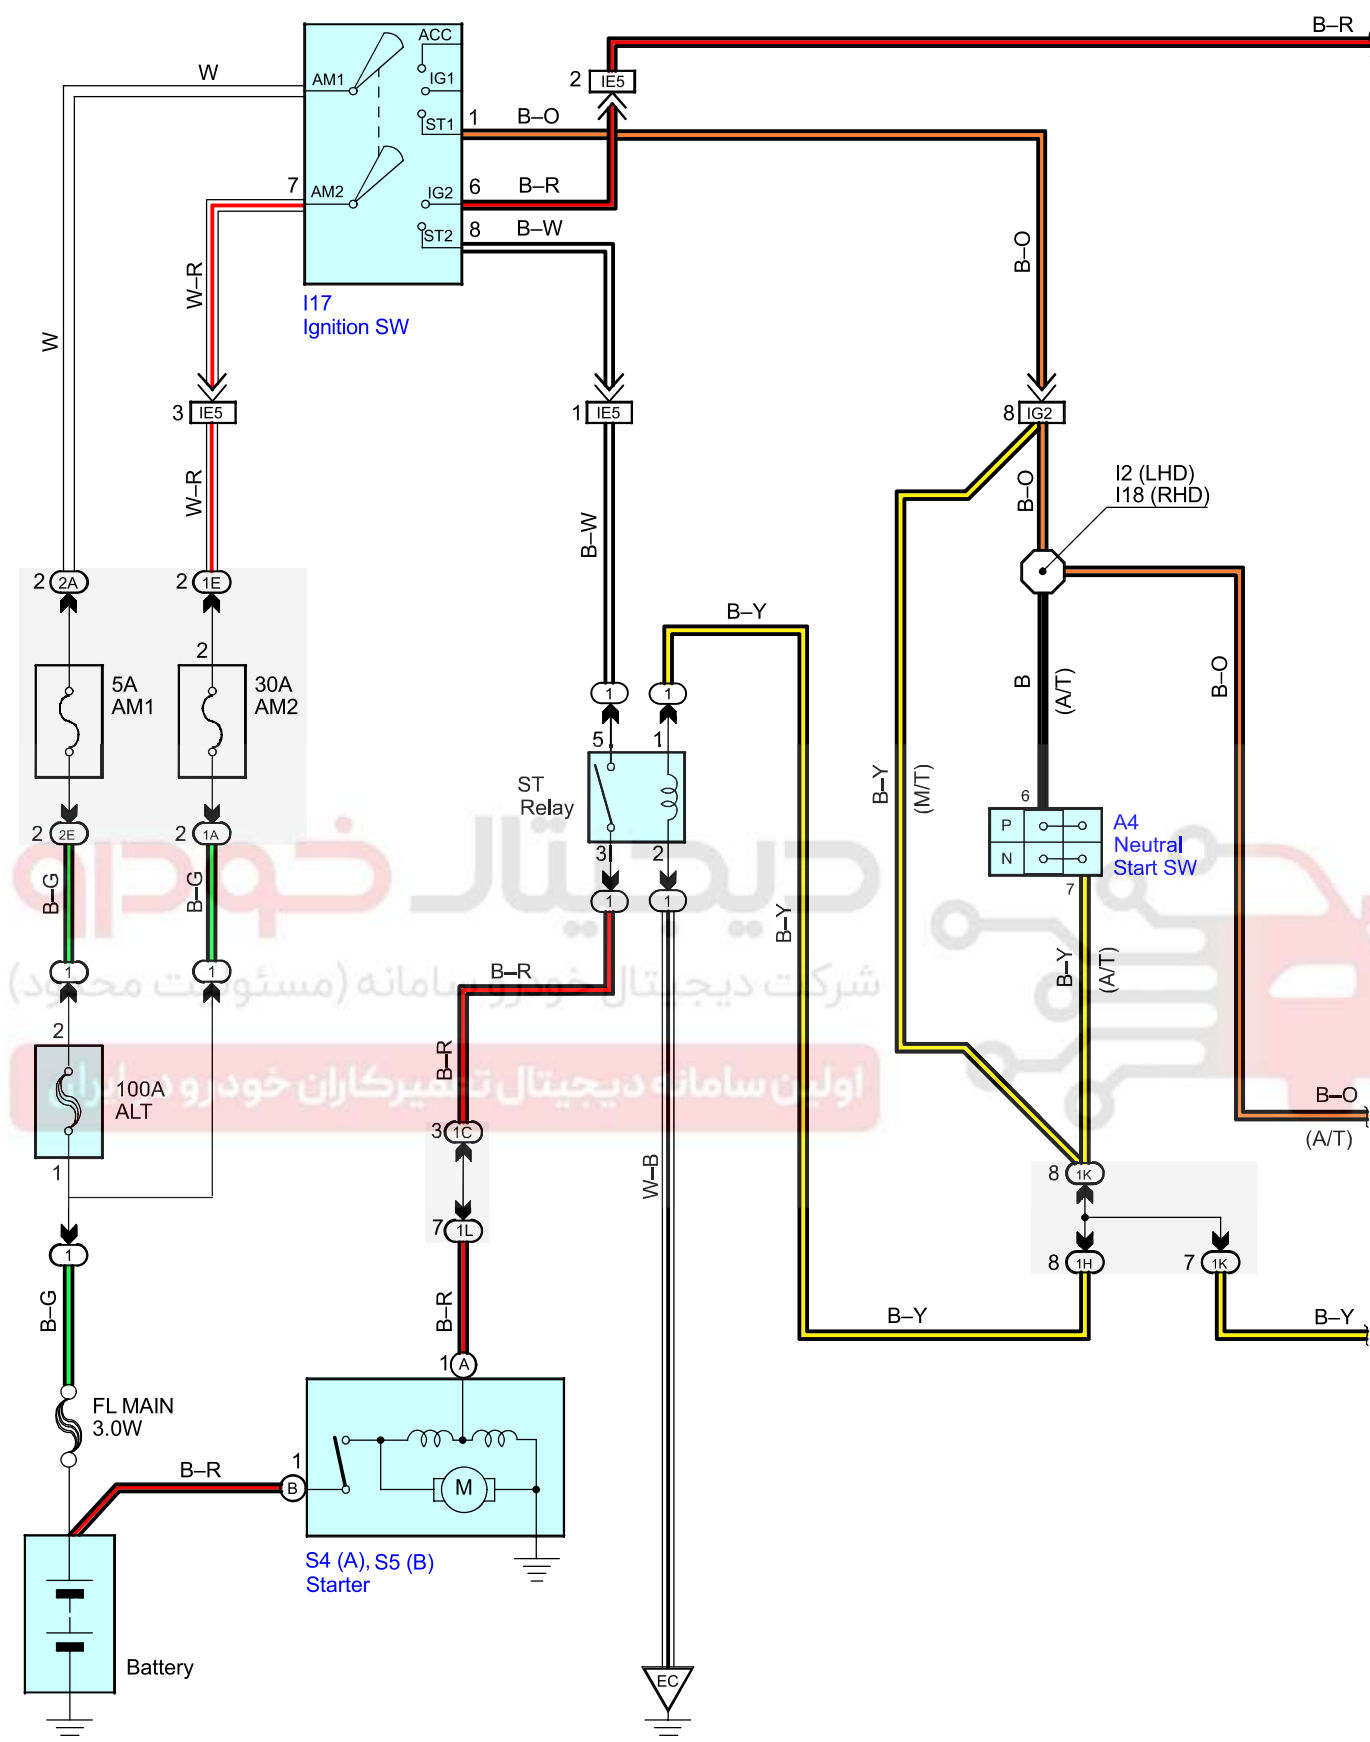

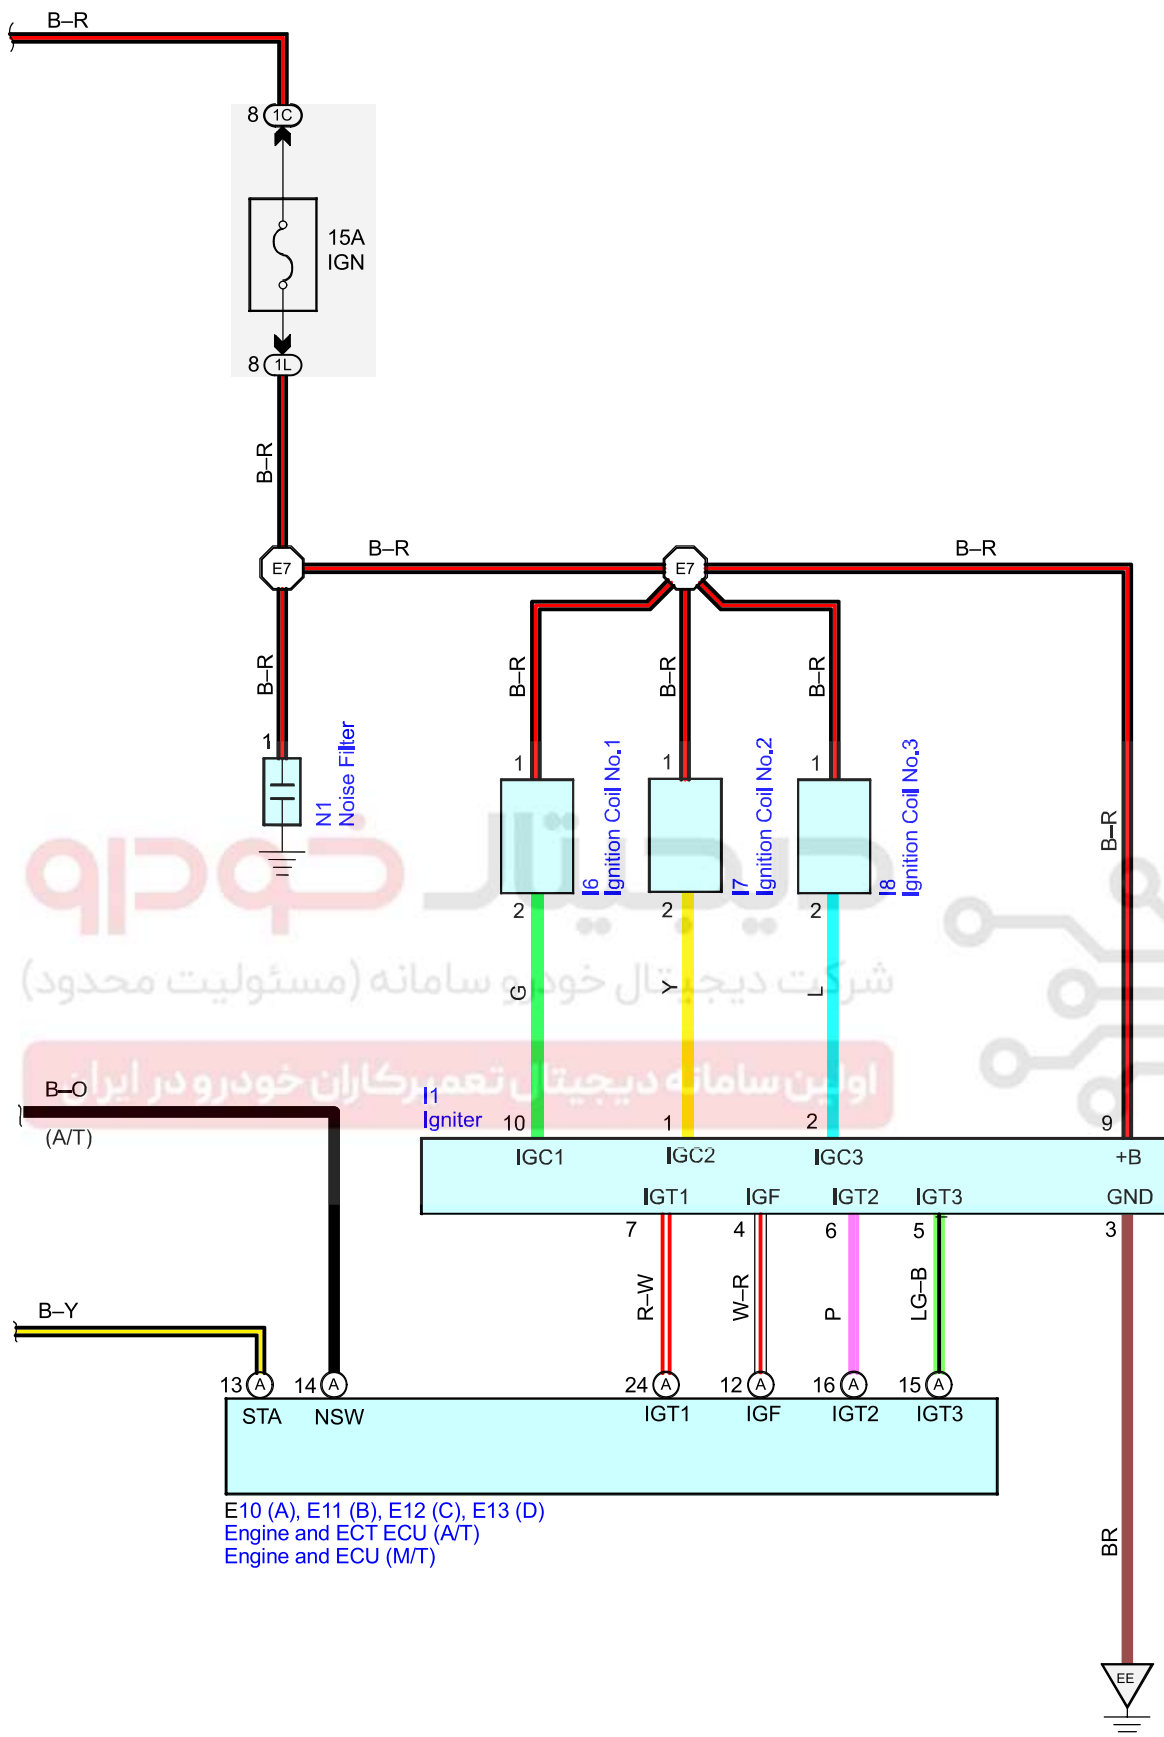

Starting and Ignition (1MZ-FE)

Service Hints

I17 Ignition SW

2-1 : Closed with the ignition SW at ST position

7-6 : Closed with the ignition SW at ON or ST position

7-8 : Closed with the ignition SW at ST position

A4 Neutral Start SW

7-6 : Closed with the A/T shift lever in P or N position

S4 (A), S5 (B) Starter

Point closed with the neutral start SW at P or N position and the ignition SW at ST position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A4	32 (LHD 1MZ-FE)	I1	43 (RHD 1MZ-FE)	N1	33 (LHD)
	42 (RHD 1MZ-FE)	I6	33 (LHD 1MZ-FE)		43 (RHD)
E10	37 (LHD)		43 (RHD 1MZ-FE)	S4	33 (LHD 1MZ-FE)
	47 (RHD)	I7	33 (LHD 1MZ-FE)		43 (RHD 1MZ-FE)
E11	37 (LHD)		43 (RHD 1MZ-FE)	S5	33 (LHD 1MZ-FE)
	47 (RHD)	I8	33 (LHD 1MZ-FE)		43 (RHD 1MZ-FE)
E12	37 (LHD)		43 (RHD 1MZ-FE)		
	47 (RHD)	I17	37 (LHD 1MZ-FE)		
E13	37 (LHD)		47 (RHD 1MZ-FE)		
	47 (RHD)				

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	37	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B
1C		
1E		
1H		
1K	24	Engine Room Wire and Engine Room J/B (Engine Compartment)
1L		
2A	26	Instrument Panel Wire and Driver Side J/B
2E	26	Engine Room Main Wire and Driver Side J/B

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE5	55 (LHD)	Engine Room Main Wire and Instrument Panel Wire
	67 (RHD)	Engine Room Main Wire and Instrument Panel Wire
IG2	70 (RHD)	Engine Wire and Instrument Panel Wire (Behind Glove Box)
	58 (LHD)	Engine Wire and Instrument Panel Wire (Behind Glove Box)



: Ground Points

Code	See Page	Ground Points Location
EC	52 (LHD 1MZ-FE)	Left Fender
	64 (RHD 1MZ-FE)	
	54 (LHD 2AZ-FE)	
	66 (RHD 2AZ-FE)	
EE	52 (LHD 1MZ-FE)	Rear Side of Surge Tank
	64 (RHD 1MZ-FE)	



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	58 (LHD 1MZ-FE)	Engine Room Main Wire	I18	70 (RHD)	Engine Room Main Wire
E7	52 (LHD 1MZ-FE)	Engine Wire			
	64 (RHD 1MZ-FE)				

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

