


Stop Light

Service Hints

From Power Source System (See pg. 78)

- * 1 : w/ Rear Spoiler
- * 2 : w/o Rear Spoiler
- * 3 : w/ Cruise Control
- * 4 : w/ Trailer Socket

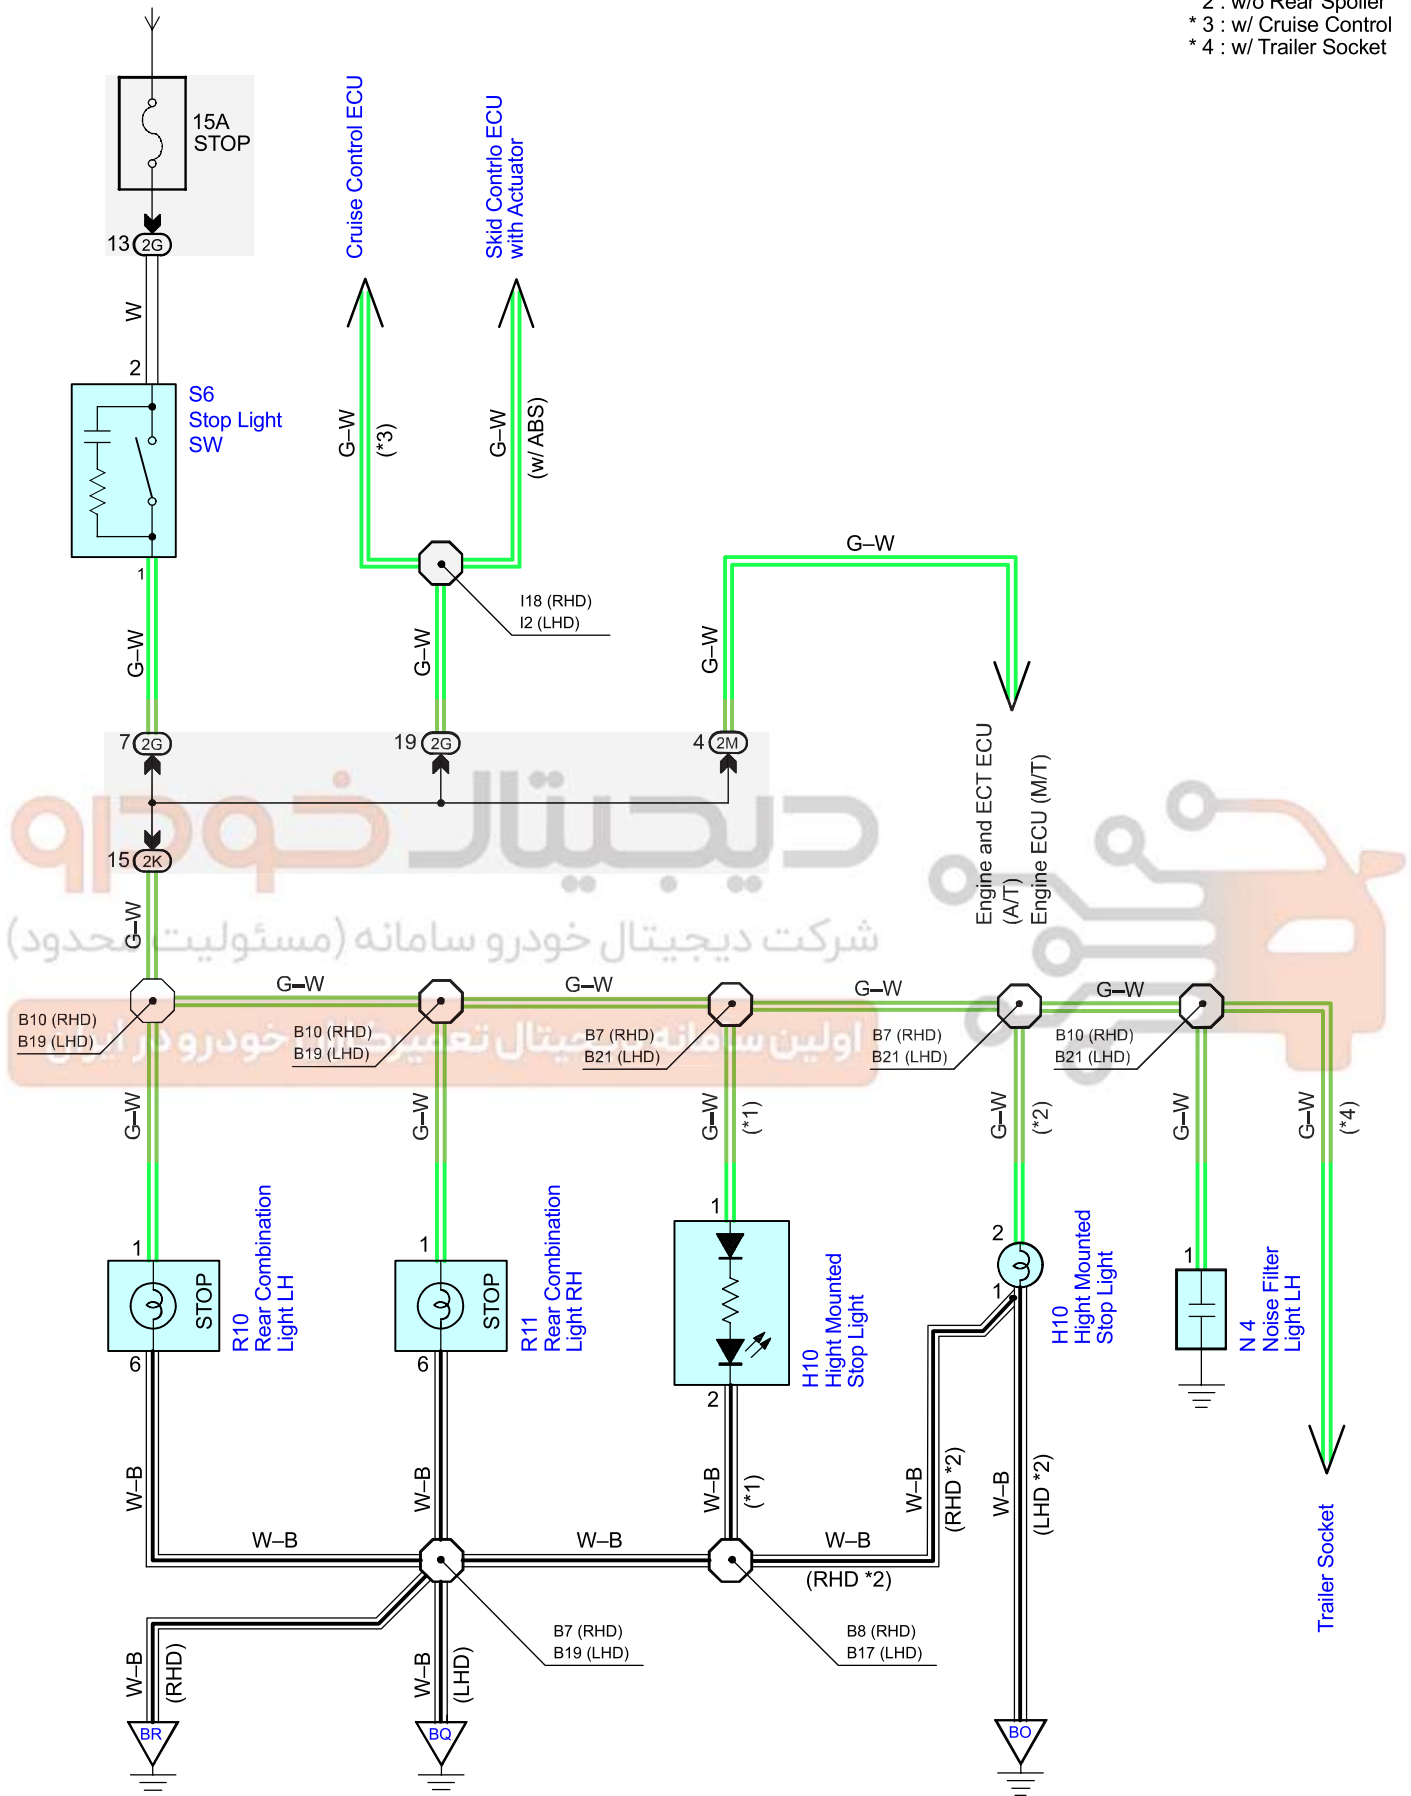

Service Hints**S14 Stop Light SW**

2-1 : Closed with the brake pedal depressed

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
H10	38 (LHD)	R10	39 (LHD)	S6	37 (LHD)
	48 (RHD)		49 (RHD)		47 (RHD)
N4	39 (LHD)	R11	39 (LHD)		
	49 (RHD)		49 (RHD)		

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
2G	26	Engine Room Main Wire and Driver Side J/B
2K		Floor Wire and Driver Side J/B
2M		Instrument Panel Wire and Driver Side J/B

 : **Ground Points**

Code	See Page	Ground Points Location
BO	60 (LHD)	Front Side of Rear Quarter Wheel House LH
BQ	60 (LHD)	Lower Back Panel Centre
	72 (RHD)	
BR	72 (RHD)	Front Side of Rear Quarter Wheel House RH

 : **Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B7	72 (RHD)	Floor Wire	B19	60 (LHD)	Floor Wire
B8	60 (LHD)		B21	60 (LHD)	
	72 (RHD)		I2	58 (LHD)	Instrument Panel
B10	72 (RHD)		I18	70 (RHD)	
B17	60 (LHD)				