


S.G.N

8310-00

HEAD LAMP / DRL

(DAY TIME RUNNING LIGHT) UNIT CIRCUIT

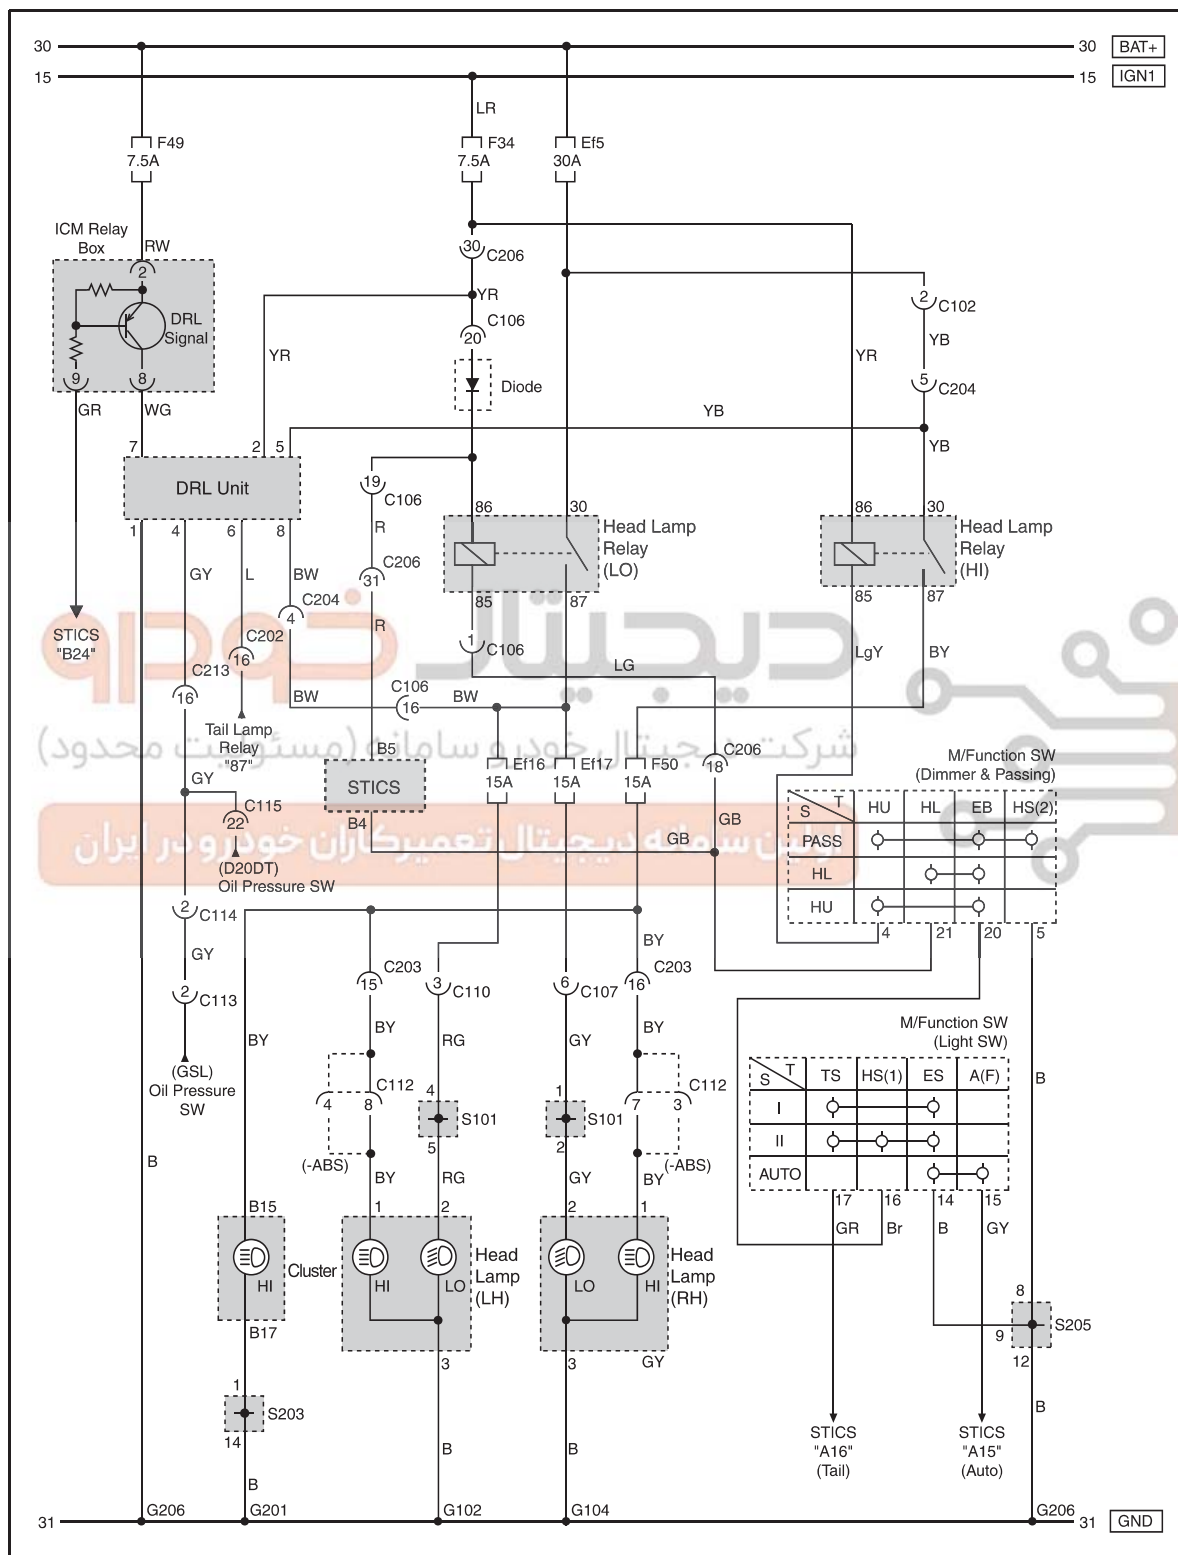


CIRCUIT

ACTYON 2010.01

Modification basis	
Application basis	
Affected VIN	

(1) CONNECTOR INFORMATION

Connector Number (Pin Number, Color)		Connecting Wiring Harness	Connector Position	Remark
C102 (4Pin, White)		W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)		W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C107 (12Pin, White)		W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C110 (18Pin, White)		W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C112	(8Pin, White)	W/H Eng - W/H Floor	Inside Eng Room Fuse & Relay Box	ABS/ESP
	(4Pin, White)	W/H Eng - W/H Floor	Inside Eng Room Fuse & Relay Box	-ABS
C113 (2Pin, Black)		W/H Eng - W/H Alternator	Backside RH Head Lamp	
C114 (16Pin, Black)		W/H Eng - W/H Floor	Inside RH Fender PNL	
C115 (42Pin, Black)		W/H Floor - W/H Eng Control	Right Eng Room Dash PNL	
C202 (39Pin, Black)		W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C203 (18Pin, White)		W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C204 (6Pin, Colorless)		W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)		W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C213 (20Pin, Red)		W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G102		W/H Eng Room	Behind LH Head Lamp	
G104		W/H Eng Room	Behind RH Head Lamp	
G201		W/H Main	Under the Driver Cowl Side PNL	Under C/Holder
G206		W/H Main	Inner the Passenger Cowl Side PNL	
S101 (6Pin, Black)		W/H Eng	Inside the Eng Room Fuse & Relay Box	Head Lamp
S203 (14Pin, Black)		W/H Main	RH Protector of the Driver Legroom	GND
S205 (14Pin, Black)		W/H Main	Upper the PTC Protector	GND

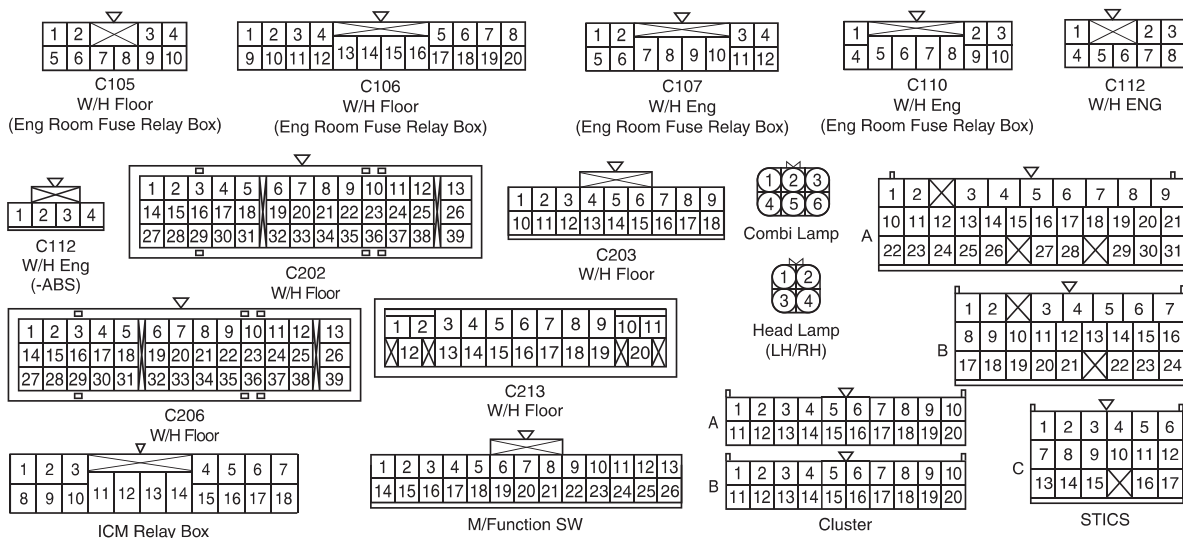(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

Modification basis	
Application basis	
Affected VIN	

CIRCUIT

ACTYON 2010.01