


ECM Power Supply, Data, Grounding Wire (JL4G18-G-CVT)

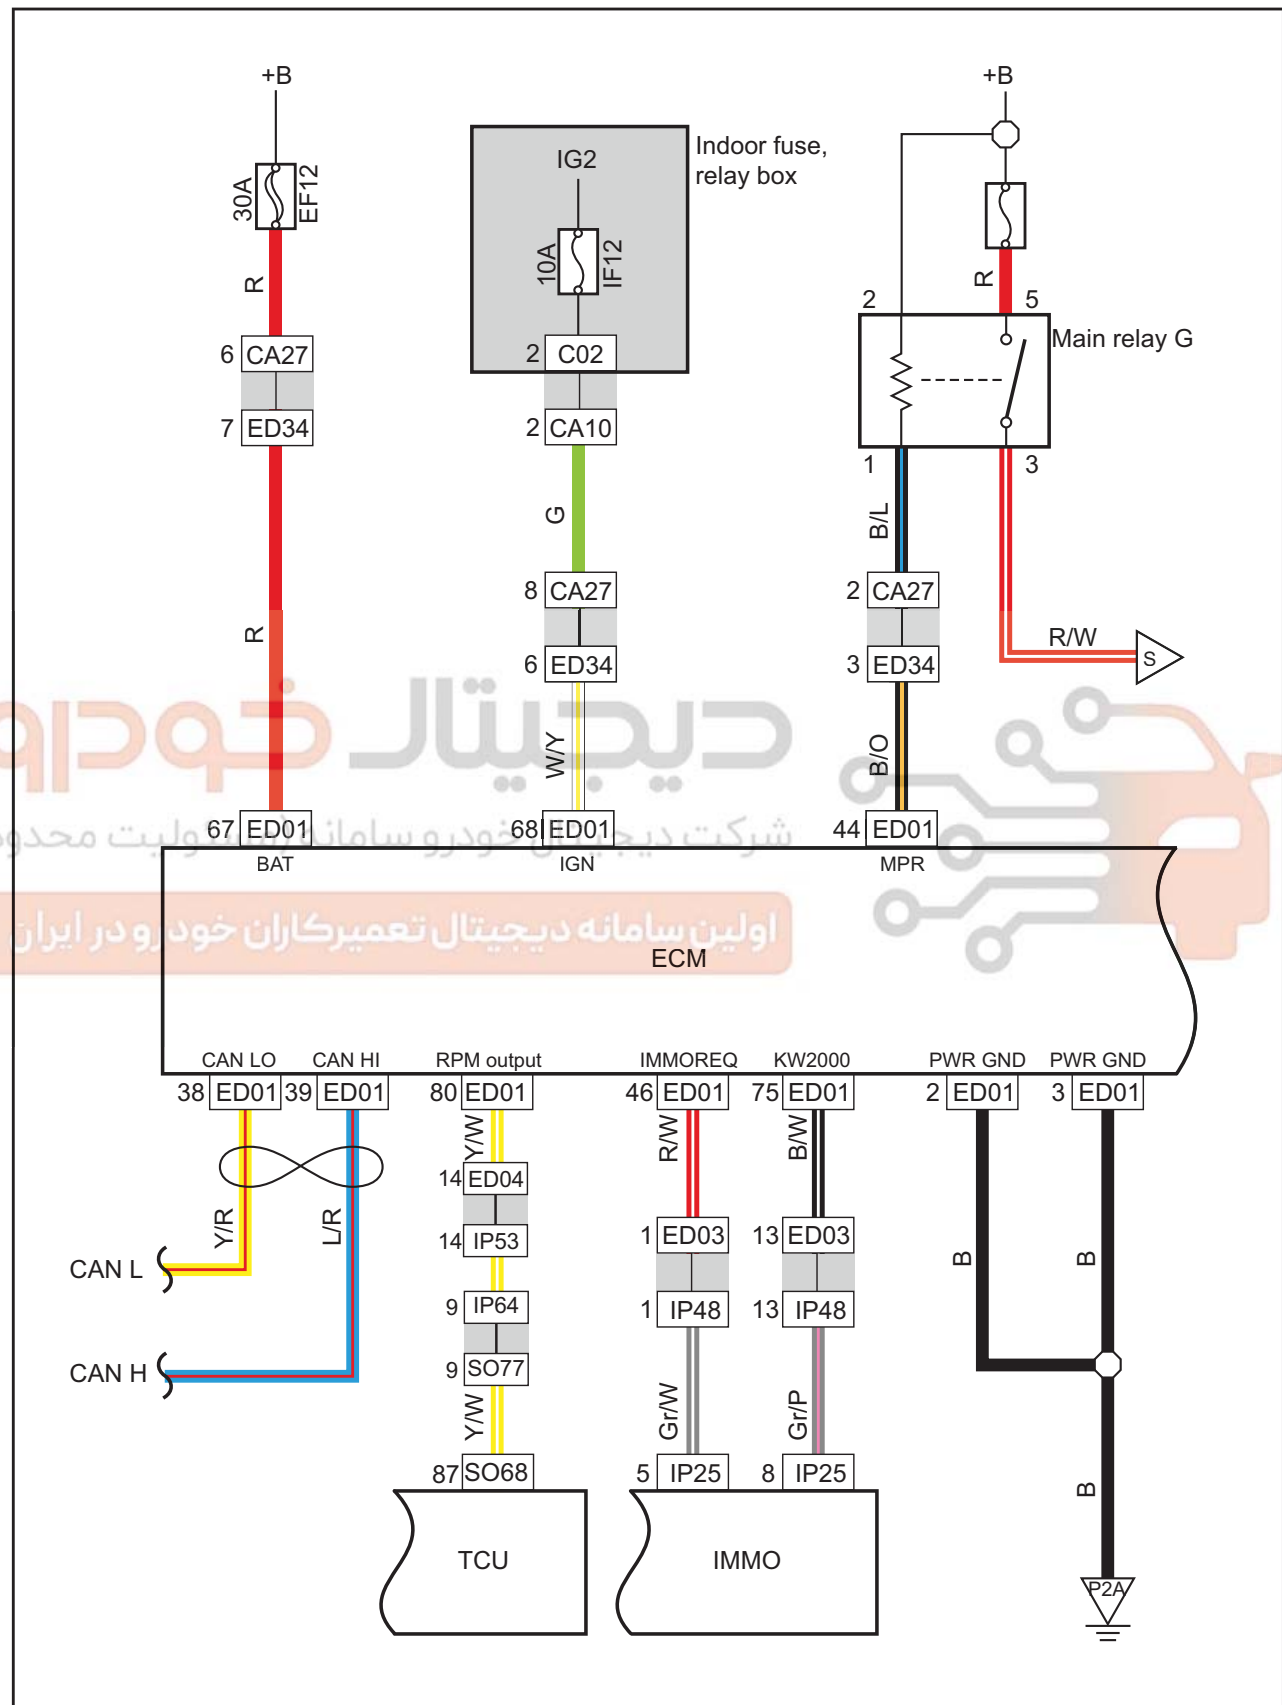

Harness connector	Name	Pages
C02	Rear Connector of Indoor Fuse Box	17
CA10	To harness connector of fuse box3	22
CA27	To harness connector of engine harness	23
ED01	Harness connector of engine control module	42
ED03	To harness connector of instrument panel harness1	42
ED04	To harness connector of instrument panel harness2	42
ED34	To harness connector of engine compartment distribution box (3)	43
SO68	Automatic transmission controller harness connector	98/108
SO77	To harness connector of instrument panel harness	98/108
IP53	To harness connector of engine harness(2)	80
IP25	Harness connector of engine anti-theft unit1	80
IP48	To harness connector of engine harness	80
IP64	To harness connector of body (right) harness	89
P2A	Engine grounding	122

Connection point	Descriptions	Pages
S	Main relay power supply output	235/291/309 331/370
ED01-38	CAN-LOW	556
ED01-39	CAN-HI	556