



## alarm

item code	description	information
6202	null	driver's side front door lock assembly
6207	null	front passenger side door lock assembly
6212	null	rear left door lock assembly
6217	null	rear right door lock assembly
6222	null	boot or tailgate lock assembly
6282	null	tailgate opening switch/boot lid partial opening switch
8602	null	intrusion alarm ECU /
8605	null	intrusion alarm siren
8611	null	bonnet opening alarm switch /
BB00	null	ancillaries battery
BCM2	null	RH multifunction switch block
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
E902	null	crimp one information (or equipotential 902) wire
EB09	null	splice of a "battery +" protected by fuse no. 09
EM20	null	crimp earth (earth point number 20)
EM35B	null	crimp earth (earth point number 35B)
EM37	null	crimp earth (earth point number 37)
EM37B	null	crimp earth (earth point number 37B)
EM40	null	crimp earth (earth point number 40)
EM60	null	crimp earth (earth point number 60)
EM60A	null	crimp earth (earth point number 60A)
EM60B	null	crimp earth (earth point number 60B)
EM75A	null	crimp earth (earth point number 75A)
MC13	null	body earth point number 13
MC20A	null	body earth point number 20A
MC35A	null	body earth point number 35
MC37A	null	body earth point number 37A
MC37B	null	body earth point number 37B
MC40A	null	body earth point number 40
MC60A	null	body earth point number 60
MM01	null	engine earth point number 01