


ESP

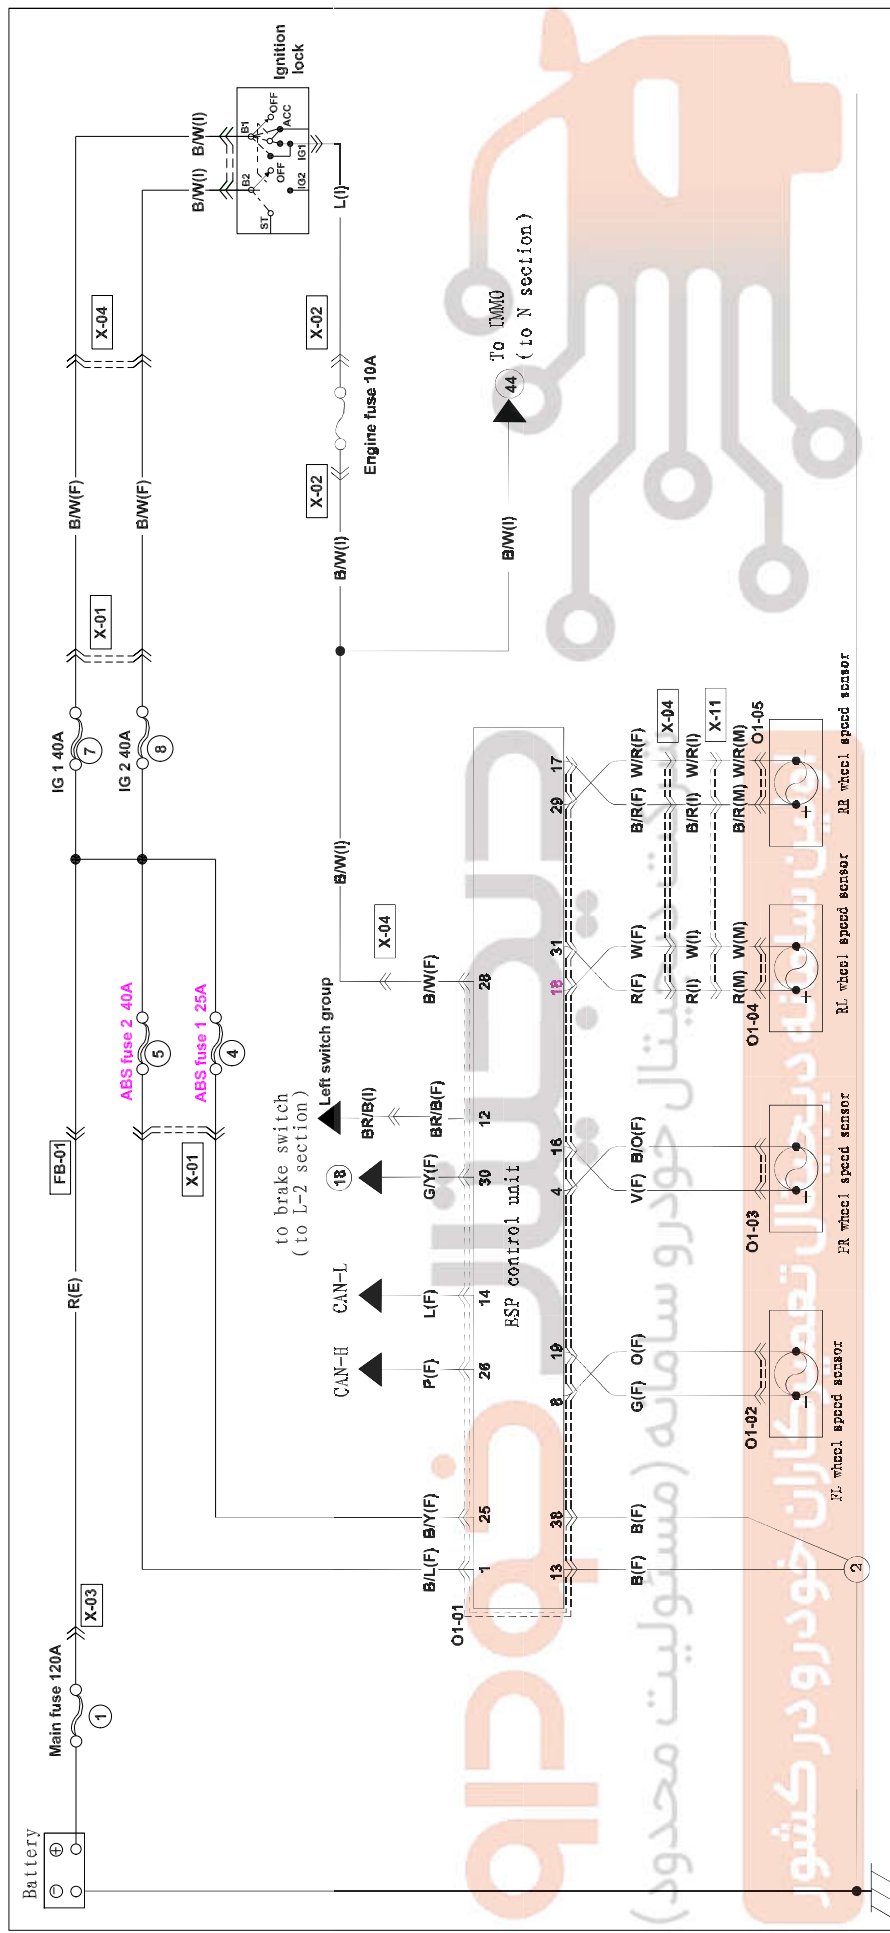

O1-01 ESP control unit

O1-02 FL wheel speed sensor	O1-03 FR wheel speed sensor	O1-04 RL wheel speed sensor	O1-05 RR wheel speed sensor

