


D3CZ807R

## Air Conditioning


item code	description	information
0004	null	/ instrument panel
1320	null	engine ECU /
8006	null	evaporator temperature sensor
8007	null	pressure switch/refrigerant pressure sensor
8020	null	air conditioning compressor
8045	null	air blower control module
8049	null	passenger compartment air heating resistor
8050	null	air blower motor
8065	null	mixing flap motor /
8070	null	air inlet flap reduction motor
8071	null	distribution flap reduction motor /
8080	null	air conditioning ECU /
BB00	null	ancillaries battery
BCP3	null	3 relay switching and protection unit
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E265A	null	crimp one information (or equipotential 265A) wire
E809A	null	crimp one information (or equipotential 809A) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM10B	null	crimp earth (earth point number 10B)
EM11A	null	crimp earth (earth point number 11A)
EM22	null	crimp earth (earth point number 22)
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
EM81	null	crimp earth (earth point number 81)
MC10A	null	body earth point number 10A
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37C	null	body earth point number 37
MC37D	null	body earth point number 37
MM01	null	engine earth point number 01

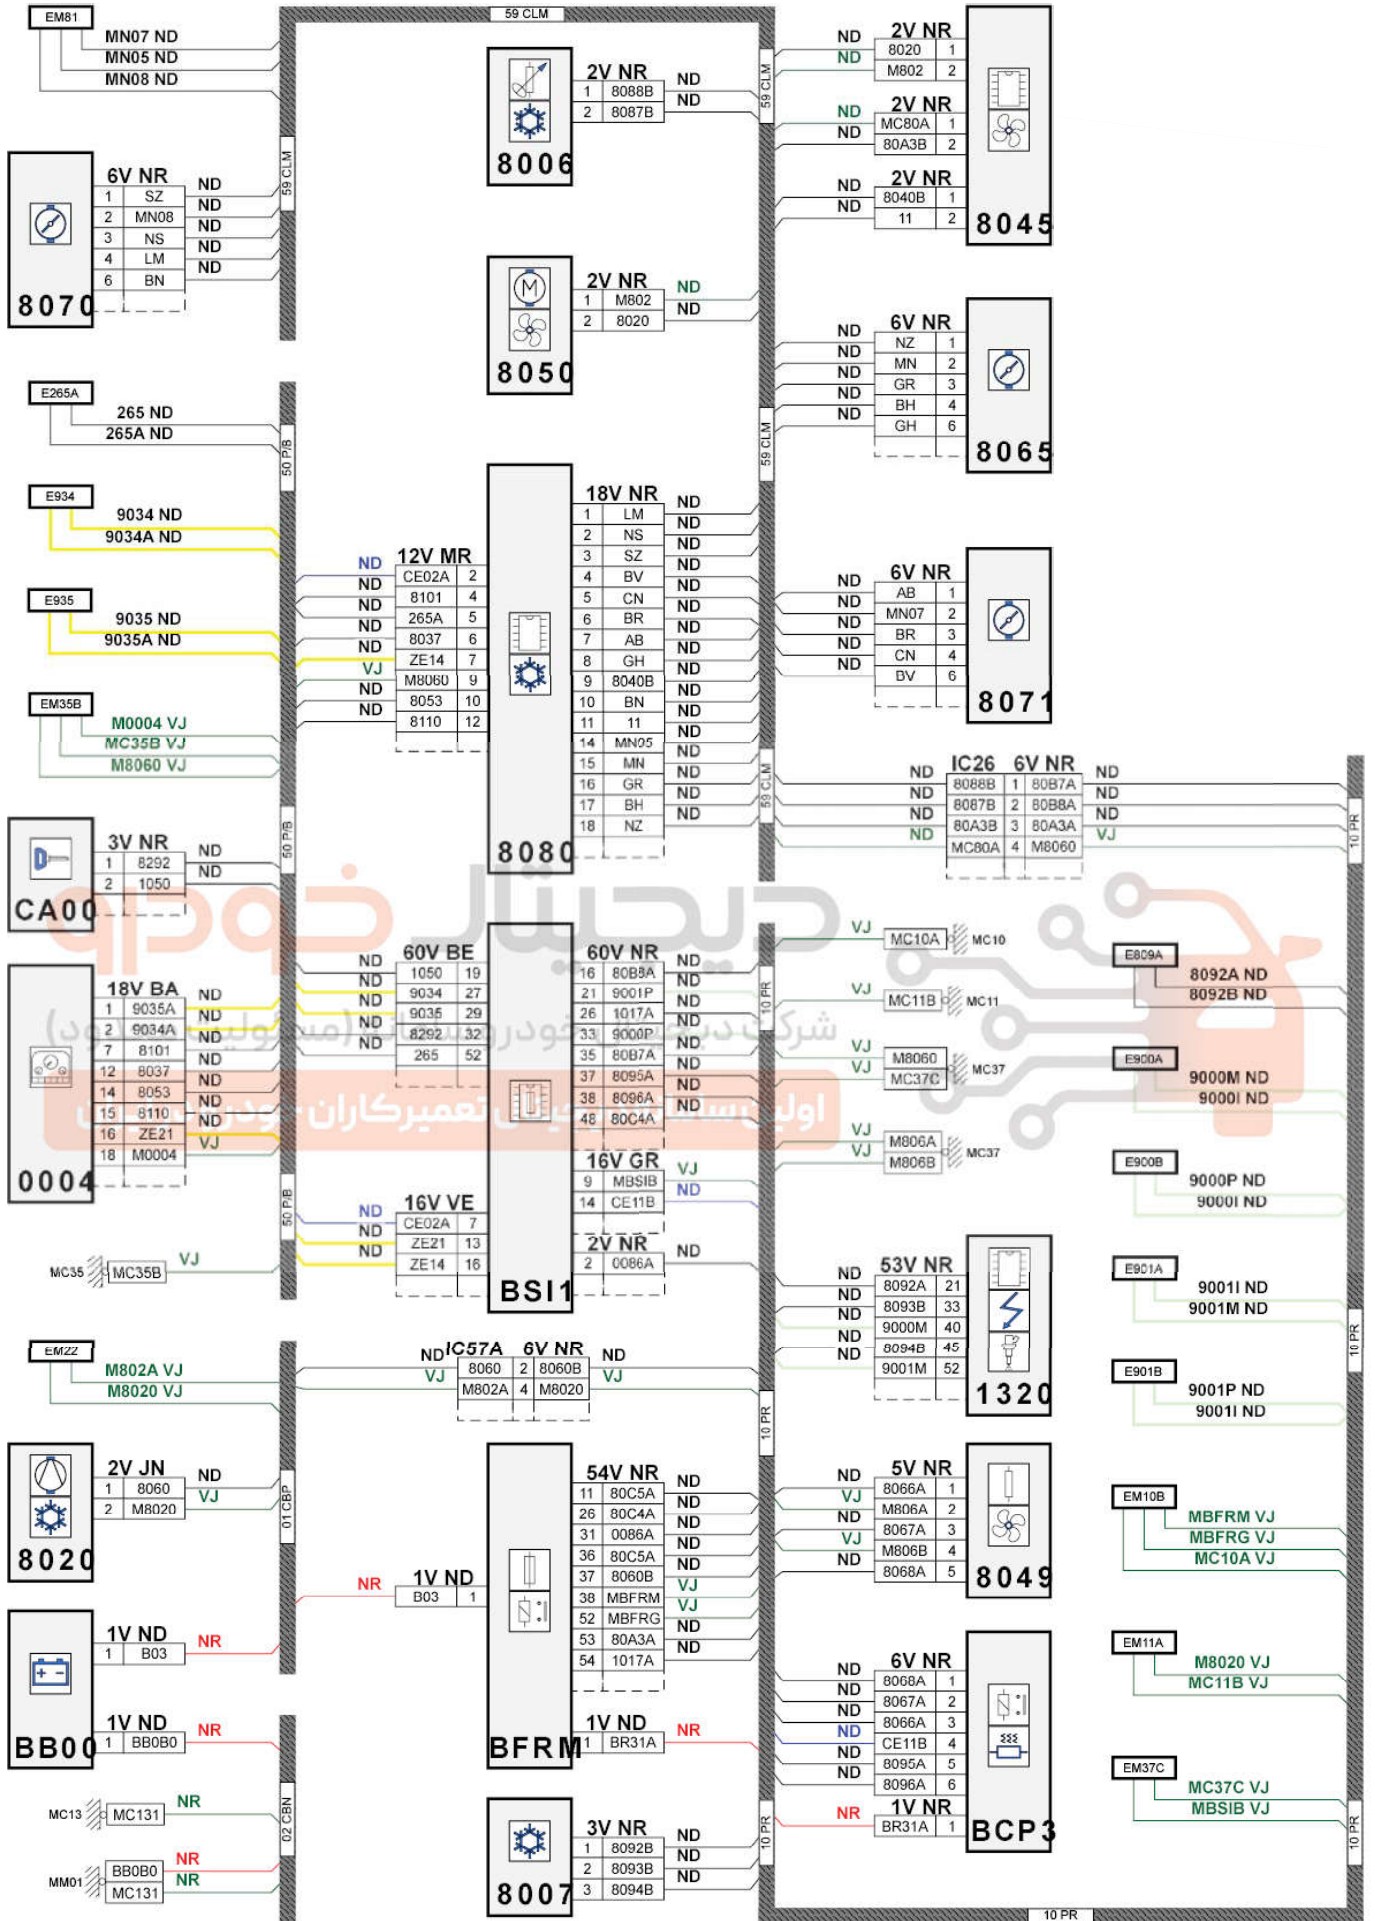

## Air Conditioning

item code	description	information
0004	null	/ instrument panel
1320	null	engine ECU /
8006	null	evaporator temperature sensor
8007	null	pressure switch/refrigerant pressure sensor
8020	null	air conditioning compressor
8045	null	air blower control module
8049	null	passenger compartment air heating resistor
8050	null	air blower motor
8065	null	mixing flap motor /
8070	null	air inlet flap reduction motor
8071	null	distribution flap reduction motor /
8080	null	air conditioning ECU /
BB00	null	ancillaries battery
BCP3	null	3 relay switching and protection unit
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E265A	null	crimp one information (or equipotential 265A) wire
E809A	null	crimp one information (or equipotential 809A) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM10B	null	crimp earth (earth point number 10B)
EM11A	null	crimp earth (earth point number 11A)
EM22	null	crimp earth (earth point number 22)
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
EM81	null	crimp earth (earth point number 81)
MC10A	null	body earth point number 10A
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37C	null	body earth point number 37
MC37D	null	body earth point number 37
MM01	null	engine earth point number 01



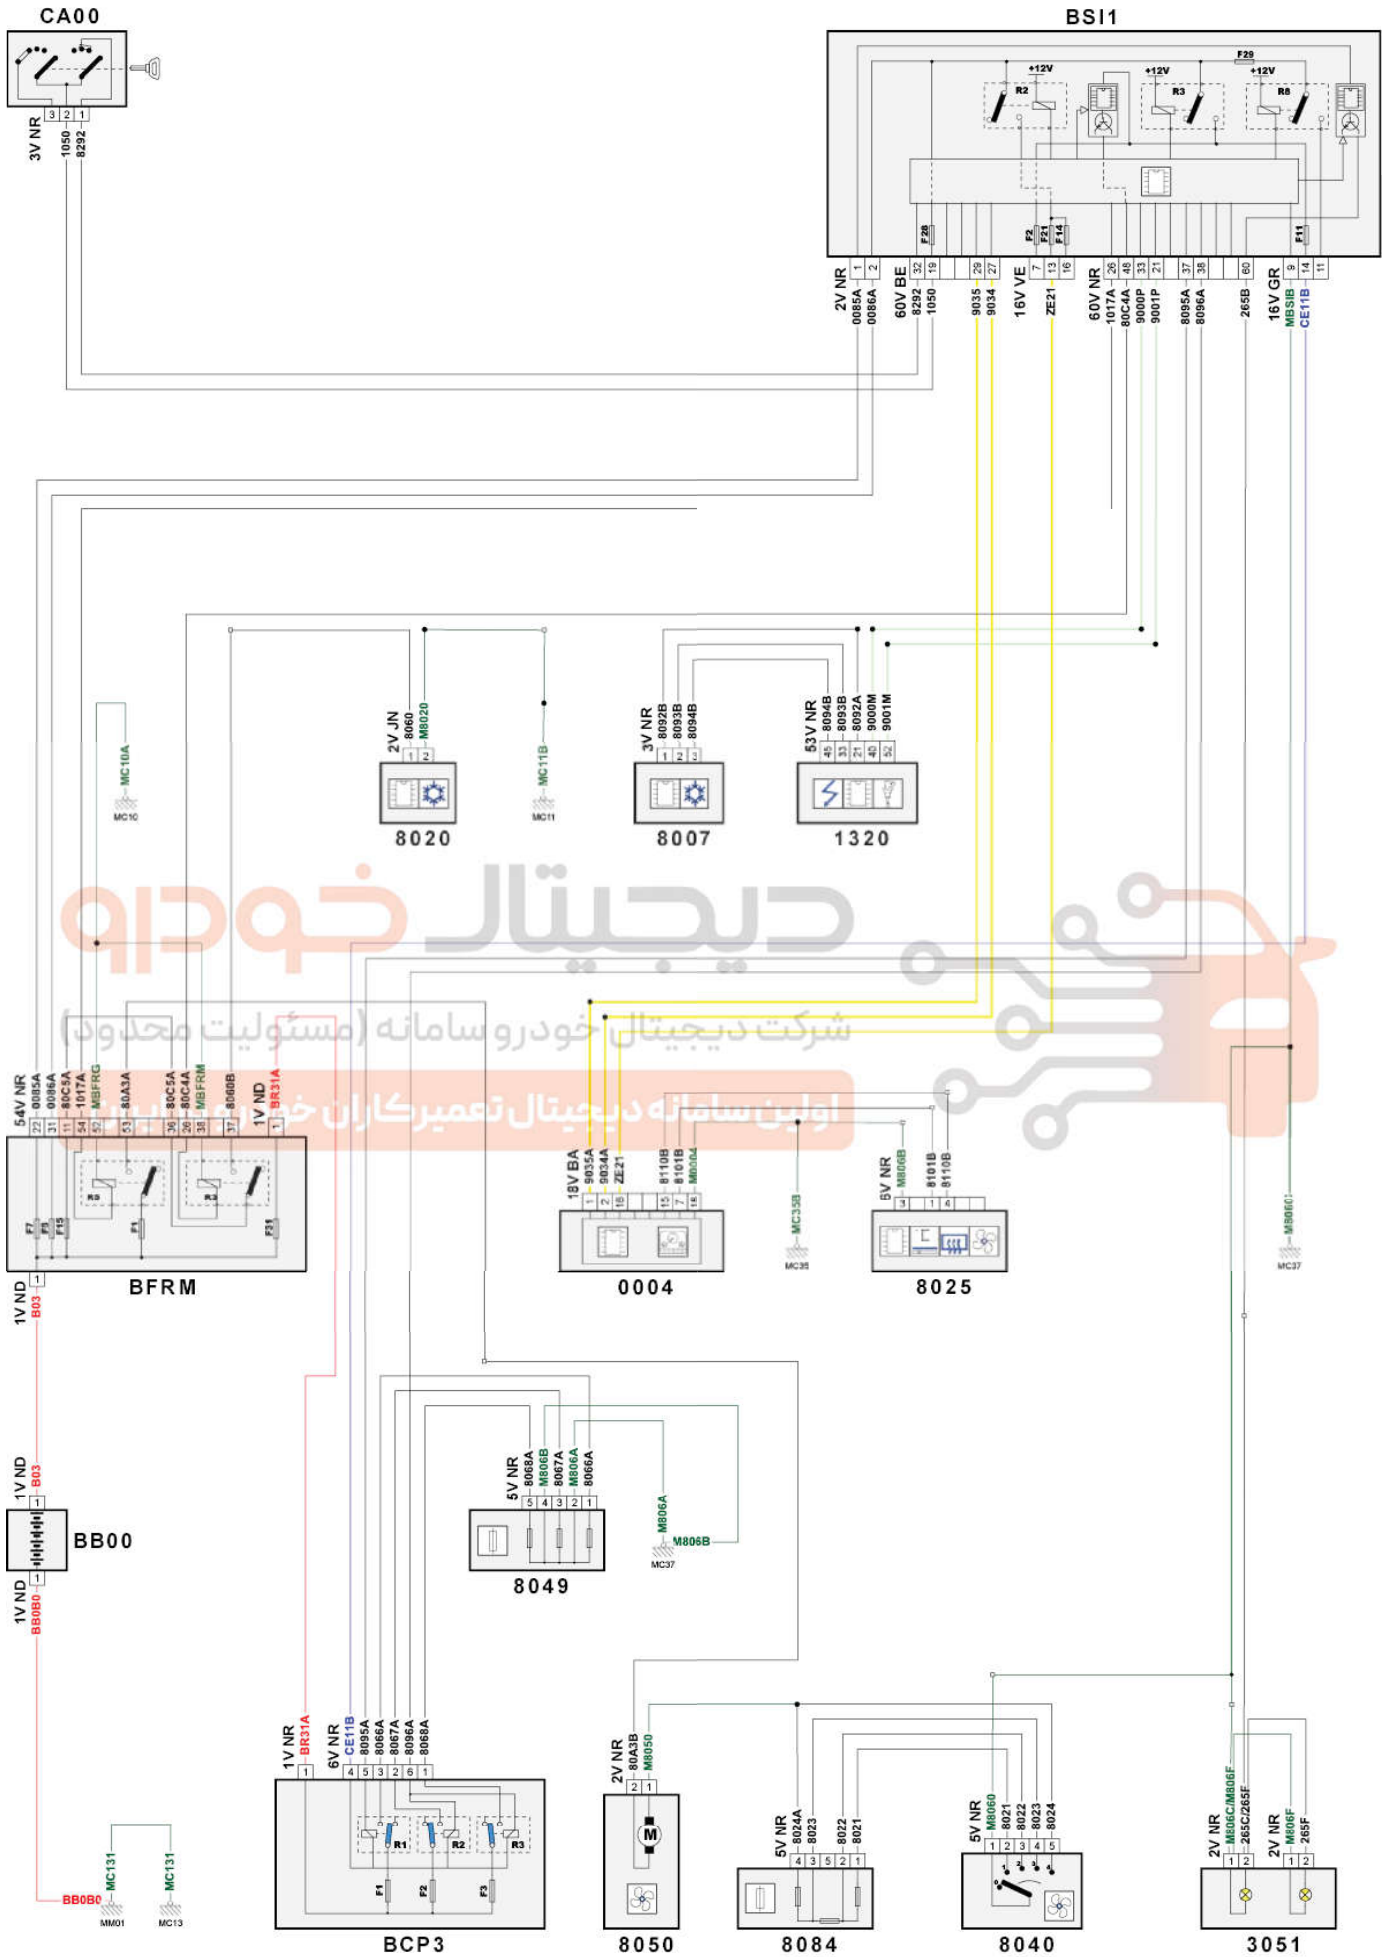

D3CZ801R

## Ventilation, Heating &amp; Air Conditioning

item code	description	information
0004	null	/ instrument panel
1320	null	engine ECU /
3051	null	air conditioning control panel heating control lamp
8007	null	pressure switch/refrigerant pressure sensor
8020	null	air conditioning compressor
8025	null	air conditioning control panel (if separate)
8040	null	blower speed control (if separate)
8049	null	passenger compartment air heating resistor
8050	null	air blower motor
8084	null	additional air conditioning air blower resistor
BB00	null	ancillaries battery
BPC3	null	3 relay switching and protection unit
BFRM	null	engine fuse and relay box
BSI1	null	built-in systems interface
CA00	null	ignition switch
E809A	null	crimp one information (or equipotential 809A) wire
E900A	null	crimp one information (or equipotential 276A) wire
E900B	null	crimp one information (or equipotential 900B) wire
E901A	null	crimp one information (or equipotential 901A) wire
E901B	null	crimp one information (or equipotential 901B) wire
E934	null	crimp one information (or equipotential 934) wire
E935	null	crimp one information (or equipotential 935) wire
EM10B	null	crimp earth (earth point number 10B)
EM11A	null	crimp earth (earth point number 11A)
EM22	null	crimp earth (earth point number 22)
EM35B	null	crimp earth (earth point number 35B)
EM37C	null	crimp earth (earth point number 37C)
EM80	null	crimp earth (earth point number 80)
MC10A	null	body earth point number 10A
MC11B	null	body earth point number 11B
MC13	null	body earth point number 13
MC35	null	body earth point number 35
MC37C	null	body earth point number 37
MC37D	null	body earth point number 37
MM01	null	engine earth point number 01