


6. TCU (DC5 - A/T) 3110

1) START MOTOR, TGS LEVER, CAN LINE

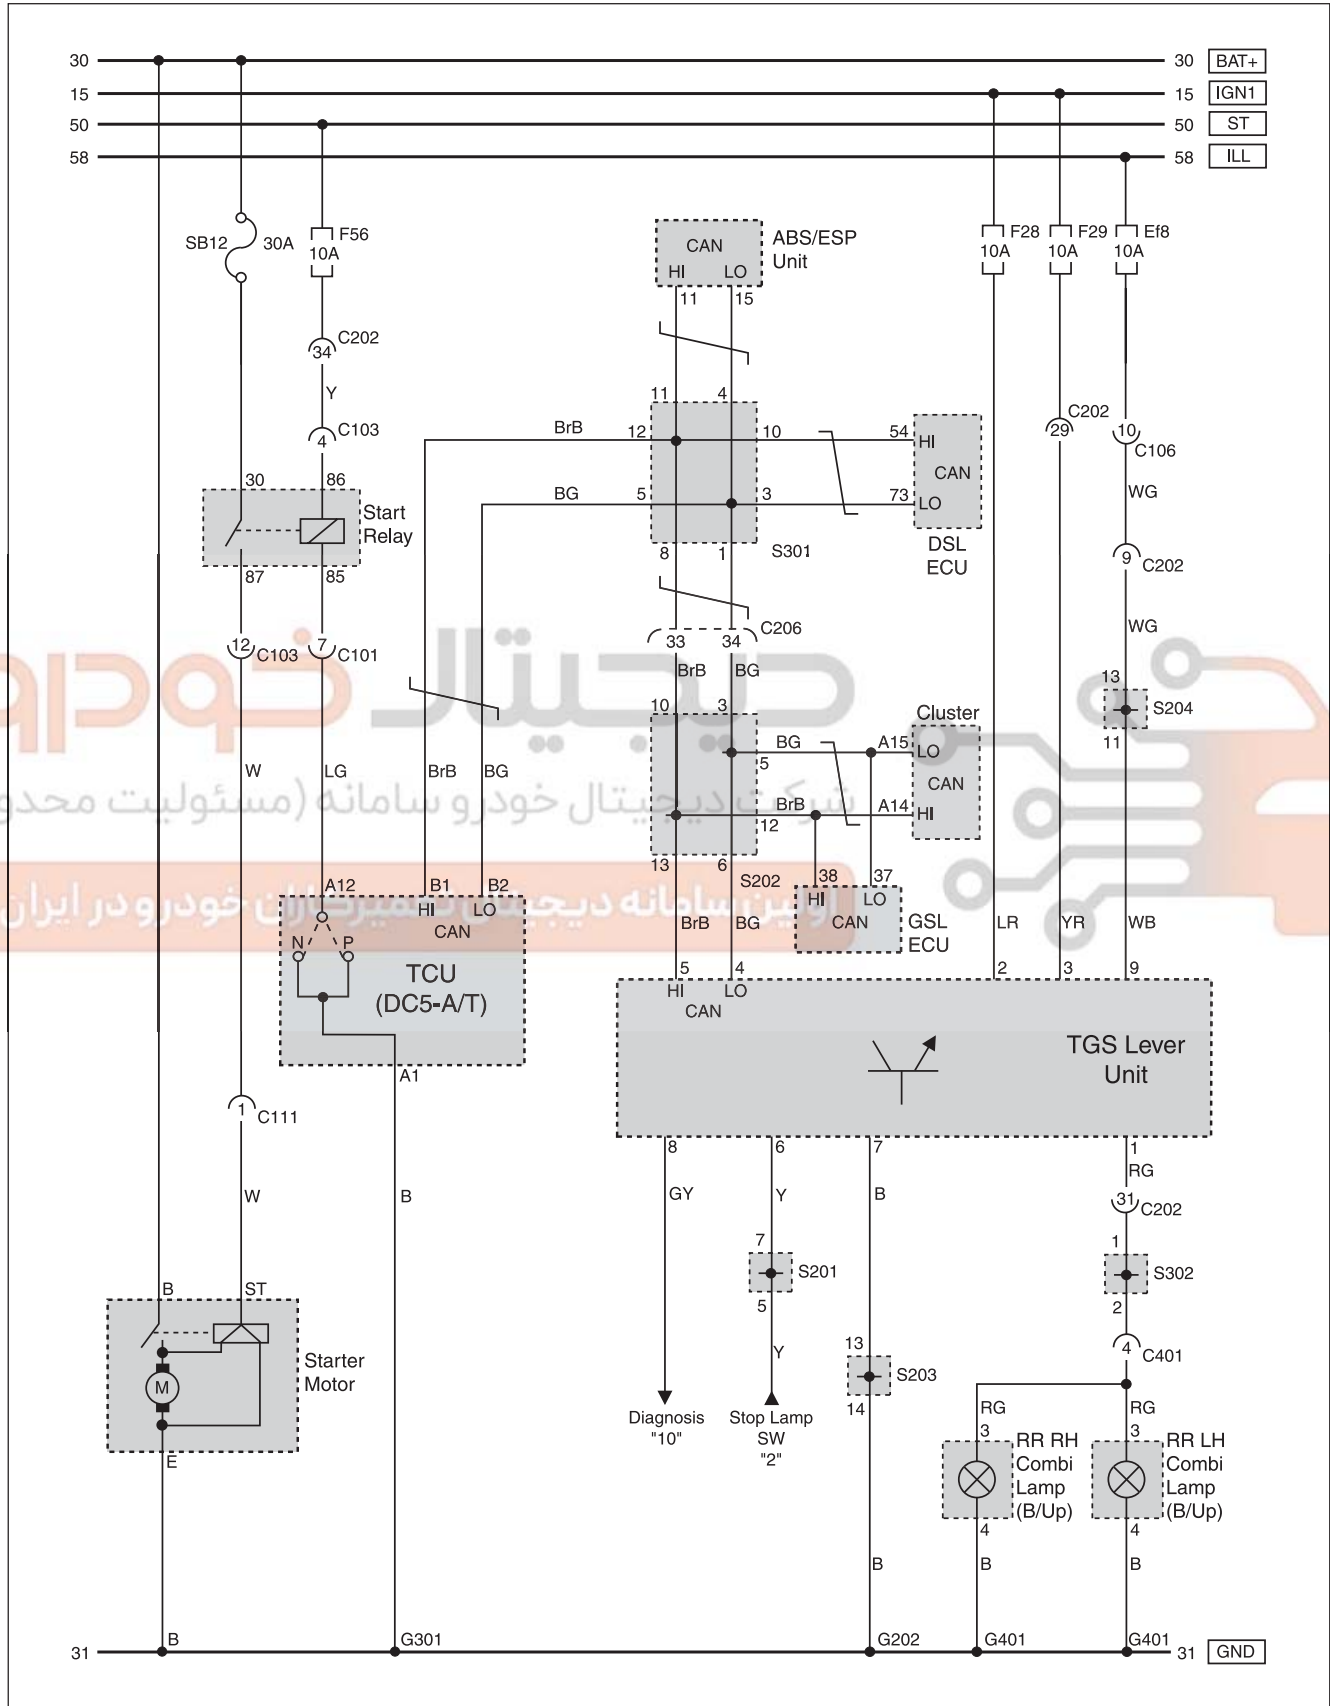

01

02

03


04

05


**A. CONNECTOR INFORMATION**

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C101 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C111 (1Pin, Gray)	W/H Floor - Starter Motor	Under the Preheating Time Relay	Solenoid
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C401 (12Pin, Black)	W/H Floor - W/H T/Gate	Upper the RH T/Gate	
G202	W/H Main	Under the Driver "A" Pillar	
G301	W/H Floor	Under the Driver Seat	
G401	W/H T/Gate	Center the T/Gate	
S201 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	
S202 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	CAN
S203 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	GND
S204 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	ILL
S301 (14Pin, Black)	W/H Main	Beside Driver Seat W/H Protector	CAN
S302 (14Pin, Black)	W/H Main	Beside RR LH Seat W/H Protector	

**B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION**

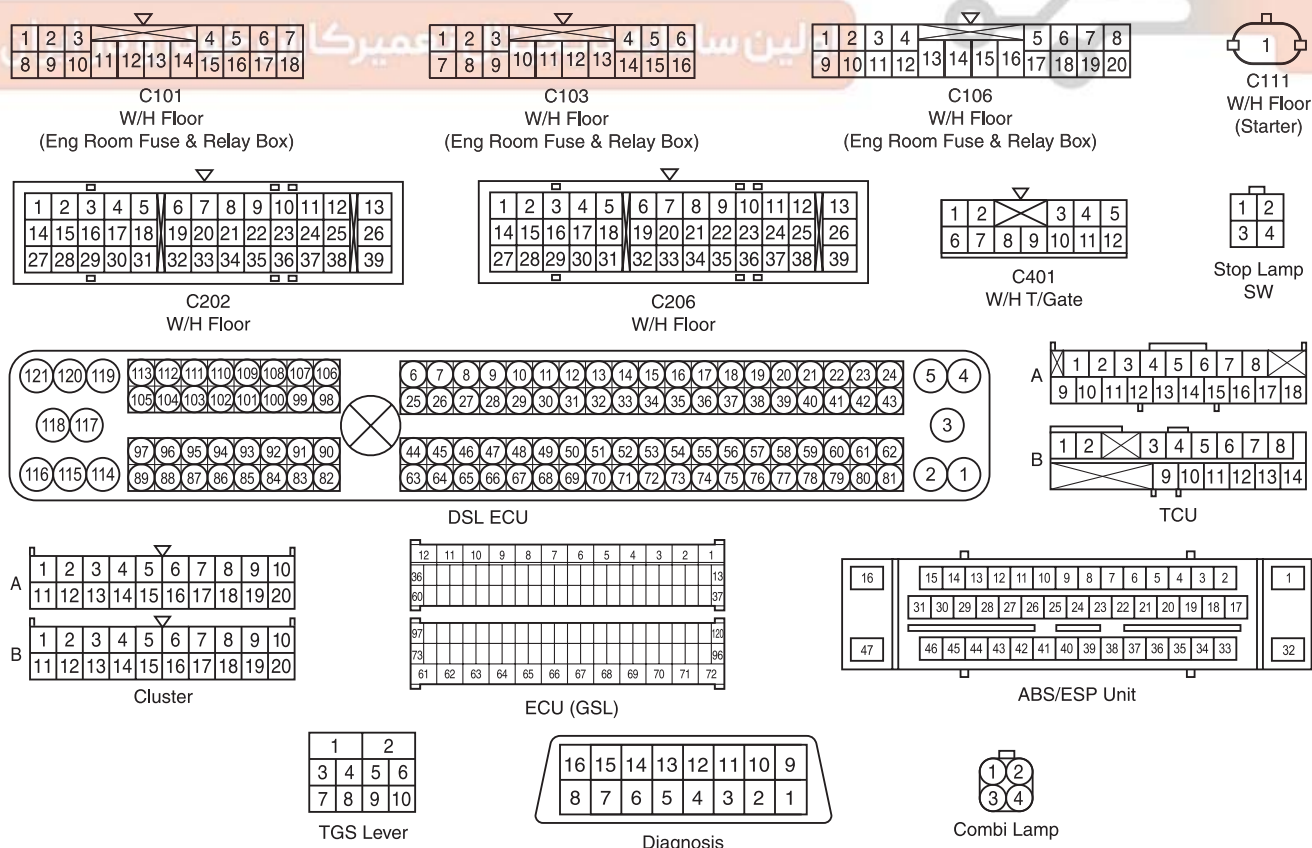


2) SOLENOID, OIL TEMP SENSOR, SPEED SENSOR (N2, N3)

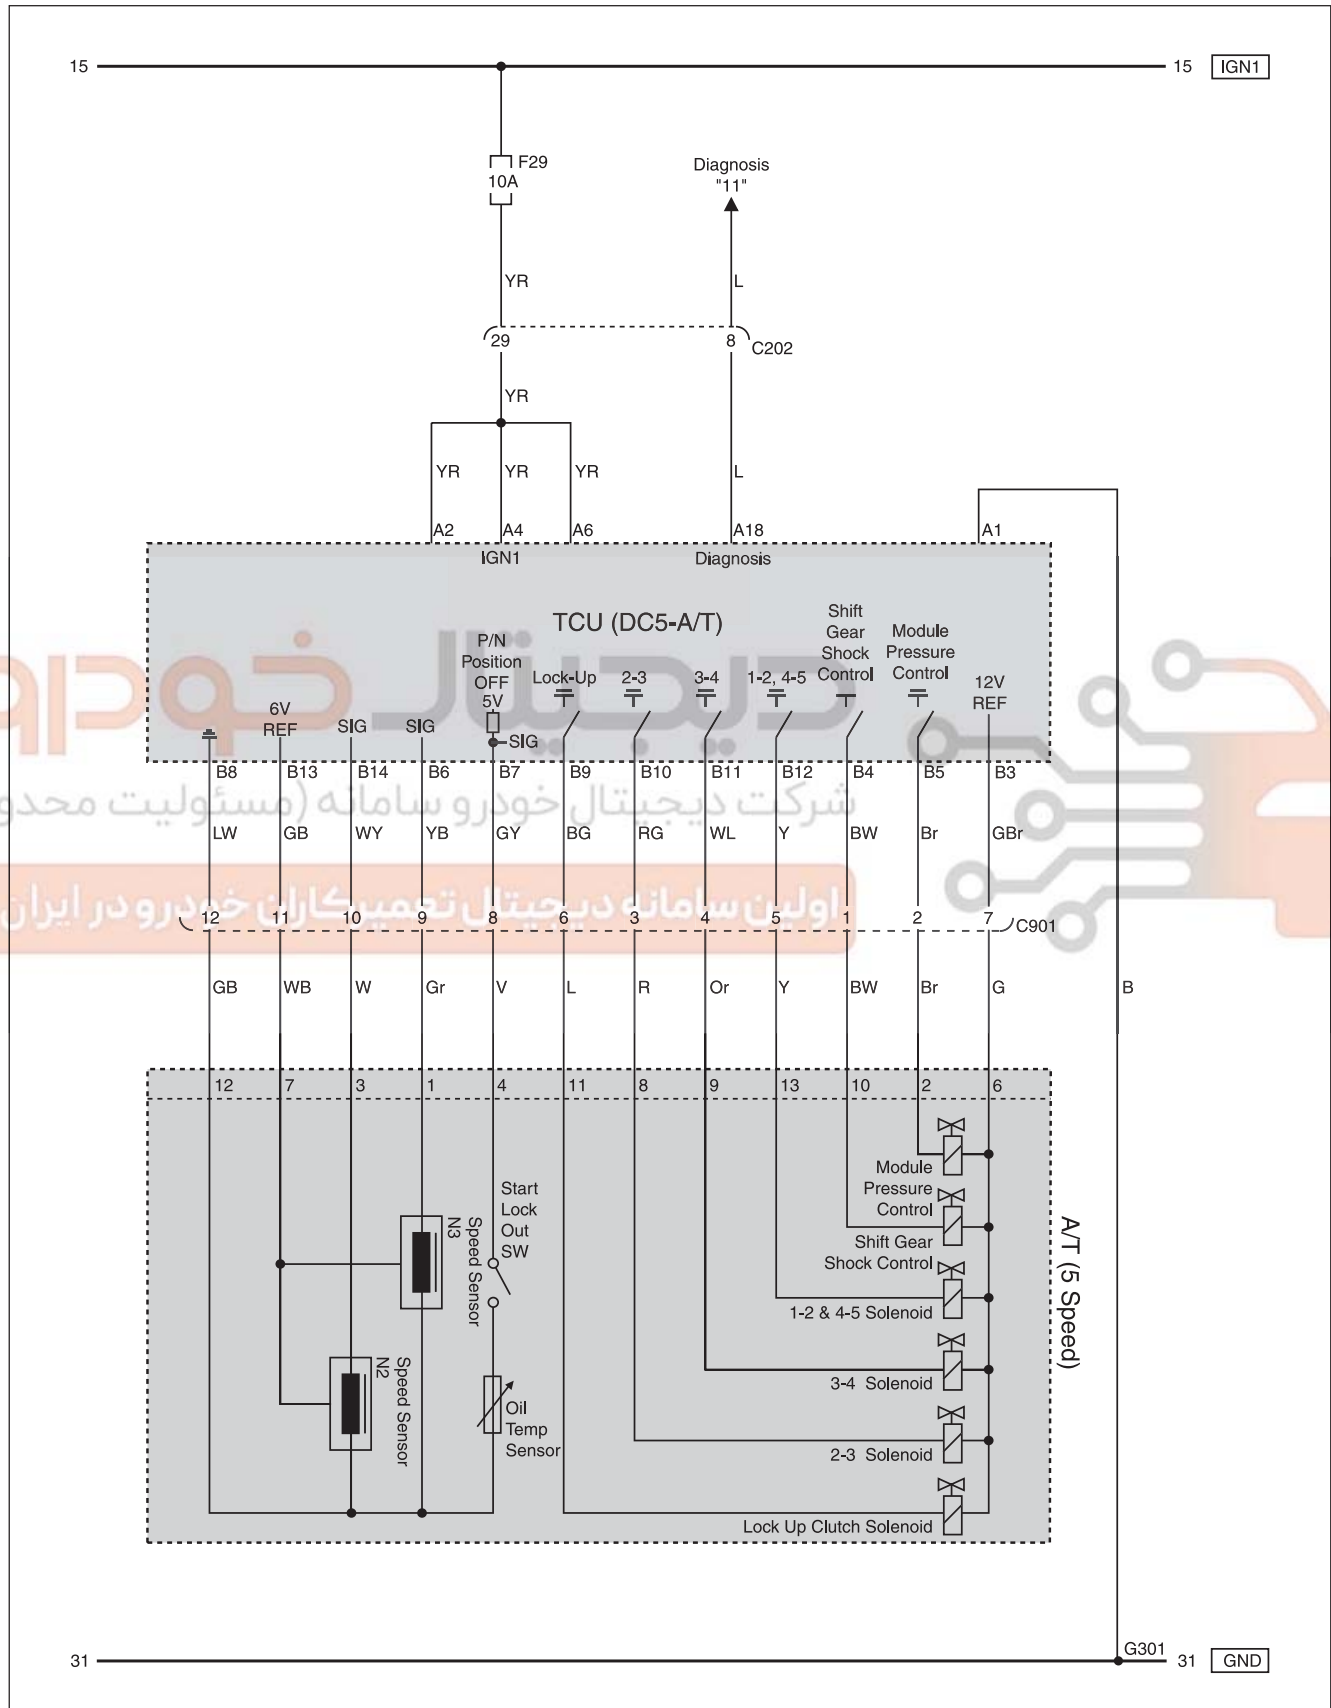


### A. CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C901 (12Pin, Black)	W/H Floor - W/H T/M	Upper the T/M	A/T
G301	W/H Floor	Under the Driver Seat	


### B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

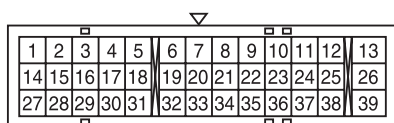


C202  
W/H Floor




C901  
W/H Transmission (A/T)



TCU

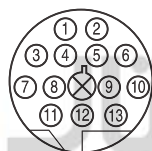

Transmission (5AT)



Diagnosis

خودرو دیجیتال

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

- 01
- 02
- 03
- 04
- 05